


Quick Guide — Powerbank for TD I-Series I-13 / I-16

Capacity: 25600 mAh

Ports

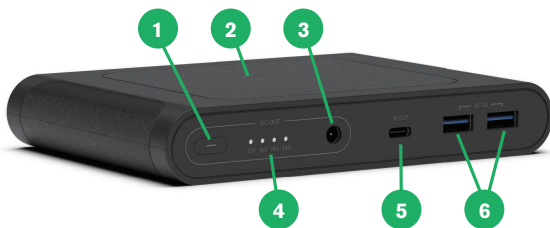

1. Power Button / Voltage Selector
2. Wireless Charging
3. DC IN/OUT
4. Battery & Voltage Indicator
5. USB-C IN/OUT
6. USB-A OUT

Set Correct Power Output



With the included USB-C - 2.5 barrel plug cable the correct power output voltage is set automatically for the Powerbank. **Not using the included cable can damage your device.**

Charging the TD I-Series I-13 / I-16



Follow these steps every time the Powerbank is used.

1. Connect the USB-C side the power cable to the USB-C IN/OUT **5** on the Powerbank.
2. Long press on the Power button **1** to power on the Powerbank.
3. Double press on the Power button **1** to enter DC output mode.
4. Connect the 2.5 mm straight barrel plug side of the power cable to the TD I-Series I-13 / I-16 Power Connector.

Power Down the Powerbank

Manually Power Down

- Long press on the Power button **1** to power off the Powerbank.

Activate Auto Shut Off

- Rapidly press the power button **1** four (4) times to enable/disable auto shut off.

Support for Your Tobii Dynavox Device

Get Help Online

See the product-specific Support page for your Tobii Dynavox device. It contains up-to-date information about issues and tips & tricks related to the product. Find our Support pages online at: www.TobiiDynavox.com/support-training

Contact Your Solution Consultant or Reseller

For questions or problems with your product, contact your Tobii Dynavox solution consultant or authorized reseller for assistance. They are most familiar with your personal setup and can best help you with tips and product training. For contact details, visit www.TobiiDynavox.com/contact

Charging the Powerbank

The Powerbank may be recharged in a variety of ways

With the Included USB-C Charger



1. Select and connect the correct wall plug to the charger.
Included wall plugs are:
 - Type A (North America, Japan) (built in)
 - Type C (Europe, South America, Asia)
 - Type G (U.K.)
 - Type I (Australia)
2. Connect the USB-C side of the included cable to the USB-C IN/OUT **5** on the Powerbank.
3. Connect the USB-C side of the included cable to the charger.
4. Connect the charger to an electrical outlet and charge the Powerbank until the battery is fully charged.

With Other Charger

If the Powerbank is recharged in any other way, make sure that the output voltage of the charger falls within these ranges:

- DC Output 4.5V - 36V, Up to 3A (2W - 45W)
- USB-C Output: 40W



The Powerbank only accepts 5.5 x 2.1 mm barrel plugs.

Support for Your Tobii Dynavox Device

Get Help Online

See the product-specific Support page for your Tobii Dynavox device. It contains up-to-date information about issues and tips & tricks related to the product.
Find our Support pages online at: www.TobiiDynavox.com/support-training

Contact Your Solution Consultant or Reseller

For questions or problems with your product, contact your Tobii Dynavox solution consultant or authorized reseller for assistance. They are most familiar with your personal setup and can best help you with tips and product training. For contact details, visit www.TobiiDynavox.com/contact