

Quick Guide — Powerbank for I-Series I-13 / I-16

Capacity: 25600 mAh

Ports



1. Power Button / Voltage Selector
2. Wireless Charging
3. DC IN/OUT
4. Battery & Voltage Indicator
5. USB-C IN/OUT
6. USB-A OUT

Set Correct Power Output



It is very important that the correct power output voltage is set before connecting the Powerbank to any device. **Using the wrong voltage can damage your device.**

Setting Correct Power Output for I-Series I-13 / I-16

1. Long press on the Power button **1** to power on the Powerbank.
2. Double press on the Power button **1** to enter DC output mode.

3. Single press on the Power button **1** until the **19V** LED is on.



Charging the I-Series I-13 / I-16



Follow these steps every time the Powerbank is used.

1. Connect the 2.1 mm angled barrel plug side of the power cable to the DC IN/OUT **3** on the Powerbank.



2. Long press on the Power button **1** to power on the Powerbank.
3. Double press on the Power button **1** to enter DC output mode.
4. Make sure that power output is set to 19V.
To change power output, see *Setting Correct Power Output for I-Series I-13 / I-16*.
5. Connect the 2.5 mm straight barrel plug side of the power cable to the I-Series I-13 / I-16 Power Connector.

Power Down the Powerbank

Manually Power Down

- Long press on the Power button **1** to power off the Powerbank.

Activate Auto Shut Off

- Rapidly press the power button **1** four (4) times to enable/disable auto shut off.

Charging the Powerbank

The Powerbank may be recharged in a variety of ways

With the Included USB-C Charger

1. Select and connect the correct wall plug to the charger.



Included wall plugs are:

- Type A (North America, Japan) (built in)
- Type C (Europe, South America, Asia)
- Type G (U.K.)

2. Connect the USB-C side of the included cable to the USB-C IN/OUT **5** on the Powerbank.
3. Connect the USB-C side of the included cable to the charger.
4. Connect the charger to an electrical outlet and charge the Powerbank until the battery is fully charged.

With Other Charger

If the Powerbank is recharged in any other way, make sure that the output voltage of the charger falls within these ranges:

- DC Output 4.5V - 36V, Up to 3A (2W - 45W)
- USB-C Output: 40W



The Powerbank only accepts 5.5 x 2.1 mm barrel plugs.