

User's Manual

TD Snap®



User's Manual

Version 1.31

2024-02-27

All rights reserved.

Copyright © Tobii Dynavox AB (publ)

No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form, by any means (electronic, photocopying, recording, or otherwise) without the prior written permission of the publisher.

Copyright protection claimed includes all forms and matters of copyrightable material and information allowed by statutory or judicial law or hereafter granted, including without limitation, material generated from the software programs which are displayed on the screen such as screen displays, menus, etc.

The information contained in this document is proprietary to Tobii Dynavox. Any reproduction in part or whole without prior written authorization by Tobii Dynavox is prohibited.

Products that are referred to in this document may be either trademarks and/or registered trademarks of the respective owners. The publisher and the author make no claim to these trademarks.

While every precaution has been taken in the preparation of this document, the publisher and the author assume no responsibility for errors or omissions, or for damages resulting from the use of information contained in this document or from the use of programs and source code that may accompany it. In no event shall the publisher and the author be liable for any loss of profit or any other commercial damage caused or alleged to have been caused directly or indirectly by this document.

Content subject to change without notice.

Please check Tobii Dynavox website.

www.TobiiDynavox.com for updated versions of this document.

Contact Information:

Tobii Dynavox AB
Löjtnantsgatan 25
115 50 Stockholm
Sweden
+46 8 522 950 20

Tobii Dynavox LLC
2100 Wharton Street, Suite 400
Pittsburgh, PA 15203
USA
+1-800-344-1778

Tobii Dynavox Ltd.
Sheffield Technology Parks
Cooper Buildings
Arundel Street
Sheffield S1 2NS
United Kingdom
+44 (0)114 481 00 11

Tobii Dynavox (Suzhou) Co. Ltd
Unit 11/12, Floor 3, Building B, No.5 Xinghan Street, SIP,
Suzhou
P.R.China 215021
+86 512 69362880



Table of Contents

1	Welcome.....	9
1.1	System Requirements.....	9
1.2	Supported Languages.....	10
1.3	Where to get TD Snap®.....	10
1.3.1	Purchase Speaking Features.....	10
2	Resources and Support.....	11
2.1	Tobii Dynavox Pathways for Core First.....	11
2.2	Web Resources and Support.....	11
2.3	myTobiiDynavox	11
2.4	Learning Hub	11
3	Getting Started.....	12
3.1	Set Up a New User	12
3.2	Restore an Existing User	12
3.3	Choose a Page Set.....	12
3.3.1	Core First	12
3.3.2	Motor Plan Page Set*.....	13
3.3.3	Core First Scanning Page Set*	13
3.3.4	Text Page Set*	13
3.3.5	Aphasia Page Set*	14
3.4	Choose a Grid Size.....	14
4	Navigation	15
4.1	Eye Gaze Desktop Access	15
5	The Top Bar.....	16
5.1	Back	16
5.2	Home	16
5.3	Dashboard	16
5.4	Search.....	16
5.5	Partner Window Indicator.....	17
5.6	Vocabulary Filter	17
5.7	Data Tracking.....	18
5.8	Sync	18
5.9	Edit.....	18
6	The Message Bar	19
6.1	Speak.....	19
6.2	Message Window.....	19
6.2.1	Editing Text in the Message Window	19
6.3	Clear	20
6.4	Delete.....	20
6.5	Undo	20

6.6	Redo	21
6.7	Chat	21
6.8	Copy to Button	21
6.9	Share	21
6.10	Pause Access Method	22
6.11	Toggle Vocabulary Filter (Motor Plan page sets only)	22
7	The Toolbar	23
7.1	Back	23
7.2	Core Words	23
7.3	QuickFires	24
7.4	Topics	24
	7.4.1 Topic Words	24
	7.4.2 Supports	24
7.5	Keyboard	26
7.6	Dashboard	27
7.7	Word Forms	27
7.8	Supported Navigation	27
7.9	Current Boardmaker Activity	27
7.10	abc (German only)	28
8	Vocabulary Filter	29
8.1	Turn the Vocabulary Filter on or off	29
8.2	Edit a Vocab List	29
8.3	Choose a Vocab List	30
8.4	Create a New Vocab List	30
8.5	Import a Vocab List (.txt file)	31
8.6	Share a Vocab List	31
8.7	Rename, Duplicate, or Delete a Vocab List	31
9	Editing	32
9.1	The Editing Panel	32
9.2	Add a Button	32
9.3	Move a Button	33
9.4	Resize a Button	33
9.5	Button Editing Tools	35
	9.5.1 Undo and Redo	35
	9.5.2 Copy and Paste a Button	36
	9.5.3 Select All Buttons	36
	9.5.4 Select Multiple Buttons	36
	9.5.5 Marquee Select	37
	9.5.6 Hide/Show a Button	37
	9.5.7 Sort Buttons Alphabetically	38
	9.5.8 Delete a Button	38
	9.5.9 Expand/Collapse Editing Tool Names	38
9.6	Button Content	39

9.6.1	Button Label	39
9.6.2	Active Content	39
9.6.3	Button Message	41
9.6.4	Button Audio Cue	42
9.6.5	Button Image	43
9.6.6	Edit Symbol	45
9.6.7	Button Type	46
9.7	Button Actions	47
9.7.1	Delete an Action	50
9.7.2	Reorder Button Actions	50
9.7.3	Whiteboard	50
9.7.4	AccessIT	51
9.7.5	Play Boardmaker Activities in TD Snap®	53
9.8	Button Style	56
9.8.1	Button Background	56
9.8.2	Button Border	57
9.8.3	Button Label	57
9.8.4	Button Layout	58
9.8.5	Button Link Visualization	59
9.9	Link to Page/Create New Page	60
9.9.1	Create a Link Button in an Empty Cell	60
9.9.2	Create a Link From an Existing Button	60
9.9.3	Link to a New Page/Create New Page	61
9.9.4	Link to Existing Page	61
9.9.5	Link to a New Copy of an Existing Page	61
9.9.6	Import and Link to Page	61
9.9.7	Visit Page	62
9.10	Button Access Method Settings	63
9.11	Button Language Rules	63
9.12	Suffixes and Prefixes	63
9.13	Edit Supports	64
9.14	Remotes	64
9.14.1	Program a Remote Button	64
9.14.2	Using Remotes	65
9.15	Edit Page	65
9.15.1	Page Name	65
9.15.2	Page Symbol	66
9.15.3	Page Language Rules	68
9.15.4	Page Grid Size	68
9.15.5	Page Background Color	69
9.15.6	Show/Hide Message Bar	69
9.15.7	Delete Page	69
9.15.8	Import/Export Pages	70
9.16	Scan Groups	70
9.16.1	Scan Group Options	72
9.17	Edit the Message Bar	72
9.17.1	Move and Resize Objects in the Message Bar	72
9.17.2	Add Buttons in the Message Bar	72
9.17.3	Remove Buttons in the Message Bar	73
9.18	Edit the Toolbar	74
9.19	Custom Colors	74

10	Page Set Settings	76
10.1	Page Set	76
10.1.1	Choose Page Set	76
10.1.2	Create New Page Set	76
10.1.3	Rename Page Set and Edit Description.....	76
10.1.4	Delete Page Set	77
10.1.5	Set Home Page.....	77
10.1.6	Set Keyboard Page	77
10.2	Grid Size	77
10.3	Page Set Style	78
10.3.1	Symbol Skin Tone and Hair Color	78
10.3.2	Page Set Button Labels Font	79
10.3.3	Page Set Button Labels Font Size	79
10.3.4	Page Set Button Labels Bold	79
10.3.5	Page Set Button Layout	79
10.3.6	Page Set Link Visualization.....	80
10.3.7	Page Set Grid Margin.....	81
10.3.8	Page Set Default Background Colors	81
10.3.9	Page Set Message Window Font.....	81
10.3.10	Page Set Message Window Font Size	82
10.3.11	Page Set Message Window Text Color	82
10.3.12	Page Set Message Window Background Color	82
10.3.13	Page Set Message Window Speech Highlight Color	82
10.3.14	Page Set Message Bar Background Color	82
10.3.15	Navigation Button Style.....	83
10.4	Page Set Preferences.....	83
10.5	Adaptive Buttons	83
10.6	Page Set About.....	84
10.6.1	Page Set Content Developer Settings	84
11	Print	86
12	Google Assistant.....	87
12.1	Connect your Google account	87
12.2	Set up your Google devices	87
12.3	Google Assistant language support	87
12.4	Talk to Google Assistant	88
13	Sharing and Saving	90
13.1	Users.....	90
13.2	Page Sets	90
13.2.1	Import a Page Set	90
13.2.2	Save a Copy of a Page Set.....	91
13.2.3	Share a Copy of a Page Set (Through myTobiiDynavox)	91
13.2.4	Sync Page Set	92
13.3	Page Bundles.....	94
13.3.1	Export Page Bundle	95
13.3.2	Import Page Bundle	96
14	User Settings	97
14.1	Change User	97

14.2	Create a New User	97
14.3	Backup a User	97
14.4	Restore a User	98
14.5	Edit/Rename a User	99
14.6	Delete a User	100
14.7	myTobiiDynavox Account Log In	100
14.8	Voice	100
14.8.1	Speaking Voice	100
14.8.2	Voice Rate	102
14.8.3	Voice Pitch	102
14.8.4	Pronunciation Exceptions	102
14.9	Speech Output Device	104
14.10	Language-specific Voices	104
14.11	Google Account	104
14.12	User Preferences	105
14.12.1	Speech Settings	105
14.12.2	Message Window Settings	105
14.12.3	Prediction Settings	105
14.12.4	Reset Word Prediction	105
14.12.5	Sync Settings	106
14.13	Access Method	106
14.13.1	Set the Access Method	107
14.13.2	Touch Options	107
14.13.3	Touch Enter Options	107
14.13.4	Touch Exit Options	108
14.13.5	Auditory Touch Options	109
14.13.6	Mouse Dwell Options	110
14.13.7	Eye Gaze Options	111
14.13.8	Scanning Options	112
14.14	Data Tracking	115
14.14.1	Track Button Usage	115
14.14.2	Show Top Bar Button	116
14.14.3	Show Button Usage Counts	116
14.14.4	Show Modeling Counts	117
14.14.5	Manage Data	118

15 System Settings..... 119

15.1	Preferences	119
15.1.1	Passcode	119
15.1.2	Screen Setting (Windows only)	120
15.1.3	Edit Mode Language	120
15.2	Device	120
15.2.1	Partner Window Settings	120
15.3	Store	120
15.3.1	Make a Purchase	120
15.3.2	Restore Purchases (Windows only)	121
15.3.3	Deactivate Key (Windows only)	121
15.4	Symbol Sets	121
15.4.1	Search Settings	121
15.4.2	Installed and Downloadable Symbols	121

15.4.3	Reorder Symbol Sets	122
15.5	Help & Tutorials	122
15.5.1	Videos	122
15.5.2	Pathways for Core First.....	122
15.5.3	Quick Tour.....	122
15.5.4	External Help.....	122
15.6	About.....	122
15.6.1	Send Feedback	122
15.6.2	Software Updates.....	123

1 Welcome



Illustration 1: Snap Core First — QuickFires

TD Snap® is the pinnacle in symbol-based communication software for symbol-supported communicators. It is designed to be the easiest to use, most intuitive, and consistently arranged solution available on the market, for both the user and the communication partner. TD Snap® is the ideal solution for individuals with Autism, Cerebral Palsy, Down syndrome, Intellectual Disabilities, and Aphasia. With TD Snap®, we are providing the best symbol-based communication experience available combined with the necessary components for a parent, teacher, or therapist to work together with users to help them become successful communicators.

1.1 System Requirements

Table 1: Windows OS

	Operating System	Architecture	Memory	Touch	Camera
Minimum	Windows 10 version 1803	x64	2 GB	Not required	Not required
Recommended	Windows 10 version 20H2	x64	4 GB	Integrated touch	Integrated camera

Table 2: iPadOS

	Operating System	Device	Memory	Touch	Camera
Minimum	iPadOS 11	iPad Air 2 iPad Mini 4	2 GB	Integrated touch	Not required
Recommended	iPadOS 14	iPad 8th generation	4 GB	Integrated touch	Integrated camera

1.2 Supported Languages

- Arabic (SA)
- Chinese (Simplified)
- Czech (CZ)
- Danish (DK)
- Dutch (NL)
- English (AU)
- English (CA)
- English (UK)
- English (US)
- Finnish (FI)
- French (CA)
- French (FR)
- German (DE)
- German (Switzerland)
- Hebrew (IL)
- Icelandic (IS)
- Italian (IT)
- Japanese (JP)
- Norwegian (NO)
- Portuguese (BR)
- Portuguese (PT)
- Spanish (ES)
- Spanish (Latin America)
- Spanish (US)
- Swedish (SE)
- Turkish (TR)

1.3 Where to get TD Snap®

TD Snap® is available through TobiiDynavox.com for Windows devices and the Apple App Store for iPadOS. Choose TD Snap® AAC to buy all of the features of TD Snap® up front. With TD Snap® Lite, all non-speech features are available for free, including content, creating and editing pages, user creation and backup, restore, and Sync; however, speech functionality is limited. Full speaking functionality is available through an in-app purchase.

Speaking functionality that is *disabled* in the free versions of the app

- Speaking the Message Window
- Any speech or recording output generated by a button action
- Any speech or recording output generated by a behavior support
- Audio cues

Speaking functionality that is *available* in the free versions of the app

- Audio recording (in Edit mode)
- Audio recording preview (in Edit mode)
- Voice preview
- Pronunciation exception preview (in Edit mode)

1.3.1 Purchase Speaking Features

Unlock the speaking features of TD Snap® quickly and securely through a one-time, in-app purchase.

1. Launch TD Snap®.



2. Select the Speech Disabled button in the Top Bar.
3. Select **Buy**.
4. Complete your secure transaction.

2 Resources and Support

Tobii Dynavox offers several free resources to support and supplement your experience with TD Snap®. Don't miss out on these tools that will help you get the most out of your Tobii Dynavox software!

2.1 Tobii Dynavox Pathways for Core First



Pathways for Core First is a free resource that helps you to implement Tobii Dynavox products in the most effective and efficient ways. You'll learn the research-driven techniques that maximize engagement, ease of use, and much more!

Pathways for Core First walks with you as you get started using TD Snap® Core First and encourages growth in engagement, language, and literacy. Pathways for Core First will:

- provide a clear, customized path for getting started.
- encourage growth for individuals of any age or skill level.
- teach you to build skills in a variety of areas, including use of core words, expanding vocabulary, using TD Snap® Core First in daily activities, and more.
- show you how TD Snap® Core First can aid in social skills and situations, such as handling communication breakdowns, navigation and operational skills, and encouraging positive behavior.
- build communication partner skills with Top Tips.
- support ongoing customization of Core First.

The full featured version of Pathways for Core First is available as a [free app](#) for Windows and iPadOS. Pathways for Core First online is available through your web browser. Visit <https://www.tobiidynavox.com/products/pathways-for-core-first?tab=1> for more information.

2.2 Web Resources and Support

If you need support, your first stop should be the Training & Support section of the Tobii Dynavox website.

2.3 myTobiiDynavox

myTobiiDynavox is your personal online storage website and sharing portal. Upload your user backup files to myTobiiDynavox for safekeeping and to share with your entire communication support team.

Go to myTobiiDynavox.com to register for a free account.

2.4 Learning Hub



The Learning Hub is currently English-only.

Visit learn.tobiidynavox.com for documentation, training, and other resources, including:

- answers to common questions
- training videos
- recorded webinars
- online courses

3 Getting Started

When you launch TD Snap® for the first time, you will be asked a few questions to help customize the software to suit your needs. You can change any of these settings later if you want to.

3.1 Set Up a New User

Select **Get Started** and we'll have you set up in less than a minute!

3.2 Restore an Existing User

Use this option if you already have a user backup file that you would like to restore.

Restore a user backup from myTobiiDynavox

1. Select **Restore**.
2. If you are not currently logged in to myTobiiDynavox, enter your email and password then select **Next**.
3. Choose a user backup file from the list, then select **Next**.

Restore a user backup from a local file

1. Select **Restore**.
2. Select **Restore from a local file**.
3. Browse to and select the user backup file, then select **Open**.

3.3 Choose a Page Set

The setup wizard automatically displays the Page Sets that match your device language setting, if it is available in TD Snap®. Select **Language** to see the Page Sets available in other languages.

3.3.1 Core First

Core First is the premier Page Set available on TD Snap® software. It is designed to maximize engagement, literacy, and growth through a variety of communication tools that are used together in a fluid and predictable manner.

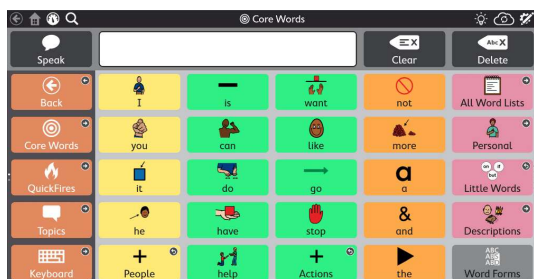


Illustration 2: Core First Page Set

The hallmark feature of Core First is our core word strategy. Research, clinical experience and user testing informed:

- Word selection for maximum use across environments.
- Word placement and user interface.
- Order of word introduction.
- Stable positioning of words as others are systemically added.
- Efficiency of navigation.
- Supports to teach users the meaning of the words and how to combine them to create unique messages.

Additional communication tools included in Core First include:

- QuickFires — fast, predictable messages that can be used alone or in combination.
- Keyboard — enter letters into the Message Window to create or modify words.
- Word Lists — organized by category for easy reference.
- Topics — support interactions in specific environments or around particular topics.

- Supports — help users with behavior and social communication.
- Dashboard — remotes, volume controls, and more at your fingertips!

The Core First Page Set was designed to be the gold standard in augmentative-alternative communication (AAC) content, giving users the most accessible experience in finding content quickly and having maximum ability to create unique and specific messages. Core First allows its users to be engaged in quick, real-time conversation about the topics that are most important to them. It also allows them the freedom to create novel messages that would be difficult to predict ahead of time. By moving throughout the tools provided, communicators can stay actively a part of the situation they are participating in and remain engaged with communication partners.

Literacy development is a critical skill that must be a part of a communication solution. Through use of keyboards, easy links to research-tested programs on the device, and content designed to support communication interactions around reading experiences, Core First will support literacy development for all its users.

Finally, Core First is not intended as a one-size-fits-all or stationary system. Continuity across grid sizes is a primary guiding principle. As communicators grow in abilities and require additional options for language complexity, these new options are added to Core First seamlessly, keeping content in predictable locations.

3.3.2 Motor Plan Page Set*

The TD Snap Motor Plan Page Set emphasizes language development and generative language production (say what you want to say, how you want to say it). Users learn distinct motor patterns associated with each word, leading to automaticity over time. This allows users to focus cognitive effort on language and communication, not software navigation. The Vocabulary Filter tool allows facilitators to target specific words or grow the vocabulary incrementally. All Motor Plan Page Sets offer the same number of words (approximately 2,700).



Illustration 3: Motor Plan 30 Page Set Home page.

The two main principles of the Motor Plan Page Set are consistency and efficiency.

Consistency

- Always start from the home page and automatically return home after selection.
- Words remain in the same place and appear only one time in the Page Set.

Efficiency

- All of the 2,700 words are within 3 hits or less.†
- The most frequently used words are near the home page.

Page Set grid size options vary by language: 30 position (5x6), 40 position (5x7), and 66 position (6x11)

* Not available in all languages.

† Vocabulary selection requires, on average, 2.3 hits on the 30–position Motor Plan Page Set and 2.0 hits on the 66–position Motor Plan Page Set.

3.3.3 Core First Scanning Page Set*

In this Page Set, the Core First content has been redesigned for ease and efficiency with the Scanning access method. The included Learn to Scan pages help users get comfortable using the Scanning access method.

Page Set grid sizes: 3x4, 6x4, 7x6, 9x8

* Not available in all languages.

3.3.4 Text Page Set*

This Page Set is designed for users who do not depend on symbols for communication. The Text Page Set is recommended for communicators with strong reading and composition skills.

Page Set grid sizes: 7x10

* Not available in all languages.

3.3.5 Aphasia Page Set*

The Aphasia Page Set is designed for users with Aphasia. Features include the Whiteboard, Topics pages with grid or a visual scene layout options, Calendar, Photo Album, and Google Assistant and Alexa pages. The symbols used in the Aphasia Page Set are appropriate for adult users.

Page Set grid sizes: 6x5, 4x3, 3x3

* Not available in all languages.

3.4 Choose a Grid Size

Grid size choice will depend on several factors: selection accuracy is paramount, followed by visual or attention limitations. If there are issues with the speed or accuracy of selection, start with a smaller grid size, so that the user has bigger buttons to work with. It is easy to change the grid size in Page Set settings, so don't worry about finding the ideal grid size on your first try. You can increase or decrease the grid size based on the individual's changing language or physical abilities.


 If you would like to display the Message Bar and/or Toolbar, you must choose a grid size with at least 3 rows and 3 columns.

Table 3: Sample grid sizes (not comprehensive)



2x3









3x4



6x6

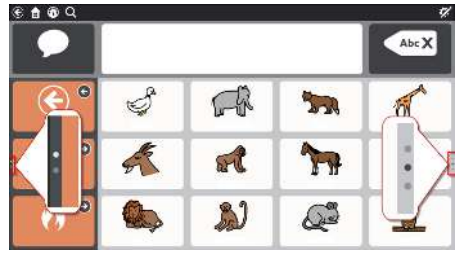4 Navigation

Read on to learn how to move through the content in TD Snap® and find everything you need to communicate.

Scrolling	Depending on your settings and You can scroll up and down in both the toolbar and the page. The page indicators (dots on the left for the toolbar and on the right for the page) show you when there's more content available above or below. access method, you will scroll by swiping the touch screen or by selecting a navigation button. See section 14.13.2 <i>Touch Options</i> , page 107.	
Top Bar	The buttons in the left side of the top bar include a Back button, Home button, Dashboard button, and Search button. See section 5 <i>The Top Bar</i> , page 16.	
Link button	Link buttons take you to another page. See section 9.9 <i>Link to Page/Create New Page</i> , page 60.	
Visit button	Visit buttons take you to another page, let you make one selection on that page, then return you to the previous page automatically. See section 9.9.7 <i>Visit Page</i> , page 62.	
Back button	The back button works like the back button on a web browser. Select the back button once to return to the previous page, or multiple times to continue moving backward through the page history.	
Boardmaker button	Boardmaker buttons link to folders and activities stored on Boardmaker Online. Browse and play the activities right in TD Snap®! See section 9.7.5 <i>Play Boardmaker Activities in TD Snap®</i> , page 53.	

4.1 Eye Gaze Desktop Access

Eye gaze users can navigate between TD Snap® and other apps and features on their device using desktop access. Desktop access provides the accessibility tools necessary to use eye gaze on your device outside of TD Snap®. On Windows devices, the desktop access solution is TD Control. On iPad-based devices, desktop access is available using the iPadOS AssistiveTouch features. Follow the instructions that came with your device to configure your desktop access solution prior to launching desktop access from TD Snap®.

There are two ways to create a button in TD Snap® that you can use to navigate away from TD Snap® and use desktop access:

- Button Active Content type “Desktop Access State”. See section 9.6.2 *Active Content*, page 39.
- Button Action “Toggle Desktop Access”. See section 9.7 *Button Actions*, page 47.

5 The Top Bar

5.1 Back



The Back button returns you to the previously visited page.

5.2 Home



The Home button takes you to your home page (the first page you see when you launch TD Snap®). This Home button is a shortcut that you can use to get back to your home page from anywhere in the software. To change your Home page, see section 10.1.5 *Set Home Page*, page 77.

5.3 Dashboard



Use the Dashboard button to quickly access your Dashboard page. The Dashboard is a page for easy access to frequently-used buttons, especially non-vocabulary buttons such as volume control or remotes.

5.4 Search



 
Search is only accessible with the Touch Access Method, but the highlighted path to the word can be followed using any access method.




The Search tool shows you where to find any word in TD Snap®. Simply enter a search term, then follow the visual cues. The visual cues lead you to the target word, so that you can find the word again later on your own.



1. Select the **Search** tool in the Top Bar.
2. Enter a search term.



3. If applicable, select **Button Search Settings** to refine your search preferences (not available in Motor Plan page sets):
 - **Allow duplicate matches** — enable to show all locations of identical buttons.
 - **Show hidden paths** — enable to show paths that use buttons that are currently hidden.
 - **Accessible search path** — enable to make the highlighted path to the target button accessible using any access method.
4. Select the button that you are searching for in the search results.
5. Select the highlighted button on each page until you arrive at the target button. You may need to scroll to see the next button, so watch for arrows telling you where to go!

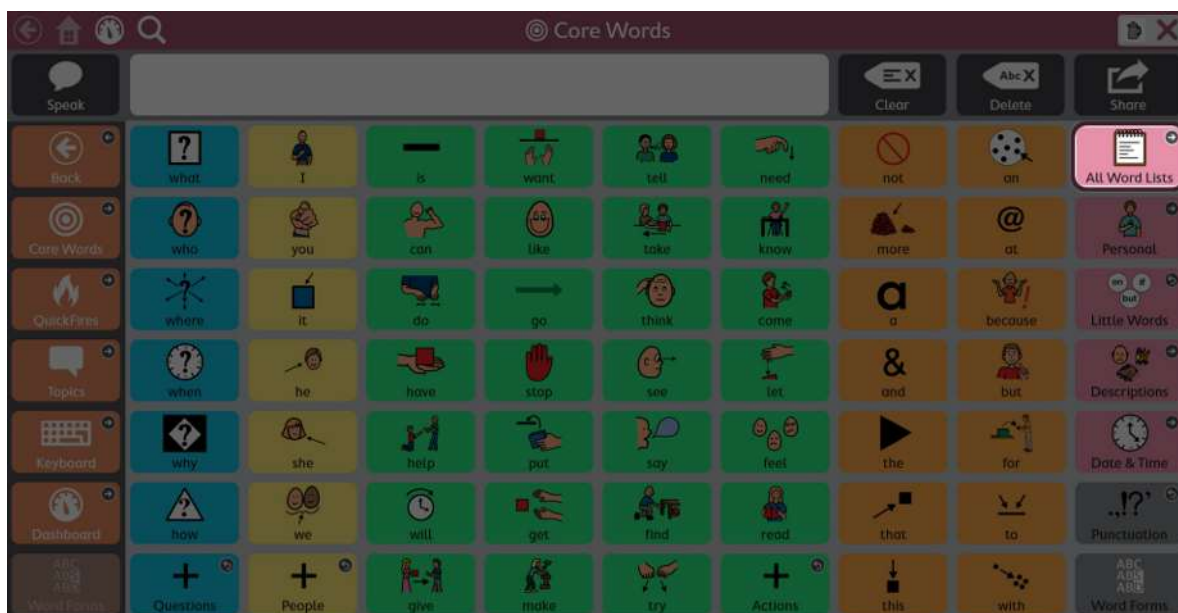

- Pay attention to each highlighted button so that you can remember the path on your own next time.
- You can cancel your search at any point by selecting anywhere outside the highlighted path.

5.5 Partner Window Indicator

- The Partner Window Indicator is only available on Tobii Dynavox I-13, I-16, and TD Pilot devices.

The Partner Window Indicator gives you information about the status of the Partner Window on the back of your device.

Table 4: Partner Window Indicator styles

Mirror Style — displays the text currently in the Partner Window.	
Icon Style — the icon indicates that the Partner Window is on. When the Partner Window is off, the icon is not present.	

To change the Partner Window Indicator Style, see section *15.2.1 Partner Window Settings, page 120*.

5.6 Vocabulary Filter

- The Vocabulary Filter is only available in the Motor Plan Page Sets.



When enabled, the Vocabulary Filter limits the vocabulary buttons in the Page Set to only those specified in the selected Vocab List. Vocabulary not in the Vocab List is hidden. For more information about the Vocabulary Filter, see section *8 Vocabulary Filter, page 29*.

5.7 Data Tracking



Data Tracking is only accessible by touch or direct mouse click.



When enabled, the Data Tracking button gives quick access to the following settings: Modeling mode, Show button usage counts, Show modeling counts, and Manage data. For more information about data tracking, see section *14.14 Data Tracking, page 115*.

5.8 Sync



Sync is only accessible by touch or direct mouse click.



The Sync button is used to start sharing a Page Set for Syncing or to update a Page Set that is already shared for Syncing. For more information about Sync, see section *13.2.4 Sync Page Set, page 92*.

To hide the Sync button in Use Mode, see section *14.12.5 Sync Settings, page 106*.

5.9 Edit



Edit is only accessible by touch or direct mouse click.



Select the Edit button to make changes to your Page Set and access Settings.

For more information, see section *9 Editing, page 32*.

6 The Message Bar

The Message Bar displays the composed message text and the buttons for sharing it with the world!




If you would like to display the Message Bar, you must choose a grid size with at least 3 rows and 3 columns.



To edit the Message Bar, see 9.17 *Edit the Message Bar*, page 72.

6.1 Speak

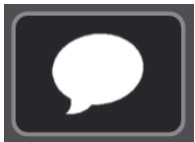

Select this button to speak the current contents of the Message Window.



On Windows devices, the physical keyboard shortcut **Ctrl + Enter** can be used to speak the Message Window.

6.2 Message Window



The Message Window displays the text that you would like to speak or send as a message. It can also display symbols. You can send text to the Message Window from a button, type directly into the Message Window using a keyboard page or physical keyboard, or paste text from the system clipboard.

For Message Window Settings, see section 14.12.2 *Message Window Settings*, page 105.

6.2.1 Editing Text in the Message Window

When entering text into the Message Window, the cursor appears at the end of the text by default. To move the cursor in the Message Window, use buttons programmed with the *Move Cursor* action.

Move the cursor in the Message Window

- Use the *Move Cursor* action to move the cursor in the following ways:
 - Move up or down
 - Move forward or backward by character
 - Move forward or backward by word

- Move forward or backward by sentence
- Move to the beginning or the end of the line
- Move to the beginning or end of the Message Window text
- Move up or down a page of text

To select text, use buttons programmed with the *Select Text* action. Selected Message Window text can be deleted, formatted bold or italic, cut or copied, shared to another app, spoken, and more. See the Message Window section in 9.7 *Button Actions*, page 47 to learn more about these actions.

Select text in the Message Window

- Use the *Select Text* action to select text, move the selection, or extend the selection in the following ways:
 - Move selection up or down
 - Move selection forward or backward by character
 - Move selection forward or backward by word
 - Move selection forward or backward by sentence
 - Extend selection to the beginning or the end of the line
 - Extend selection to the beginning or end of the Message Window text
 - Extend selection up or down a page of text
 - Extend selection up or down
 - Extend selection forward or backward by character
 - Extend selection forward or backward by word
 - Extend selection forward or backward by sentence
 - Select all
 - Cancel selection



The easiest way to start editing text in the Message Window is to use our pre-programmed Message Window Editing pages. These pages are included in several Page Sets. The Message Window Editing Pages are also available on Page Set Central. www.mytobiidynavox.com/pagesetcentral

6.3 Clear



Remove all content from the Message Window.

6.4 Delete




Delete the current word or selected text in the Message Window.

6.5 Undo



Undo the last action in the Message Window.

6.6 Redo

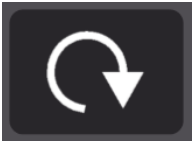

Redo the last undone action in the Message Window.

6.7 Chat



Toggle Chat on and off. When you enable Chat, the current Message Window content is cached and then the Message Window is cleared. While in Chat, you can insert new content into the Message Window and speak. When Chat is turned off, the cached Message Window content is restored so that you can continue where you left off.

6.8 Copy to Button



Copy the text in the Message Window, then add it to a button. This is a user-accessible way to edit buttons on the fly!

6.9 Share



Use this handy, user-accessible feature to send text in the Message Window to an AccessIT 3 device (*9.7.4 AccessIT, page 51*), a button on the current page (*6.8 Copy to Button, page 21*), the system clipboard, or Google Assistant.

Select Other to send Message Window text to an app of your choosing (such as Mail, Facebook, etc).



The Other button menu is only accessible via Touch.

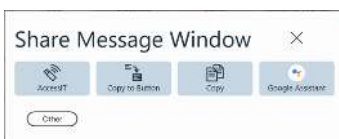


Illustration 4: Share menu

6.10 Pause Access Method



Temporarily stop or start your access method. This button only works with the eye gaze, scanning, and mouse dwell access methods.

6.11 Toggle Vocabulary Filter (Motor Plan page sets only)



Turn the Vocabulary Filter on or off. This button is only available when using a Motor Plan page set.

7 The Toolbar

To learn how to edit the toolbar, see *9.18 Edit the Toolbar*, page 74.



The toolbar options vary depending on your Page Set.

7.1 Back



Illustration 5: Back button — toolbar

The Back button works like the back button on a browser. Use it to return to the previous page.

7.2 Core Words

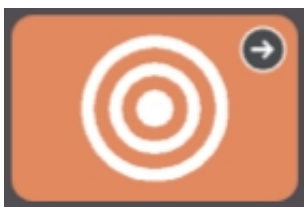


Illustration 6: Core Words button — Core First toolbar

This button opens the Core Words page. The hallmark feature of Core First is our core word strategy, which was developed based on research, clinical experience and user testing. Key features of the Core Words page include:

- Word selection for maximum use across environments.
- Word placement.
- Order of word introduction.
- Stable positioning of words as others are systemically added.
- Efficiency of navigation.
- Supports that teach users the meaning of the words and how to combine them to create unique messages.

7.3 QuickFires



Illustration 7: QuickFires button — toolbar

QuickFires are fast, predictable messages that can be used alone or in combination. They are little words to keep conversation going, gain attention, or comment. Also included are commonly-used messages that focus on Personal Needs, Greetings, Social, Feelings, Questions, and Repairs. QuickFires speak immediately and do not insert text into the Message Window.

7.4 Topics


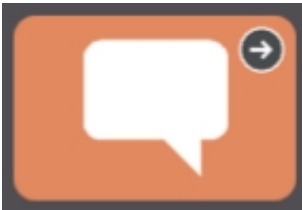


Illustration 8: Topics button — toolbar


Topics support interactions in specific environments or around particular themes. Select a Topic from the Topics Page to see relevant words and phrases. Customize your Page Set by adding your own Topics!

7.4.1 Topic Words

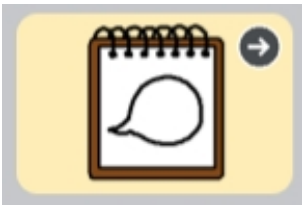

These pages contain commonly-used words in the selected Topic.

7.4.2 Supports

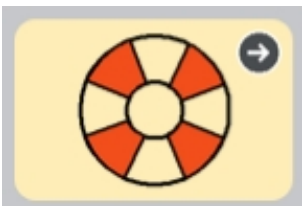

Supports help users with self-regulation and social communication. To learn how to edit supports, see section *9.13 Edit Supports*, page 64.

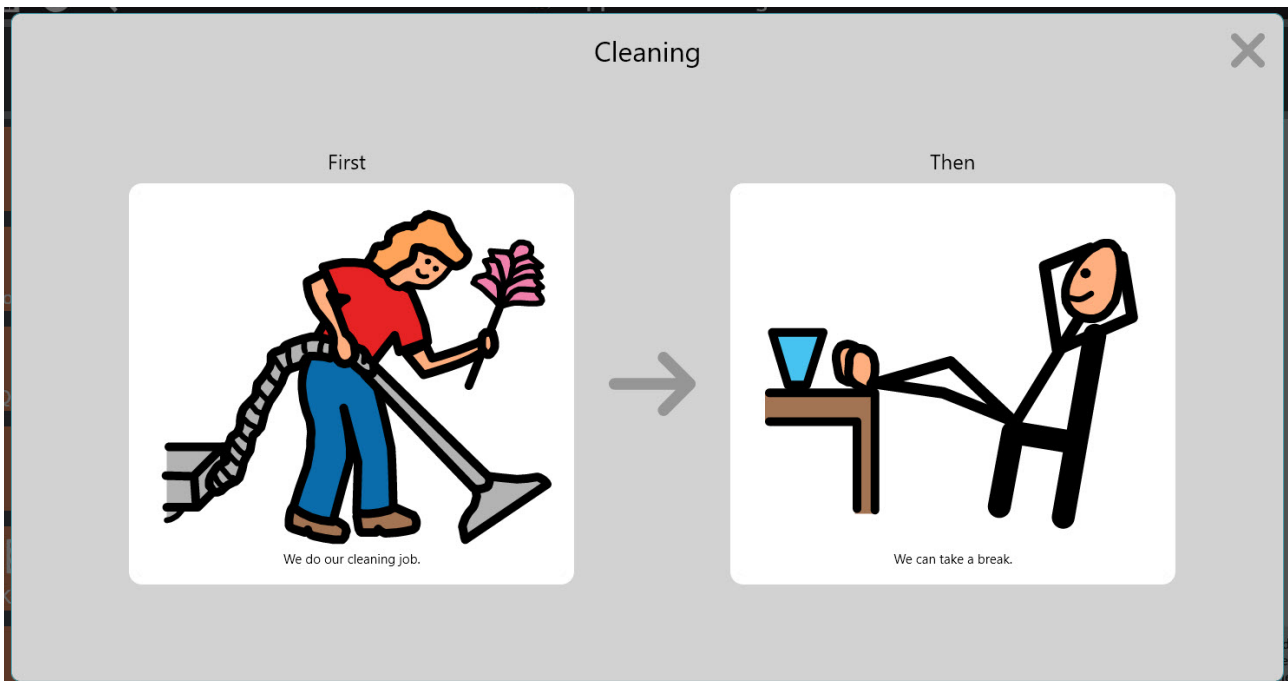


Illustration 9: First, Then support - This support shows a two-step sequence of events, reinforcing cause and effect or logical steps.

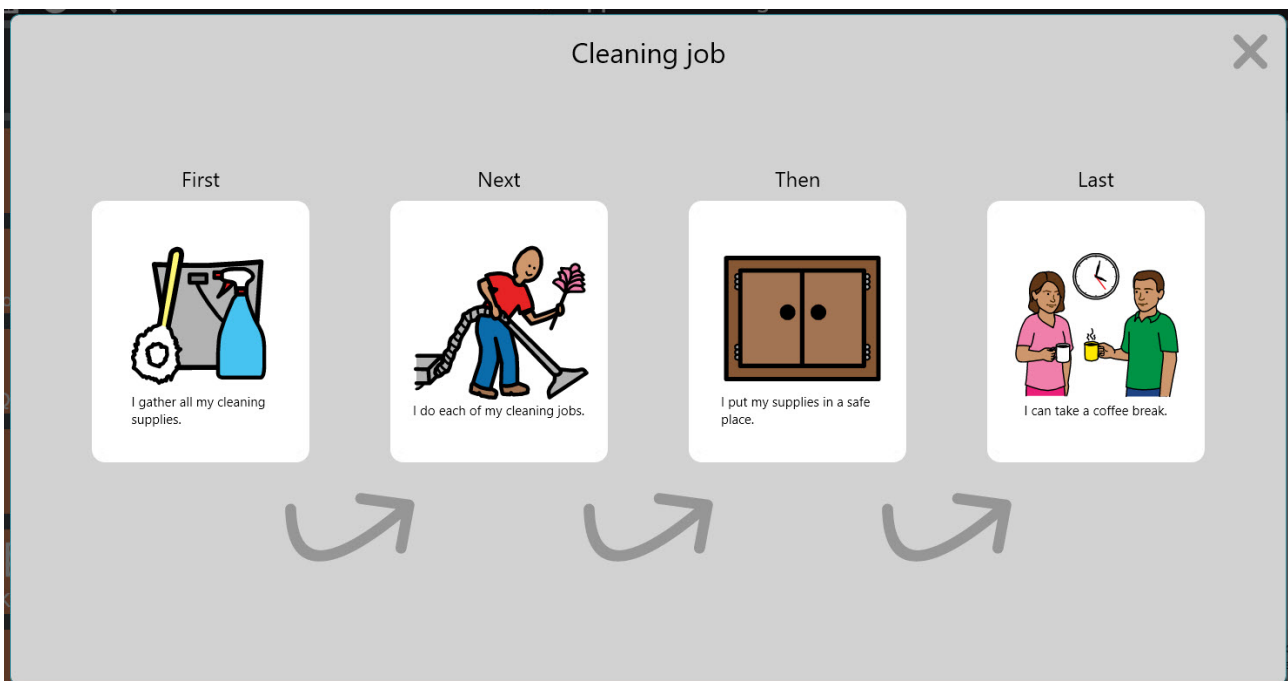


Illustration 10: Mini Schedule support - The mini schedule shows a multi-step sequence of events, reinforcing the concept of cause and effect or a series of logical steps.

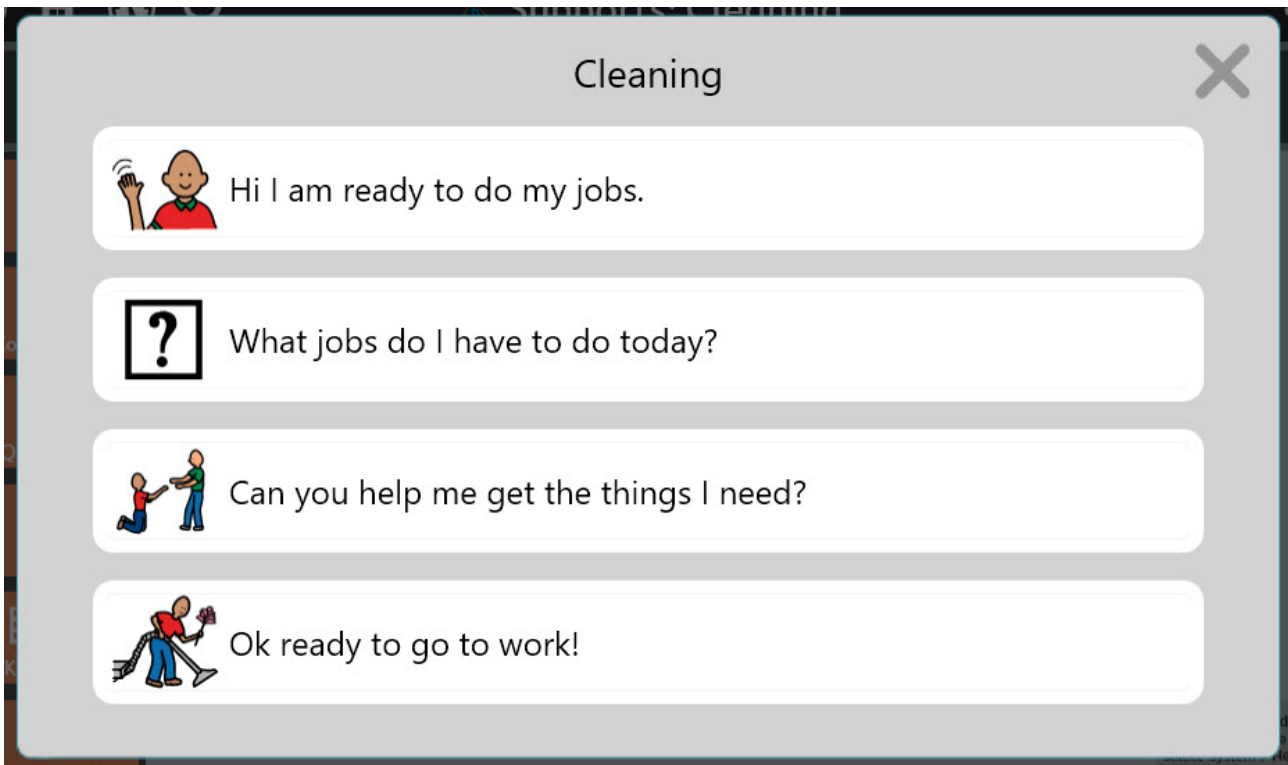



Illustration 11: Script support - A script provides pre-made phrases that are commonly used around the given topic. Scripts are used to create social narratives and help model appropriate conversation.



Illustration 12: Visual Timer Support - The visual timer displays a countdown clock and animated colored bar in the Top Bar. The number display counts down the specified amount of time and the colored bar recedes as the remaining time diminishes. When the Alarm option is enabled, a sound will play when the time is up.

To cancel the visual timer, select the **X** on the right side of the top bar.

 To change the countdown time or alarm preference, edit the button and select the Visual Timer action.

7.5 Keyboard



Illustration 13: Keyboard button — toolbar

The Keyboard page provides single character buttons that behave like the keys on a keyboard. Use this page to compose words that are not currently available in your Page Set or to add punctuation. To set your desired keyboard page, see *10.1.6 Set Keyboard Page, page 77*.

7.6 Dashboard



Illustration 14: Dashboard button — toolbar

The Dashboard is a page for easy access to frequently-used buttons, especially non-vocabulary buttons such as volume control or remotes.

7.7 Word Forms



Illustration 15: Word Forms button — Core First toolbar

The Word Forms page shows different forms (tense, number, etc.) of the last word in the Message Window. Select the desired word form to update the word in the Message Window.

7.8 Supported Navigation



Illustration 16: Supported Navigation — Core First toolbar

The Supported Navigation page is the home page for the early emergent grid sizes (<3x3). The Supported Navigation button in the toolbar makes the page available to all grid sizes.

7.9 Current Boardmaker Activity



Illustration 17: Current Boardmaker Activity — Core First toolbar

Open the Boardmaker activity that is currently in progress, if applicable. If there is no Boardmaker activity in progress, this button is inactive. Button thumbnail and label update to reflect the Boardmaker Activity in progress.


7.10 abc (German only)



This button opens the ABC vocabulary area known from “LiterAACy”. You’ll find more than 3,600 words from core and fringe vocabulary, sorted by the first and second letter.

- The ABC area supports learning and usage of literacy skills.
- Phonetic feedback plays when a letter is selected.
- There are two versions of this feature, one using uppercase letters and one using lowercase letters. The lowercase abc button is the default. To use uppercase letters, make the (uppercase) ABC Button in the toolbar visible and hide the (lowercase) abc button. See section *9.5.6 Hide/Show a Button*, page 37.

8 Vocabulary Filter

 The Vocabulary Filter is only available in the Motor Plan Page Sets.

The Vocabulary Filter is a tool that allows the caregiver to quickly change which words are available to the user. When the Vocabulary Filter is enabled, only the vocabulary in the active Vocab List is available. Vocabulary not on the list is hidden.


You can use the Vocabulary Filter to incrementally grow the user's vocabulary over time: start with a small number of words and add more as the user becomes more confident using AAC and expands their vocabulary.

The Vocabulary Filter can also be used as a temporary mechanism to focus on specific words during therapy sessions. At the start of a therapy session, apply a Vocab List containing only the words for the lesson or activity. When the session is over, disable the Vocabulary Filter or return to their larger Vocab List.

8.1 Turn the Vocabulary Filter on or off



1. Select the **Vocabulary Filter** icon in the Top Bar.
2. Set the Vocabulary Filter toggle in the Top Bar to ON or OFF.

 The name of the active Vocab List is shown in the Top Bar.



Vocabulary Filter disabled



Vocabulary Filter enabled

8.2 Edit a Vocab List

There are several ways to add and remove vocabulary in your Vocab Lists.



1. Select the **Vocabulary Filter** icon in the Top Bar.
2. Modify your Vocab List using any of the methods below:





1.	Select vocabulary buttons on the page to add or remove them from the list.	3.	Select Quick Add to open a text field at the bottom of the page. Type vocabulary, separated by commas, into the text field, then select Add .
2.	Use the Remove... and Add.. buttons to make changes to large groups of vocabulary all at one time.	4.	Select the Edit Vocab List icon to view and edit the Vocab List as an alphabetized, searchable text list.





Buttons shown in full color are on the Vocab List. Buttons shown with a gray overlay are not on the Vocab List.

A link button becomes available when any vocabulary button on the linked page is added to the Vocab List. For example, the Food & Drink link button will be gray (not available) if no food vocabulary is on the Vocab List. If you add "Pizza" to the Vocab List, the Food & Drink button will automatically become available.

8.3 Choose a Vocab List

1. Select the  **Vocabulary Filter** icon in the Top Bar.
2. Select the  **Edit Vocab List** icon.
3. Select **Manage Lists**.
4. Select a Vocab List. The selected list is now active.

8.4 Create a New Vocab List

1. Select the  **Vocabulary Filter** icon in the Top Bar.
2. Select the  **Edit Vocab List** icon.
3. Select **Manage Lists**.
4. Select **New List**.
5. Select **Empty List**.
6. Select **Done**.

8.5 Import a Vocab List (.txt file)



1. Select the **Vocabulary Filter** icon in the Top Bar.



2. Select the **Edit Vocab List** icon.
3. Select **Manage Lists**.
4. Select **New List**.
5. Select **Local Files**.
6. Select **Browse**.
7. Browse to the .txt file, select it, then select **Open**.
8. Enter a name for your new Vocab List, then select **Done**.

8.6 Share a Vocab List



1. Select the **Vocabulary Filter** icon in the Top Bar.



2. Select the **Edit Vocab List** icon.
3. Select **Manage Lists**.



4. Select the **More** button beside the list you wish to share.
5. Select **Share**, then choose a sharing method:
 - **Export to file** — save the Vocab List as a .txt file.
 - **Copy to clipboard** — copy the contents of the Vocab List to the clipboard so that you can paste it elsewhere (e.g., an email, Word document, etc.)
 - **Other** — share the Vocab List directly to another app. App options vary depending on your device configuration.

8.7 Rename, Duplicate, or Delete a Vocab List



1. Select the **Vocabulary Filter** icon in the Top Bar.



2. Select the **Edit Vocab List** icon.
3. Select **Manage Lists**.



4. Select the **More** button beside the list you wish to rename, duplicate, or delete.
5. Select the desired action:
 - **Rename** — enter a new name for the Vocab List.
 - **Duplicate** — create a copy of the Vocab List.
 - **Delete** — delete the Vocab List. The active Vocab List (indicated by a check mark) cannot be deleted.

9 Editing

To make changes to a button, a page, settings, or users, the software must be in Edit Mode. You can enter Edit Mode at



any time by selecting the **Edit** button.



The Edit button and Edit Mode are only accessible using the Touch Access Method.

While in Edit Mode, you can double click most page buttons to see how they behave in Use Mode.

9.1 The Editing Panel

The Editing Panel contains all of the tools and tabs to make changes to your Page Set and software.

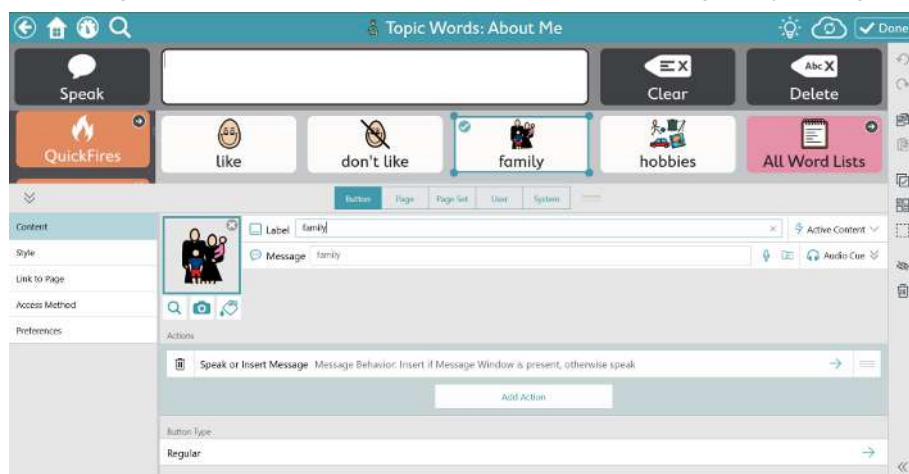


Illustration 18: The Editing Panel (shown expanded)



Select to expand the Editing Panel.



Resize the Editing Panel to a custom size by dragging the

up or down while the panel is expanded.

9.2 Add a Button



1. Select the **Edit** button.



2. Select the in any empty cell on the page to create a new button.

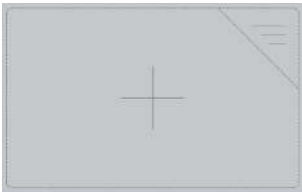


Illustration 19: Empty cell

9.3 Move a Button

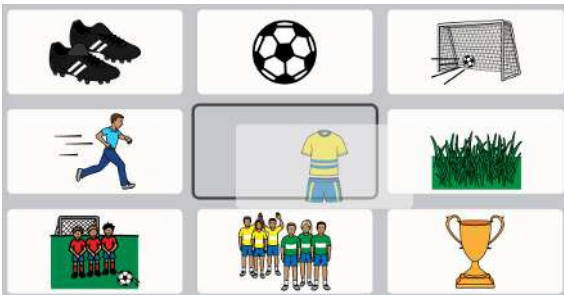


Illustration 20: Swap — When you drag the button directly on top of another button, the two buttons will swap positions on the page. The black outline around the chosen location on the grid indicates a swap.

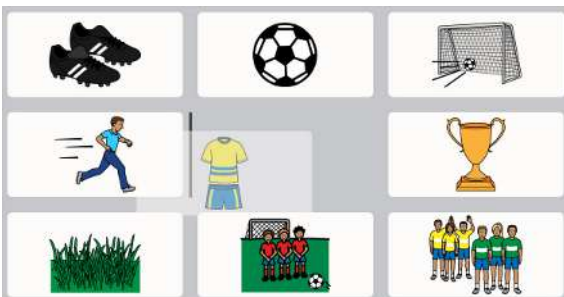


Illustration 21: Insert — When you drag the selected button between two buttons, the buttons to the right and below will move over to create a space for you to place the button. The buttons will maintain left to right, top to bottom sequence on the page. Insert button placement is indicated by a vertical bar.



You can insert a button horizontally (as shown above) or vertically.




When you move a button, it only applies to the current grid size.

9.4 Resize a Button


You can resize a button to occupy as many grid cells within a Page section or Toolbar section as you like.



1. Select the **Edit** button.
2. Select a button on the Page or in the Toolbar. Button resizing is only available when a single button is selected.
3. Select and hold on one of the blue dots in the corners of the selected button, then drag to resize the button.

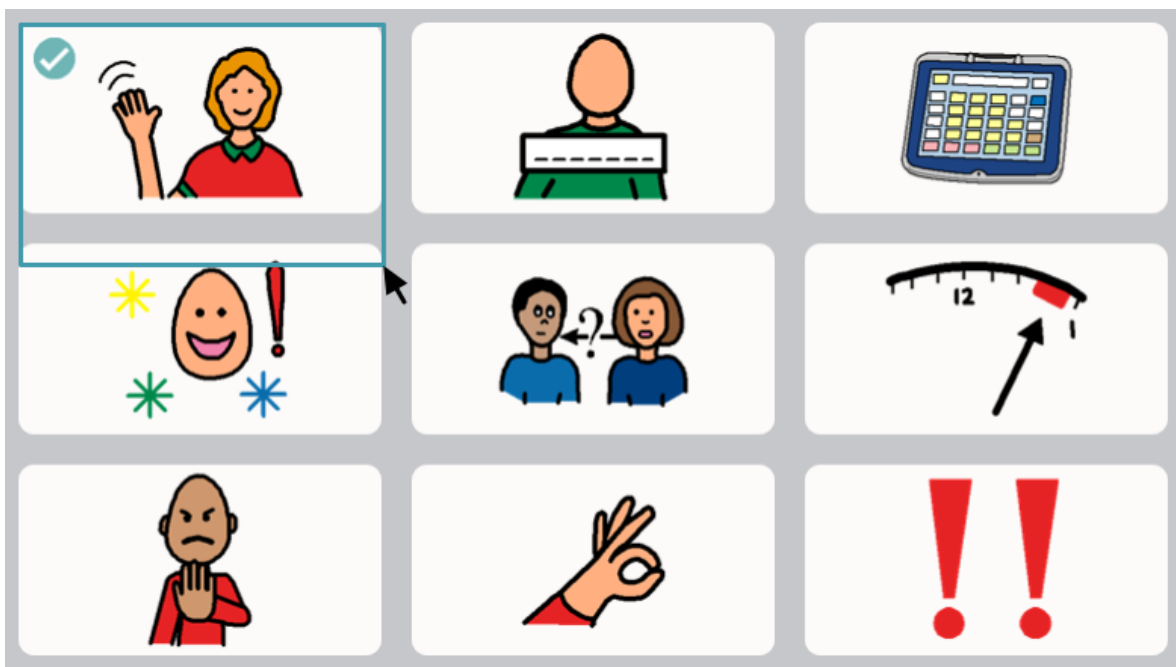

4. Wait for the button to completely fill the cells until it is the desired size, then release the selection. When making a button larger, the button(s) being displaced will move to the nearest empty cell(s).

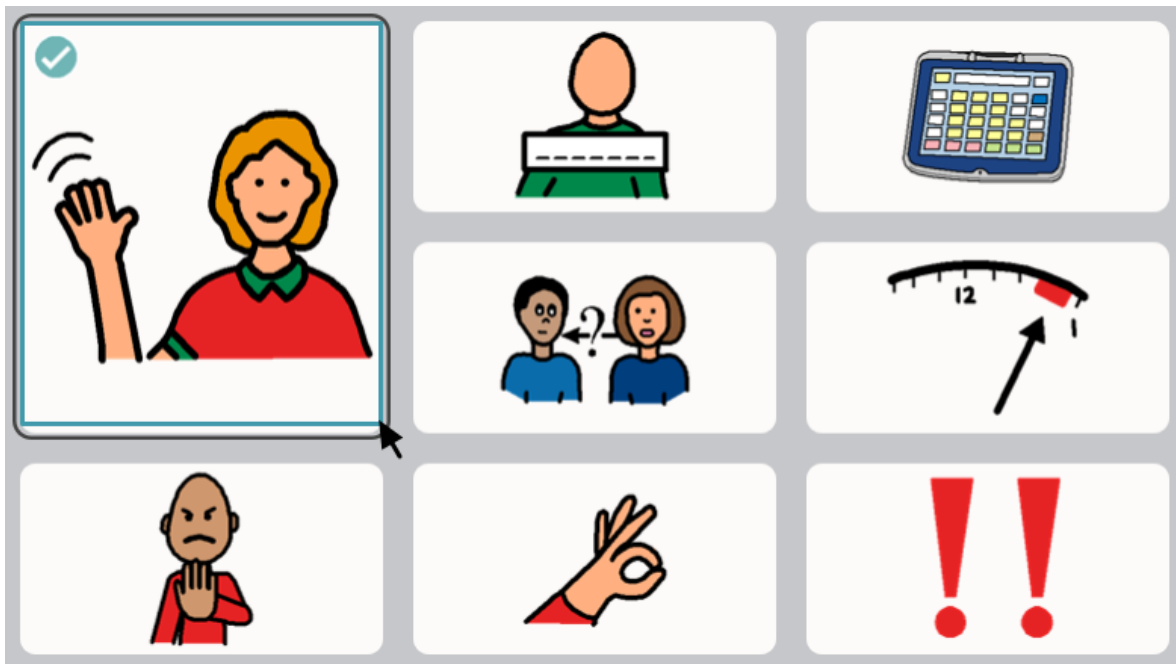

Resized buttons cannot span across Page sections or Toolbar sections.



You cannot resize or move a button into a cell occupied by a navigation (scroll) button.



When you resize a button, it only applies to the current grid size.



9.5 Button Editing Tools

The tools found on the right side of the app window help you to edit the currently selected button(s).



Illustration 22: Button editing tools — (from top to bottom) Undo, Redo, Copy, Paste, Select All, Multiselect, Marquee Select, Hide/Show, Alphabetical Sort, Delete, Expand/Collapse Tool Names

9.5.1 Undo and Redo



The  Undo tool allows you to reverse up to the last 100 edits made to the current user/Page Set. The  Redo tool will reinstate the last change you reversed with the Undo tool.



The Undo stack is reset when loading a different user, a different Page Set, and when the TD Snap® software is closed.

9.5.2 Copy and Paste a Button





1. Select the **Edit** button.
2. Select a button.
3. Select the  **Copy** tool.
Observe that the Paste tool displays the number of buttons you have copied.
4. Select the  **Paste** tool.
The button will paste to the first available empty cell on the page.


9.5.3 Select All Buttons

The Select All tool automatically selects all of the buttons on the current page, so that you can perform bulk editing operations.





1. Select the **Edit** button.
2. Select the **Button** tab.
3. Select the  **Select All** tool.
After using Select All, you can click on individual buttons to deselect them; the other buttons will remain selected.
4. Make the desired changes to the buttons.
5. To deselect all buttons, select the  **Multiselect** tool.

9.5.4 Select Multiple Buttons

The  Multiselect tool allows you to (manually) select multiple buttons at once, so that you can perform bulk editing operations.



1. Select the **Edit** button.
2. Select the **Button** tab.
3. Select the  **Multiselect** tool.
The Multiselect tool is black when disabled and blue when enabled.
4. Select the buttons that you would like to edit simultaneously.
5. Make the desired changes to the buttons.
6. To deselect all buttons, select the  **Multiselect** tool.

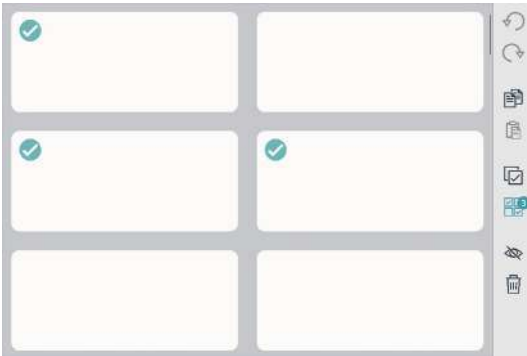



Illustration 23: Multiple selected buttons — Observe that the Multiselect tool shows how many buttons are currently selected.

9.5.5 Marquee Select

The  Marquee Select tool is an easy way to select multiple buttons. Just click and drag to draw a rectangle around one or more buttons that you would like to select.

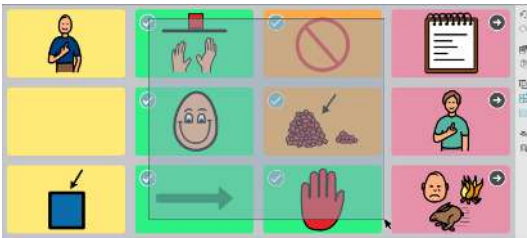




Illustration 24: Using Marquee Select — Buttons do not need to be completely contained within the rectangle to be selected.



1. Select the **Edit** button.
2. Select the **Button** tab.
3. Select the  **Marquee Select** tool.
4. Click (or touch), then drag diagonally to draw a rectangle over all of the buttons that you would like to select.
5. Make the desired changes to the selected buttons.
6. To deselect all buttons, select the  **Multiselect** tool.



Click on single buttons individually to select/deselect them.

Button selections can be made in the Toolbar or on the Page, but not both at the same time.

9.5.6 Hide/Show a Button

Buttons that are hidden are not visible in Use mode. Buttons that are temporarily too advanced or distracting, for example, can be hidden, then shown (unhidden) later.

In Edit mode, hidden buttons are indicated by a gray overlay.

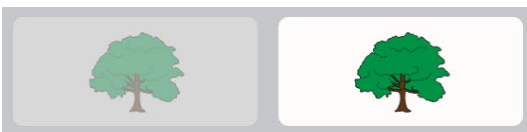



Illustration 25: A hidden button next to a visible button, as viewed in Edit mode.

9.5.6.1 Hide




1. Select the **Edit** button.
2. Select a button that you would like to hide.
3. Select the  **Hide** tool.



The default action for the Hide/Show tool is to set visibility on that button everywhere it appears in the Page Set. To set the visibility for only the selected instance of the button, click and hold (long tap) on the Hide/Show tool and choose **Change Visibility Here**.

9.5.6.2 Show



1. Select the **Edit** button.
2. Select a hidden button.
3. Select the  **Show** tool.






The default action for the Hide/Show tool is to set visibility on that button everywhere it appears in the Page Set. To set the visibility for only the selected instance of the button, click and hold (long tap) on the Hide/Show tool and choose **Change Visibility Here**.

9.5.7 Sort Buttons Alphabetically


Use the Alphabetical Sort button to arrange the selected buttons alphabetically. Buttons are sorted in the following order: alphabetically by label, then predictor buttons, then blank buttons.





1. Select the **Edit** button.
2. Select the **Button** tab.
3. Use the  **Multiselect** or  **Marquee Select** tool to select the buttons that you would like to sort.
4. Select the  **Alphabetical Sort** tool.

9.5.8 Delete a Button



1. Select the **Edit** button.
2. Select a button.
3. Select the  **Delete** tool.

9.5.9 Expand/Collapse Editing Tool Names

Select the  double arrows to display the names of the editing tools. Select the  double arrows again to hide the tool names.

9.6 Button Content



Illustration 26: Button with label, symbol, background color, and medium border.

9.6.1 Button Label

The button Label is the text that appears on a button.



1. Select the **Edit** button.
2. Select a button.
3. Type into the **Label** text field.



Illustration 27: Button Label text field

If you would like to change other label characteristics (font, color, location, size, etc.) see section 9.8.3 *Button Label*, page 57.

9.6.2 Active Content

Active Content allows you to display dynamic information on a button. The button label and symbol change to reflect the current information status.



1. Select the **Edit** button.
2. Select a button.
3. Select **Active Content**. (Only available if the **Button type** is set to **Regular**)
4. Select an Active Content type.



Illustration 28: Active Content

Active Content Type	Description
None	Select None to remove the Active Content on the button.
Access Method	Shows the current access method.
Access Method Pause State	<p>Note: Pause Access Method is only applicable to the following Access Methods: Gaze Interaction, Mouse Dwell. When other Access Methods are in use, buttons using Access Method Pause State Active Content are disabled.</p> <p>If the Pause Access Method action is present on the button (default), the label displays the action of the button: Start Access or Pause Access.</p> <p>If the Pause Access Method action is not present on the button, the label displays the Access Method pause state: Access Running or Access Paused.</p>
Access Time	<p>Note: Access Time does not apply to the touch Access Method.</p> <p>Shows the time setting value for the current Access Method. The actual time setting varies by Access Method e.g. hold time, scan speed, dwell time etc.</p> <p>For more information, see Error-Match-Reuse</p>
AccessIT Connection State	<p>Displays the status of the AccessIT 3 device connection: Disconnected, Disconnecting, Connecting, or Connected.</p> <p>Can be paired with the Connect to AccessIT action to create a button that shows the status and, when selected, connects to an AccessIT device.</p>
Battery Level	Shows the current battery level percentage: 0–100%. The symbol changes to reflect the battery level and indicates when the device is plugged in and charging.
Chat Mode	<p>If the Toggle Chat Mode action is present on the button (default), the label displays the action of the button: Chat or Stop Chat.</p> <p>If the Toggle Chat Mode action is not present on the button, the button label displays the current status of Chat Mode: Chat Mode On or Chat Mode Off.</p>
Current Boardmaker Activity	<p>Shows the title and thumbnail of the Boardmaker activity currently in progress (if any).</p> <p>Can be paired with the Open Current Boardmaker Activity action to create a button that opens the Boardmaker Activity in progress and also displays the title and thumbnail of the activity.</p>
Date	Shows the current day, month, and year. Date formatting is dictated by the locale.
Day of the Week	Displays the current day of the week.
Desktop Access State	<p>If the Toggle Desktop Access action is present on the button (default), the label displays the action of the button: Windows — Start TD Control or Start Region Interaction. iPadOS — Start AssistiveTouch or Start Region Interaction.</p> <p>If the Toggle Desktop Access action is not present on the button, the button label displays the current eye gaze mode: Windows — TD Control On or Region Interaction On. iPadOS — AssistiveTouch On or Region Interaction On.</p>
Feedback Mute State	<p>If the Audio Feedback Toggle Mute action is present on the button (default), the label displays the action of the button: Mute Audio Feedback or Unmute Audio Feedback.</p> <p>If the Audio Feedback Toggle Mute action is not present on the button, the button label displays the current audio feedback mute status: Audio Feedback Muted or Audio Feedback Not Muted.</p>

Active Content Type	Description
Feedback Volume	Displays the audio feedback volume: 0–100%. Can be paired with the Audio Feedback Up action or Audio Feedback Down action to create a button that controls the volume and also displays the feedback volume level.
Partner Window Brightness	Tobii Dynavox I-13 and I-16 devices only. Displays the Partner Window brightness percentage: 0–100%. Can be paired with the Partner Window Brightness Up action or Partner Window Brightness Down action to create a button that controls the Partner Window brightness and also displays the current Partner Window brightness.
Partner Window Power State	Tobii Dynavox I-13 and I-16 devices only. If the Toggle Partner Window Power action is present on the button (default), the label displays the action of the button: Turn Partner Window On or Turn Partner Window Off. If the Toggle Partner Window Power action is not present on the button, the button label displays the current Partner Window power status: Partner Window On or Partner Window Off.
Speaking State	If the Speak Message Window action is present on the button (default), the label displays the action of the button: Speak or Stop. If the Speak Message Window action is not present on the button, the button label displays the current speaking status: Speaking or Not Speaking.
Speech Mute State	If the Speech Toggle Mute action is present on the button (default), the label displays the action of the button: Mute or Unmute. If the Speech Toggle Mute action is not present on the button, the button label displays the current speech mute status: Muted or Not Muted.
Speech Volume	Displays the speech volume: 0–100%. Can be paired with the Speech Volume Up action or Speech Volume Down action to create a button that controls the volume and also displays the speech volume level.
Time	Displays the current system time in hours and minutes. Time format is determined by the operating system region setting. Note: The symbol is a generic clock face that does not change with the time.
Vocabulary Filter State	If the Toggle Vocabulary Filter action is present on the button (default), the label displays the action of the button: Turn Vocabulary Filter On or Turn Vocabulary Filter Off. If the Toggle Vocabulary Filter action is not present on the button, the button label displays the current speaking Vocabulary Filter status: on or off.
Year	Displays the current year.

9.6.3 Button Message

The Button Message can be text, recorded sound, or an audio file selected from your device. When the Button Message is text, the text that is inserted into the Message Window when the button is selected. If the Message Window is not present, the button Message text is spoken. Recorded sound and audio files in the Button Message are played when the button is selected.


9.6.3.1 Change Button Message Text







1. Select the **Edit** button.
2. Select a button.
3. Type into the **Message** text field.



Illustration 29: Button Message text field



 Some Acapela voices support Vocal Smiley sounds, such as laughter, sighing, etc. Enter the Vocal Smiley sound code for your Acapela voice in the Message field to hear it when the button is selected. At the following link find your language and voice to view the Vocal Smiley sounds available for your Acapela voice: [Acapela Vocal Smiley codes](#). TD Snap does not support Acapela Vocal Smiley sounds appended with (S) or Vocal Smiley exclamations.

9.6.3.2 Make a Recording

1. Select  **Record**. The Record Message dialog will open.
2. Select  **Record** to start recording.
3. When you have finished recording, select  **Stop**.
4. To hear your recording, select  **Play**.
5. When you have finished creating your recording, select **Save** to save your recording. Select Cancel to close the Record Message dialog without saving.


9.6.3.3 Add an Audio File to a Button Message

Add an audio file to create a button that plays a song or other audio track.

1. Select the  **Edit** button.
2. Select a button.
3. Select  **Add Audio File**.
4. Browse to and select an audio file on your device. Files must be <50MB.
Supported file types: .aac, .m4a, .mp3, .wav, .wma
5. Select **Done**.

9.6.4 Button Audio Cue

The Audio Cue can be used with the Touch Exit, Mouse Dwell, Gaze Interaction, and Scanning access methods. The Audio Cue is a button preview that is spoken when the button is highlighted but not yet selected.

1. Select the  **Edit** button.
2. Select a button.
3. Select **Audio Cue** to expand the row.

4. Type into the **Audio Cue** field.



Illustration 30: Button Audio Cue text field

If you would like to record a custom Audio Cue, see section 9.6.3.2 *Make a Recording*, page 42.

9.6.5 Button Image


A button can display one symbol or image.



Edit button.

1. Select the
2. Select a button.
3. Add an image to the button:

To search for a symbol in your symbol sets:


- Select the  **Symbol Search** button.
- The Symbol Search dialog will open.
- Type in the text field to refine your search terms.




Optional: To filter your search results, select the


Symbol Filter button, then select the features you would like to see in your symbol search results (Adult, Child, Female, Male).

- Choose the desired symbol.
- Select **Done**.

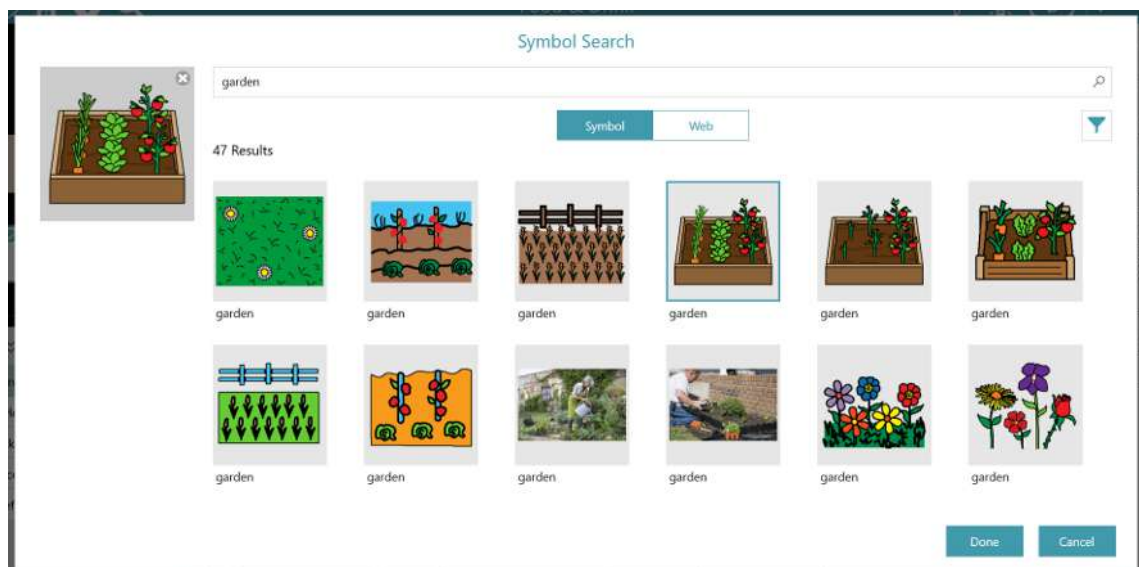

To search the web for an image (internet connection required):

- Select the  **Symbol Search** button.
- The Symbol Search dialog will open.
- Select the **Web** tab, then enter a search term in the text field.
- Choose the desired image.
- Select **Done**.

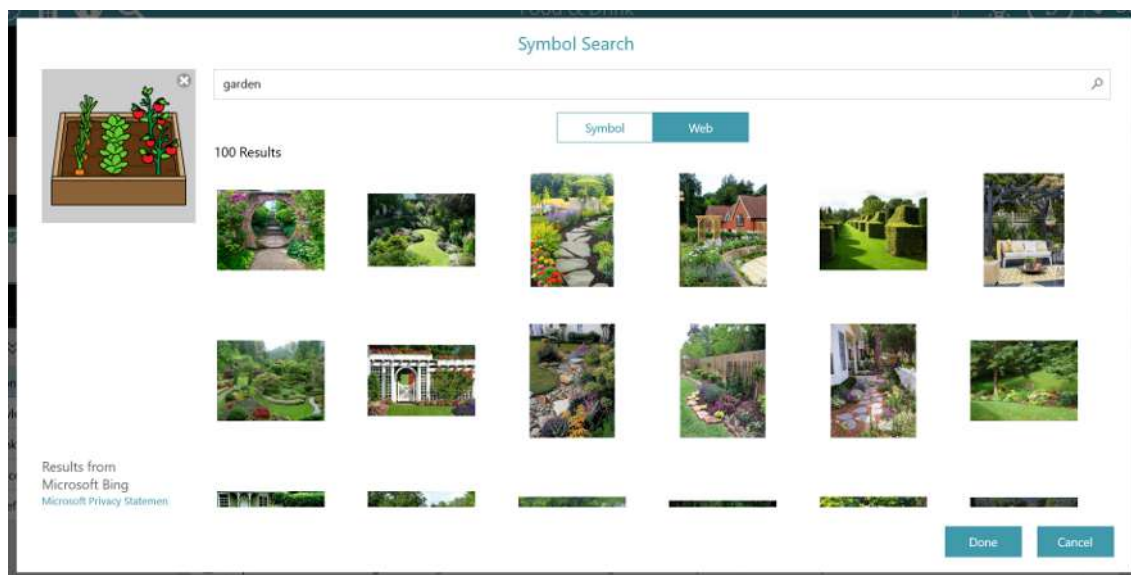

To use the camera to take a photo for the button image:




- Select the **Camera** button.
- Choose **From Camera**.
- Use the camera on your device to capture a photo.

To use an image stored on your local device:



- Select the **Camera** button.
- Choose **From Photo Library**.
- Use the file browser to navigate to the desired image file.

If you do not want to have a symbol on the button, select the **X** in the corner of the current symbol or set the Button Layout to Label Only. See section 9.8.4 *Button Layout*, page 58.

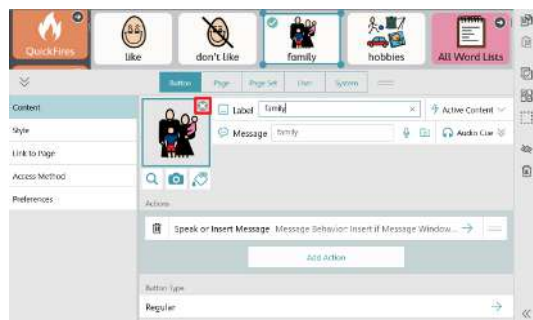

9.6.6 Edit Symbol

You can change any of the colors in individual symbols using the Symbol Editor. Changes to a symbol using the Symbol Editor are only applied to the single instance of that symbol (on the particular button you have selected) and are not applied globally to other instances of that symbol. If you would like to make global changes to the hair color or skin color of all symbols, use the Page Set Style Symbol Color settings. See section *10.3.1 Symbol Skin Tone and Hair Color*, page 78.



1. Select the **Edit** button.
2. Select a button that contains a symbol.



3. Select the **Symbol Editor** button.
4. Edit the symbol colors using the tools described in simpletable.
5. To save your changes and close the Symbol Editor, select **Accept**. To discard your changes and close the Symbol Editor, select **Cancel**.

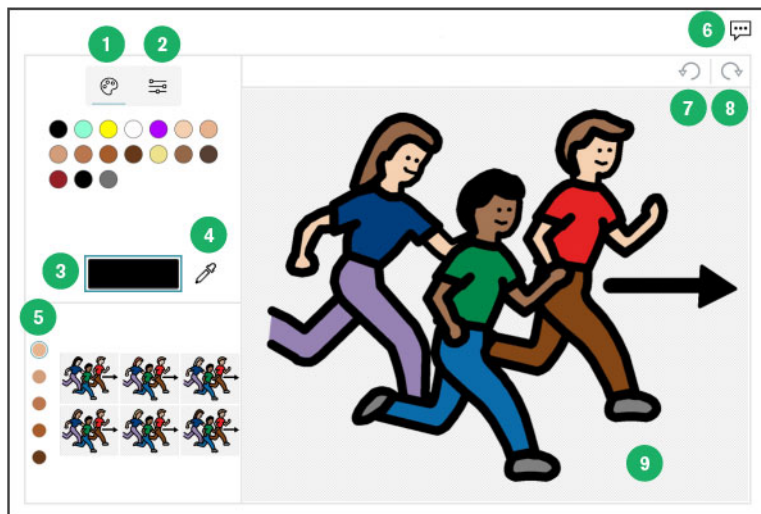


Table 5: Symbol Editor Tools

	Tool Name	Description
1	Color palette	These are pre-defined colors and colors that you have used recently. Select a color to make it the current color (position 3).
2	Custom color	Create your own custom color. Custom colors are added to the color palette (position 1) when you use them.
3	Current color	Select a color in the symbol to replace it with the current color. The current color replaces all instances of the color you select in the symbol, wherever it appears.
4	Color picker	Select the color picker tool then select a color in the symbol to make that color the current color (position 3).
5	Diversity presets	Select a skin tone value on the left to see a variety of hair and skin color combinations within that range applied to the small preview images. Select a preview image to apply those colors to the symbol. If you don't want to keep the change, just select Undo or choose a different preview image.
6	Symbol feedback	Send feedback about this symbol to Tobii Dynavox.
7	Undo	Undo the last action.
8	Redo	Redo the last undone action.
9	Symbol	This is the symbol that you are currently editing.


9.6.7 Button Type

The Button Type setting determines the way a button behaves.



Edit button.

1. Select the **Edit button.**
2. Select a button.
3. Select **Button Type**.
4. Select a Button Type from the list:
 - **Regular** — can contain a symbol, a label, message, and actions. The default action is Speak/Insert Message.
 - **Predictor** — anticipates the next word based on the current composition in the Message Window. Select the button to insert the currently displayed word into the Message Window.
 - **Keyboard** — designed to insert a single character into the Message Window and respond appropriately to modifiers such as the Shift key or Caps Lock. Keyboard buttons can also play a recorded sound or audio file when selected. See sections 9.6.3.2 *Make a Recording*, page 42 and 9.6.3.3 *Add an Audio File to a Button Message*, page 42.
 - **Inflector** — changes the target word to the specified word form i.e. plural, past tense, etc. The target is set to one of two options: the last word in the Message Window or all Grammar buttons.

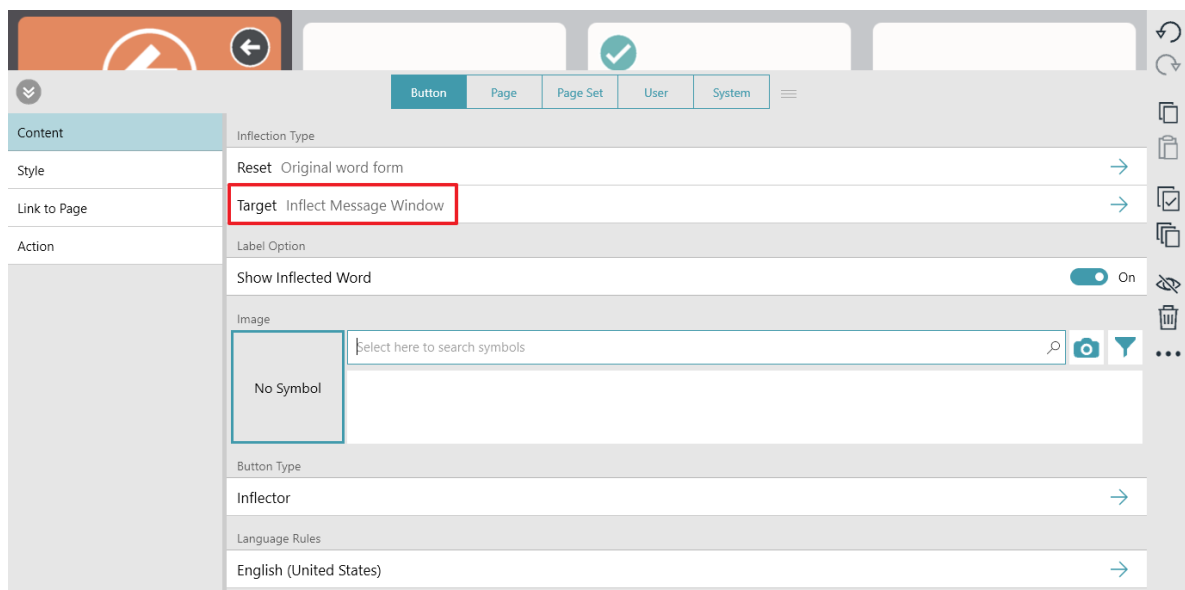


The Button Language Rules setting must be exactly the same for the Inflector button and the Grammar button for inflection to work properly.

- **Grammar** — updates its own label to predict the desired grammatical form of the word based on the current content of the Message Window, a selected Inflector button, or a selected Implied Subject button.
- **Implied Subject** — (Spanish only) when populated with an applicable pronoun, an Implied Subject button can be used to inflect Grammar buttons and also insert its label into the Message Window. When selected once, the Implied Subject button will inflect Grammar buttons to agree with the pronoun on the Implied Subject button. If selected a second time, the label (pronoun) of the Implied Subject button is inserted into the Message Window.

If the Implied Subject button Language Rules are set to Spanish (Mexico, Spain, or United States) one of the following pronouns may be used on the button:

- yo
- tú
- usted
- él
- ella
- nosotros
- nosotras
- vosotros
- vosotras
- ustedes

- ellos
- ellas

 The Button Language Rules setting must be exactly the same on the Implied Subject button and the Grammar button for inflection to work properly.

9.7 Button Actions

Actions allow you to create buttons that do things!


Add or Edit Button Actions





Edit button.

1. Select the **Edit** button.
2. Select a button.
3. Select **Add Action** to choose an action to add to the button. (Only available if the **Button type** is set to **Regular**).



Type in the **Search for Actions** field to find actions related to your search. To see more details about what the actions do, select the  information icon in the section title.



Favorite actions appear first in the actions list for easy access. Select the  outline star to add the action to the favorites list. Select the  solid star to remove the action from the favorites list.

Actions for Speaking	Description
Speak Message Window	Speak the contents of the Message Window.
Speak or Insert Message	Speak or insert a button's message.
Speak Sentence	Speak the last sentence in the Message Window.
Stop All Sound	Stop all speech and sounds that are currently playing or queued in TD Snap®.

Actions for Message Window	Description
Bold	Make the selected Message Window text bold.
Clear Message Window	Clear the contents of the Message Window.
Copy Message Window Text	Copy the current Message Window text to the system clipboard. [‡]
Copy Message Window to Button	Copy the current Message Window text, then add it to the user-selected button label. [‡]
Cut Message Window Text	Cut the current Message Window text to the system clipboard. [‡]
Delete Text	Delete the selected Message Window text, or the current word in the Message Window.
Italic	Make the selected Message Window text italic.
Move Cursor	Move the cursor in the Message Window.
Paste Clipboard into Message Window	Paste the contents of the system clipboard into the Message Window.
Redo Message Window	Redo the last undone action in the Message Window.
Select Text	Select text in the Message Window.
Share Message Window Text	Share the current Message Window text. [‡]
Toggle Chat Mode	Toggle Chat on and off. When Chat is enabled, the current Message Window content is cached, then the Message Window is cleared. While in Chat, you can insert new content into the Message Window and speak. When Chat is turned off, the cached Message Window content is restored so that you can continue where you left off.
Undo Message Window	Undo the last action in the Message Window.

[‡] “Current text” refers to the selected text in the Message Window or, if there is no selection, all of the text in the Message Window.

Actions for Navigation	Description
Cancel Visit	Cancels visit, so that you remain on the current page.
Extend Visit	A button containing this action will not trigger return to the previous page while visit is in effect.
Go Back	Go back to the previous page.
Go Home	Go to the Home page.
Link	Link to another page.
Open Dashboard	Open the Dashboard page.
Open Keyboard	Open the Keyboard page.
Open Whiteboard***	Open the Whiteboard.
Return from Visit	Return to the previous page, cancel Visit.
Switch Page Set	Switch to a different Page Set.

*** See section 9.7.3 *Whiteboard*, page 50

Actions for Boardmaker Activities	Description
Open a Boardmaker Activity or Folder [‡]	Open a Boardmaker activity or folder as a TD Snap® page or as a popup.
Open Boardmaker Activity Library [‡]	Open the Boardmaker Activity Library in TD Snap®. From the Library, the user can browse folders and play activities. The Boardmaker Activity Library is the Snap Activities folder on myBoardmaker.com
Open Current Boardmaker Activity [‡]	Open the Boardmaker activity that is in progress, if applicable.

[‡] This action requires a myBoardmaker.com account and associated Boardmaker content. See section 9.7.5 *Play Boardmaker Activities in TD Snap®, page 53*

Actions for Behavior Support	Description
First Then	Display a First, Then sequence on a popup.
Mini-Schedule	Display a Mini-Schedule on a popup.
Script	Display a Script on a popup.
Visual Timer	Display a timer in the Top Bar that counts down the specified time.

Actions for Access Method	Description
Calibrate Eye Tracker	Start eye tracker calibration.
Change Access Method	If only Access Method 1 is set, the access method changes to the one specified when the button is selected. If both Access Method 1 and Access Method 2 are set, the button toggles between Access Method 1 and Access Method 2. The button label dynamically displays “Change to [access method]” to indicate what will happen when the button is selected.
Pause Access Method	Pauses and resumes the access method. The button label text displays whether the access method is currently paused or active. Applicable access methods: Mouse Dwell, Gaze Interaction.
Set Access Time	Sets the access method time variable to the specified value. The time variable affected is determined by the active access method when the <i>Set Access Time action is activated</i> [†] For example, you might add the action when the access method is set to Touch, but later the user activates it with the Gaze Interaction access method to change the gaze dwell time
Show Eye Tracker Status	Display the track status window for the eye tracker.
Toggle Desktop Access	Toggle between eye gaze desktop access and TD Snap region eye gaze. On Windows devices, TD Control is used for desktop access. On iPad, AssistiveTouch is used for desktop access.

† List of time variables affected by the Set Access Time action.

Actions for Vocabulary Filter	Description
Toggle Vocabulary Filter	Toggle the Vocabulary Filter on or off.

Actions for Volume Control	Description
Audio Feedback Toggle Mute	Mute or unmute the audio feedback volume.
Audio Feedback Volume Down	Decrease the audio feedback volume.
Audio Feedback Volume Up	Increase the audio feedback volume.
Set Volume	Set the system volume to a specific level.
Speech Toggle Mute	Mute or unmute the system volume.
Speech Volume Down	Decrease the system volume.
Speech Volume Up	Increase the system volume.

Actions for Environmental Control	Description
Send Google Assistant Command	Send a text command to Google Assistant. Options: Send button message text or send Message Window text.
Send IR Signal	Send the specified IR signal.

Actions for AccessIT	Description
Connect to AccessIT*	Disconnect the currently attached AccessIT device, then show the AccessIT device picker.
Reset AccessIT*	Stop the specified AccessIT actions: text transmissions, held keyboard keys, clicks, and/or continuous mouse moves.
Send Button Text*	Send a button's label or message to the AccessIT device.
Send Keyboard Key*	Send a keyboard key to the AccessIT device.
Send Message Window Text*	Send the current Message Window text to the AccessIT device. [‡]
Send Mouse Click*	Send mouse clicks to the AccessIT device.
Send Mouse Movement*	Send mouse movement to the AccessIT device.
Send Text*	Send text to the AccessIT device.

* This action requires a Tobii Dynavox AccessIT 3 device. See section 9.7.4 *AccessIT*, page 51

‡ "Current text" refers to the selected text in the Message Window or, if there is no selection, all of the text in the Message Window.

Actions for Launch Other Applications	Description
Launch Application	Launch the specified application.

Actions for Device	Description
Minimize	Minimizes the TD Snap® app.
Restart Device	Restarts the device.
Shut Down Device	Shuts down the device.
Toggle Full Screen Mode	Toggle the Full Screen Mode On or Off for the device.

Actions for Partner Window	Description
Partner Window Brightness Down**	Decreases the brightness of the Partner Window.
Partner Window Brightness Up**	Increases the brightness of the Partner Window.
Toggle Partner Window Power**	Toggles the Partner Window on or off.


** This action requires a Tobii Dynavox I-13, I-16, or TD Pilot device.

Table 6: The Access Time Chart

Access Method	Affected time variable
Gaze Interaction with dwell	Dwell time
Gaze Interaction with switch	Switch hold time
Gaze Interaction with blink	Minimum blink time
Touch Enter/Touch Exit	Hold time
1-switch autoscans	Scan speed
1-Switch Scan	Pause Time
1-Switch Dwell Scan	Pause Time
Inverse Scan	Speed
Mouse Dwell	Dwell Time
Touch	none

9.7.1 Delete an Action



1. Select the **Edit** button.
2. Select a button.
3. Select the  **Delete** button beside an action.
4. Select the red **Delete** button to confirm delete.


9.7.2 Reorder Button Actions



1. Select the **Edit** button.
2. Select a button.



3. Select and hold on the handle of an Action, then drag it to a new position in the list of Actions.

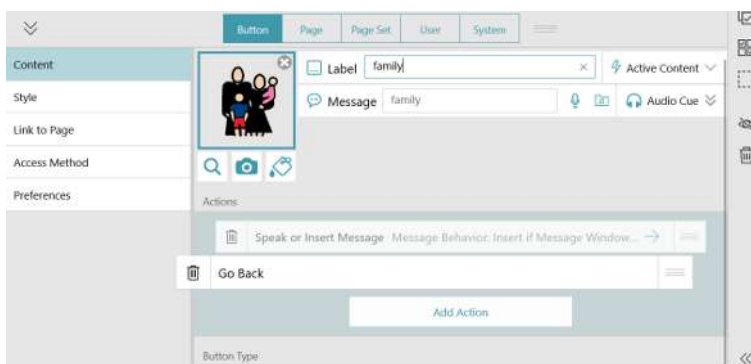


9.7.3 Whiteboard



The Whiteboard is only accessible via the Touch access method.

The Whiteboard is an area where you can display pictures and create freehand drawings. Create as many boards as you like. They will persist until you delete them.

To open the Whiteboard, use the Open Whiteboard action on a button.

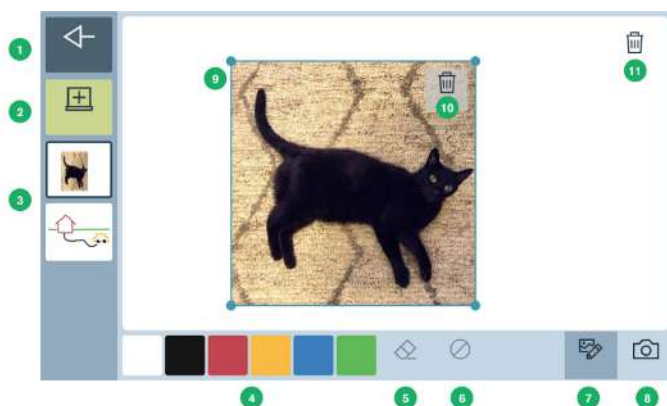

1. **Back** — Return to the Page Set.
2. **New whiteboard** — Create a new whiteboard.
3. **List of existing whiteboards** — Select any whiteboard to view and edit.
4. **Draw palette** — Select any color, then draw freehand on the whiteboard.
5. **Erase tool** — Erase drawings in specific areas.
6. **Clear** — Clear the current whiteboard of all drawings.
7. **Edit images** — Re-position, re-size, or delete images on the whiteboard.
8. **Add image** — Add an image to the whiteboard. Use your built—in camera to take a picture or browse for an image stored on your device.
 Actions for Add image
 - Take a Photo
 - Pick a Photo — Note: The dialog box for this action can only be accessed by Touch.
 - Cancel
9. **Selected image** — Click and drag from the center of the image to re-position. Click and drag on a corner to re-size.
10. **Delete Image** — Delete the selected image.
11. **Delete Whiteboard** — Delete the current whiteboard.

9.7.4 AccessIT

TD Snap® supports the Tobii Dynavox AccessIT 3, a USB Bluetooth device used to send key strokes, mouse movements, and mouse clicks to a standard Windows 10 computer from a device running the TD Snap® app. To learn more about Tobii Dynavox AccessIT 3 visit <http://www.tobiidynavox.com/AccessIT>



AccessIT pages are included in the Core First Page Sets created with TD Snap® version 1.7 and later. AccessIT page bundles are available for import into your existing Page Sets at <https://www.mytobiidynavox.com/PagesetCentral>



Henceforth, this document will refer to the computer receiving commands as “the PC” and the device from which commands will be sent as “the speech device.”



The AccessIT 3 uses Bluetooth® wireless technology. The PC (with connected AccessIT 3) and the speech device must be within approximately 10 meters (32 feet) to establish and maintain Bluetooth pairing while the AccessIT 3 is in use.

Both the speech device and PC must be powered on and unlocked before beginning the steps below.

9.7.4.1 Set up AccessIT

Connect the AccessIT

1. *(On the PC)* Insert the AccessIT 3 into a USB port.



AccessIT 3 requires USB 2.0 or higher.

Enable Bluetooth

Windows Speech Devices

iPadOS (iPad) Speech Devices

1. (On the speech device) Select the **Start** menu, then choose **Settings**.
 2. Select **Devices**.
 3. Select **Bluetooth**.
 4. Move the **Bluetooth** toggle to the ON position.
1. (On the speech device) Go to *Settings > Bluetooth* and enable Bluetooth.

9.7.4.2 AccessIT Actions

The AccessIT actions are designed to be used in combination. Common PC operations such as click and drag will require more than one action. Individual actions are described below.



If an AccessIT device is not connected when a button containing an AccessIT action is selected, the (accessible) AccessIT device picker will open automatically.

Table 7: AccessIT actions

Action	Description
Connect to AccessIT	Disconnect the current AccessIT device (if any) and display the AccessIT device picker. This action is useful for switching from one AccessIT device to a different AccessIT device. It is not necessary to use this action to start all AccessIT sessions, as all of the AccessIT actions automatically open the AccessIT device picker if an AccessIT device is not currently connected.
Reset AccessIT	Stop the specified command types that are currently being executed: keyboard keys, mouse clicks, mouse movements, and/or text.
Send Button Text	Send the button Message to the AccessIT device. If the button does not have a Message, send the button Label.
Send Keyboard Key	Send the specified keyboard key. Options: hold the key down and/or wait for a specified length of time after sending the keyboard key (before performing the next action).
Send Message Window Text	Send the current Message Window text to the AccessIT device. If the Message Window is symbolated, the symbols are not sent.
Send Text	Send the specified text to the AccessIT device.
Send Mouse Click	Send the specified click type (left click, right click, middle click, left double click). Options: wait for a specified length of time after sending the click (before performing the next action) and/or hold the click down.
Send Mouse Movement	Send a mouse movement to the AccessIT device. Mouse movements are made from the current mouse position. Move the blue ball to the position on the circle that matches the direction of the desired mouse movement, then enter a number into the distance field. The unit of distance is the smallest detectable mouse movement, which is between 1/300 and 1/200 inches, depending on the equipment and mouse speed setting on the PC. Options: continuous movement (the mouse will continue to move in the specified direction until another action stops/redirects it or it runs into the edge of the screen) and/or wait for a specified length of time after sending the mouse movement (before performing the next action).



Illustration 31: Mouse movement direction — Position the blue ball on the circle to set the mouse movement direction.



Some AccessIT users may find it helpful to enable the Windows setting “Show location of pointer when I press the CTRL key” on the PC. Use the Send Keyboard Key action to send the CTRL keyboard key from TD Snap® and animated circles will temporarily appear around the mouse pointer on the PC to make it more visible. To access this Windows mouse setting, go to *Settings > Devices > Mouse > Additional Mouse Options > Pointer Options tab*.

9.7.4.3 PC Power Settings and AccessIT

Your PC can only receive AccessIT commands when it is powered on and awake. To ensure uninterrupted PC access, adjust your PC energy settings to never put the computer (hard disk) to sleep when plugged in.

Your PC can still receive AccessIT commands if the screen (display) has gone into a power-saving mode. When an AccessIT command (keyboard key, mouse movement, or mouse click) is sent from TD Snap® it will “wake” the PC screen.

Windows power settings are found in *Settings > System > Power & Sleep*.

9.7.5 Play Boardmaker Activities in TD Snap®

Boardmaker activities are interactive and print materials designed for education, communication, and fun! You can play your Boardmaker activities right in TD Snap®. Use the Open Boardmaker Library action to browse and play activities. Or, use the Open Boardmaker Activity or Folder action to go straight to a specific activity or folder. You can even make activities available for offline use.

i Boardmaker activities played in TD Snap® are designed for a home use context, where the caregiver manages the Tobii Dynavox account used for both TD Snap® and myBoardmaker. The caregiver in this situation will have direct access to the Boardmaker Activities folder where they can place Boardmaker activities for the user.

In a classroom or therapy context, where an educator or therapist is assigning Boardmaker activities, the student should complete their assignments using the Boardmaker 7 Student Center app. The Boardmaker 7 Student Center app is free to install and use and is compatible with most devices that support TD Snap®. The student will most likely require a separate login provided by the educator to access their assignments on the Boardmaker 7 Student Center app.

! Some Boardmaker settings and actions are not supported in TD Snap®. See the Boardmaker 7 User's Manual for the list of unsupported features.

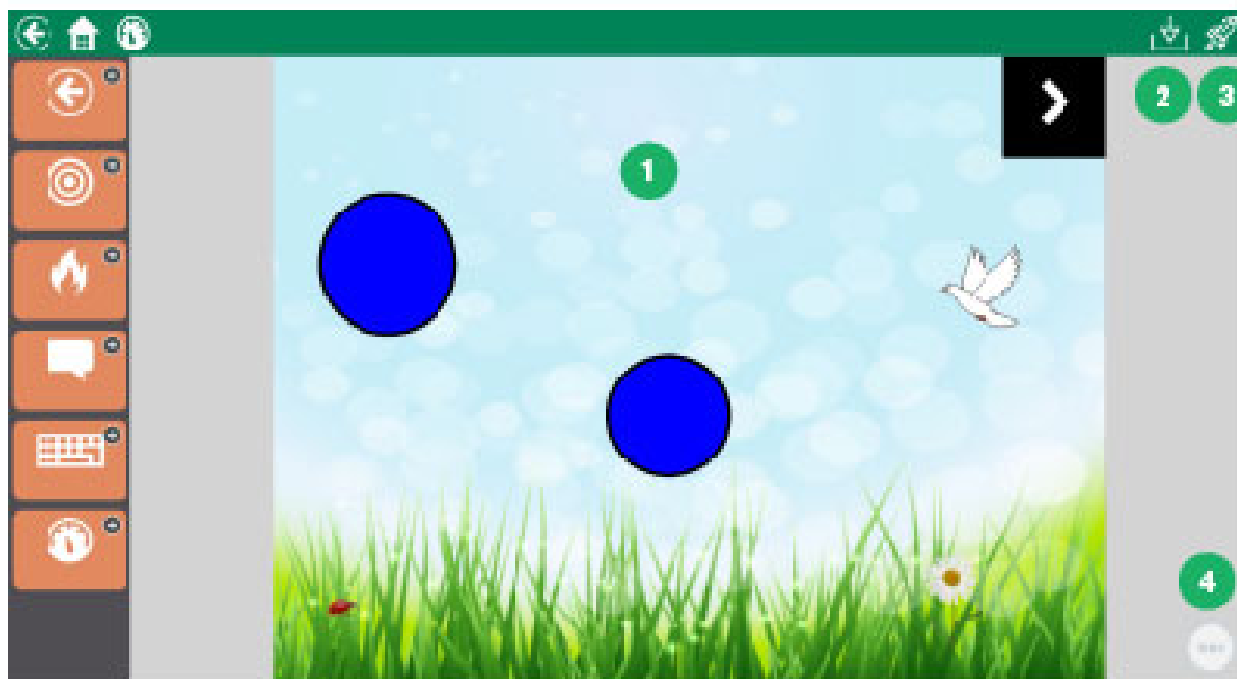



Illustration 32: Boardmaker Activity Playing in TD Snap®

	Item	Description
1	Activity	By default, Boardmaker activities play in the main TD Snap® page area. You can also play Boardmaker activities in a popup window if you enable <i>Play in popup</i> when adding one of the Boardmaker actions to a button.
2	Manage Offline Access	Choose the activities in the current view to download and make available for offline access. The selected activities will be available to play in TD Snap® even without an internet connection.
3	Go to myBoardmaker	Launch myBoardmaker.com in a browser window.

	Item	Description
4	Boardmaker Activity Menu Icon	<p>Open the Boardmaker Activity Menu to access the following buttons:</p>  <ul style="list-style-type: none"> • Back — Leave the activity and return to the previous page. • Library — Go to the Boardmaker library in TD Snap®. • Restart — Start over in the current activity. • Move — Move the Boardmaker Activity Menu Icon to a different corner of the screen.

9.7.5.1 Manage Activities on myBoardmaker

To make Boardmaker activities available in TD Snap®, you must have an account on myBoardmaker.com. Community level accounts are free. Visit myBoardmaker.com and log in using the Tobii Dynavox account credentials that you also use in TD Snap® to create your free myBoardmaker Community account.



The myBoardmaker website is currently in English only. However, Boardmaker activities are available in numerous languages.



Before you begin, make sure that you have an internet connection and you are logged in with your Tobii Dynavox account in TD Snap®.

1. In TD Snap®, select **Dashboard** then select the **Boardmaker Activities** button.
If you do not have the Boardmaker Activities button on your Dashboard, you can create a button with the Open Boardmaker Activity Library action, then select that button in use mode. The first time that the Open Boardmaker Activity Library action is executed, it creates the necessary folder in your Boardmaker Online account.
2. Open a web browser and navigate to myBoardmaker.com
3. Select **Log in**, then enter your Tobii Dynavox account login credentials. If you have not logged in on myBoardmaker.com before, you must sign up for a free Community account or start a subscription.
4. Select **My Boardmaker**.
5. Select the folder **Snap Activities**.
6. Add activities and folders to the Snap Activities folder to make them available through actions in TD Snap®.



The Snap Activities folder is pre-loaded with several free activities to get you started. Some of the more popular activities are the calculator, dice, and spinner activities found in the Math Tools folder.



The Snap Activities folder on myBoardmaker is the Boardmaker Activity Library in TD Snap®.

9.7.5.2 Open Boardmaker Library

Use this action to allow the user to browse all of the Boardmaker activities in the Snap Activities folder on myBoardmaker right in TD Snap®. From the Boardmaker Activity Library, they can select any activity to play.



All activities in the Library are available to play if there is an active internet connection on the device. When offline, only activities that have been downloaded or previously cached will play. See section 9.7.5.5 *Offline Boardmaker Activity Access*, page 55.

1. Navigate to the page where you want to have a button linking to your Boardmaker Activity Library.



2. Select the **Edit** button.
3. Select the button you would like to use to open the Boardmaker Activity Library.
4. Select **Add Action**.
5. Scroll down to the Boardmaker Activities section and select **Open Boardmaker Activity Library**.

9.7.5.3 Open Boardmaker Activity

Play a specific activity in the Boardmaker Library.



All activities in the Library are available to play if there is an active internet connection on the device. When offline, only activities that have been downloaded or previously cached will play. See section 9.7.5.5 *Offline Boardmaker Activity Access*, page 55.

1. Navigate to the page where you want to have a button linking to the Boardmaker activity.



2. Select the **Edit** button.
3. Select the button you would like to use to open the Boardmaker activity.
4. Select **Add Action**.
5. Scroll down to Boardmaker Activities and select **Open a Boardmaker Activity or Folder**. The Snap Activities dialog opens.
6. Navigate through the folders to the activity you would like to play. Select the activity.
7. If you would like the activity to open in a popup, enable **Open in a popup**. Otherwise, the activity will open as a page in TD Snap®.
Activities opened in a popup do not allow the user to navigate away and then return to it to pick up where they left off. Popups are best used for brief activities that are easy to restart from the beginning.
8. Select **Select Activity**. To exit without saving, select Cancel.



The button label automatically updates with the name of the linked activity.

9.7.5.4 Open Boardmaker Folder

Open a specific folder in your Boardmaker Library. From the folder, the user can select activities to play in TD Snap®.



You can assign Boardmaker activities to the user by creating a folder for them in your Snap Activities folder on myBoardmaker.com, then linking to that folder in their TD Snap® Page Set. Move activities into the folder as needed and the user will see the activities in TD Snap® (user must have an internet connection and be signed in to the myTobiiDynavox account in TD Snap® to get the updated activities).



All activities in the Library are available to play if there is an active internet connection on the device. When offline, only activities that have been downloaded or previously cached will play. See section 9.7.5.5 *Offline Boardmaker Activity Access*, page 55.

1. Navigate to the page where you want to have a button linking to the Boardmaker activity.



2. Select the **Edit** button.
3. Select the button you would like to use to open the Boardmaker folder.
4. Select **Add Action**.
5. Scroll down to Boardmaker Activities and select **Open a Boardmaker Activity or Folder**. The Snap Activities dialog opens.
6. Navigate to the folder you would like to link to, so that you are within the desired folder.
7. Select **Select Folder**. To exit without saving, select Cancel.



The button label automatically updates with the name of the linked folder.



9.7.5.5 Offline Boardmaker Activity Access


You can download Boardmaker activities to your device so that they are available for playback when the device is offline.



Offline activities are downloaded per device. If the Page Set is synced or shared to a different device, the download process must be repeated on that device to make the activities available offline.


1. Open your Boardmaker Library in TD Snap®. See section 9.7.5.2 *Open Boardmaker Library*, page 54.
2. Open a folder to view the list of activities.

3. Select  **Manage Offline Access**.
4. Check the box beside the activities that you would like to download to the device for offline playback.
Activities that display the  icon are successfully downloaded and available on this device when offline.
5. Select the **X** to close the dialog when you have finished downloading activities in this folder.
6. Repeat the steps above for any folder containing activities that you would like to make available offline.

 When an activity not marked for offline use is played while there is an internet connection, it is downloaded as a temporary file. For that reason, some activities that have been played before but not explicitly marked for offline use may still be available for play while offline. The offline availability of these files is not guaranteed.

9.7.5.6 Open Boardmaker Activity in Progress


If the user is playing a Boardmaker activity in TD Snap® and navigates away from the activity to a different page, they can return to the Boardmaker activity in the same state they left it.

 This action can only be used with activities played in the main TD Snap® window. It does not work with activities opened as popups.

1. Navigate to the page where you want to have a button that takes the user back to the in-progress Boardmaker activity.




2. Select the **Edit** button.
3. Select the button you would like to use to navigate to the in-progress Boardmaker activity.
4. Select **Add Action**.
5. Scroll down to Boardmaker Activities and select **Open Current Boardmaker Activity**.

 If there is not a Boardmaker Activity currently in progress, the button is automatically disabled. When a Boardmaker Activity is in progress, the button is automatically enabled and the label displays the name and thumbnail of the activity.

9.8 Button Style

Change the look of a button in the Button Style category.

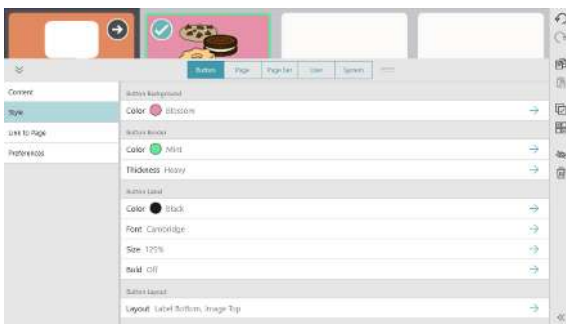

9.8.1 Button Background



1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Color** under Button Background.
5. Select a color.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

9.8.2 Button Border

9.8.2.1 Border Color



1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Color** under Button Border.
5. Select a color.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

9.8.2.2 Border Thickness



1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Thickness** under Button Border.
5. Select a border thickness — None, Thin, Medium, or Heavy. You can also set a custom thickness using the slider or by typing a numeric value between 0 and 12 in the Custom Thickness field.



Illustration 33: Button borders: None, Thin, Medium, and Heavy.

9.8.3 Button Label

9.8.3.1 Color



1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Color** under Button Label.
5. Select a color.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

9.8.3.2 Font



This setting's default is set on the Page Set tab. If you would like to override the Page Set default in this instance, set Match Page Set setting to **Off**. To align this setting with the rest of the Page Set, set Match Page Set setting to **On**.



1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Font** under Button Label.
5. Select a font.

9.8.3.3 Size



This setting's default is set on the Page Set tab. If you would like to override the Page Set default in this instance, set Match Page Set setting to **Off**. To align this setting with the rest of the Page Set, set Match Page Set setting to **On**.



1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Size** under Button Label.
5. Select a size.

9.8.3.4 Bold



This setting's default is set on the Page Set tab. If you would like to override the Page Set default in this instance, set Match Page Set setting to **Off**. To align this setting with the rest of the Page Set, set Match Page Set setting to **On**.



1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Bold** under Button Label.
5. Set bold to **On** or **Off**.


9.8.4 Button Layout




This setting's default is set on the Page Set tab. If you would like to override the Page Set default in this instance, set Match Page Set setting to **Off**. To align this setting with the rest of the Page Set, set Match Page Set setting to **On**.




1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Layout** under Button Layout.
5. Select a layout from the list.

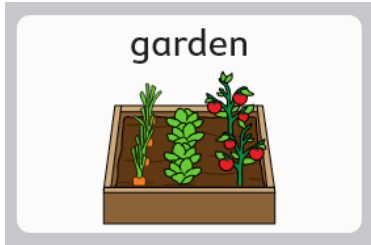

Label Top, Image Bottom

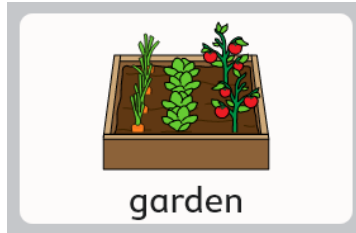


Label Bottom, Image Top

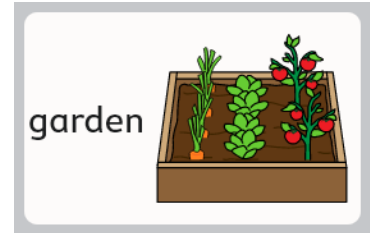

Label Left, Image Right



Label Right, Image Left

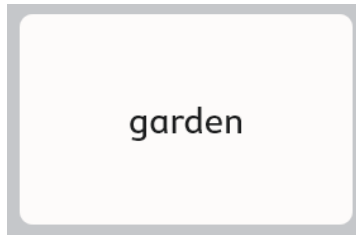

Label Only

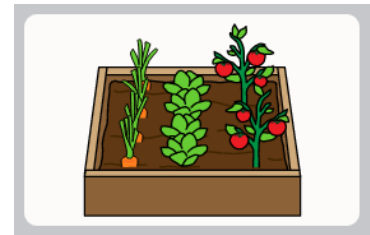


Image Only

9.8.5 Button Link Visualization



This setting's default is set on the Page Set tab. If you would like to override the Page Set default in this instance, set Match Page Set setting to **Off**. To align this setting with the rest of the Page Set, set Match Page Set setting to **On**.



Set the link visualization style for the selected button.





Edit button.


1. Select the **Edit** button.
2. Select a button.
3. Select the **Style** category.
4. Select **Link Visualization** under Button Link Visualization.
5. Select a link visualization style from the list.

Table 8: Link visualization styles

None	Do not show a link visualization.	
Navigation icon	A small icon appears in the corner of the button indicating what it does (link to another page, visit page, or go back).	

Folder for link	Link button is shaped like a folder. Style applies to Link buttons only, not Go Back or Visit buttons.	
Corner tab for link	Link button has a gray triangle in one corner. Style applies to Link buttons only, not Go Back or Visit buttons.	

9.9 Link to Page/Create New Page

Link buttons open a different page when selected. By default, link buttons are identified by this icon  or the visit icon




. To change the appearance of link and visit buttons, see section *10.3.6 Page Set Link Visualization, page 80*.

9.9.1 Create a Link Button in an Empty Cell



1. Select the **Edit** button.
2. Select the link icon in an empty cell.

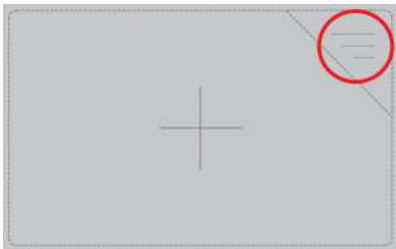

- To link to a brand new page, see section *9.9.3 Link to a New Page/Create New Page, page 61*.
- To link to an existing page, see section *9.9.4 Link to Existing Page, page 61*.
- To link to a (new) copy of an existing page, see section *9.9.5 Link to a New Copy of an Existing Page, page 61*.
- To import and link to a page, see section *9.9.6 Import and Link to Page, page 61*.

9.9.2 Create a Link From an Existing Button



1. Select the **Edit** button.
2. Select the button that you would like to create a link from.

3. Select the **Button** tab.
4. Select the **Action** category.
5. Select **Add Action**.
6. Select **Link**.
 - To link to a brand new page, see section 9.9.3 *Link to a New Page/Create New Page*, page 61.
 - To link to an existing page, see section 9.9.4 *Link to Existing Page*, page 61.
 - To link to a (new) copy of an existing page, see section 9.9.5 *Link to a New Copy of an Existing Page*, page 61.
 - To import and link to a page, see section 9.9.6 *Import and Link to Page*, page 61.

9.9.3 Link to a New Page/Create New Page

1. Select **Link to new page**. The New Page dialog will open.
2. Type the page name into the **Name** field. Select a symbol, or select the **X** if you do not want to set a symbol for the page.
3. Select **Create** to create the link and the new page. Select **Cancel** to return without saving.

9.9.4 Link to Existing Page

1. Select **Link to Existing Page**. The Link to Existing Page dialog will open.
2. Select a page from the list.
Type in the Search field to find a specific page, or select Recently Opened to find a page you've visited recently.
3. Select **Save** to create the link. Select **Cancel** to return without saving.

To learn about Visit Page see section 9.9.7 *Visit Page*, page 62.

9.9.5 Link to a New Copy of an Existing Page

This linking method allows you to use a page as a template for the new page you create.

1. Select **Link to Copy of Page**. The Link to Copy of Page dialog will open.
2. Select a page from the list.
3. Enter a name for the new page in the Name field.
4. Select **Save** to create a copy of the selected page and the link. Select **Cancel** to return without saving.



Type in the Search field to find a specific page, or select Recently Opened to find a page you've visited recently.

To learn about Visit Page see 9.9.7 *Visit Page*, page 62.

9.9.6 Import and Link to Page

If you have a page bundle file containing a page that you would like to link to, you can import the page and link to it all in one step using Import and Link to Page.

1. Select **Import and Link to Page**. You may choose to import from myTobiiDynavox or from a local file:
 - From myTobiiDynavox
 - Select **From myTobiiDynavox**.
 - You may be prompted to log in to myTobiiDynavox. The Select Page Bundle from myTobiiDynavox dialog opens.
 - Select the Page Bundle that you would like to import, then select **Next**.
 - Select the page that you would like to link to, then select **Import**.
 - From a Local File
 - Select **From a Local File**. The Import Page Bundle from a Local File dialog opens.
 - Select **Browse**. Navigate to the desired Page Bundle (.spb) and then select **Open**.
 - Select **Next**.
 - Select the page that you would like to link to, then select **Import**.



Page conflicts occur when the page bundle contains one or more pages that already exist on your device, but are



not identical. Select each page conflict icon, then choose whether to keep the existing page or overwrite with the imported page from the page bundle. You must resolve all page conflicts in this manner before you can proceed with the Page Bundle import.

9.9.7 Visit Page

When enabled, the Visit Page setting sets a link to return the user to the previous page after a selection that triggers a



return has been made on the linked page. Link buttons that have Visit Page enabled display this icon:

How Visit Page Works

1. Select the Visit Page link button. The linked page opens.
2. Make a selection on the linked page.*
The previous page (containing the Visit Page link button) opens.



* In order to trigger return to the previous page, the selected button must *either* contain one of the following actions:

- Speak or Insert Message
- Speak Sentence
- Return from Visit

Or, be one of the following button types, which also trigger return to the previous page:

- Grammar button
- Inflector button
- Predictor button
- On-screen keyboard button programmed with KeyType = space

The following actions and button types extend Visit mode and *do not* trigger return to the previous page:

- Extend Visit
- Go Back
- Link
- Implied Subject
- Pause Access Method
- Chat

If a button contains multiple actions (some that trigger return to the previous page and some that extend visit mode) return to the previous page is not triggered unless the button also contains Return from Visit.

The following actions cancel a visit:

- Cancel Visit
- Go Home
- Open Dashboard
- Open Keyboard

9.9.7.1 Enable Visit Page on a Link Button



1. Select the **Edit** button.
2. Select the Link button.
3. Select the **Action** category.
4. Select the **Link** action.
5. Set **Visit Page** to On.

9.9.7.2 Extend, Cancel, or Return from Visit

You can use actions to interrupt or prolong a page visit that occurs after selecting a Visit button. If a selected button on the visited page contains one of the following actions, it will change normal Visit behavior in the specified way:

- **Extend Visit** — remain in Visit mode, despite the action(s) on this button.
- **Cancel Visit** — exit Visit mode, but stay on the current page.
- **Return from Visit** — exit Visit mode immediately (before executing subsequent actions on this button) and return to the original page. All actions on the button are executed.

9.10 Button Access Method Settings

Customize certain access method settings on individual buttons.



1. Select the **Edit** button.
2. Select a button.
3. Select the **Access Method** category.
4. For each access method setting, opt to match the User setting or set a custom value for the currently selected button:
 - Eye Gaze Options
 - **Dwell Time** — set the dwell time required for eye gaze users to select this specific button.

9.11 Button Language Rules

The language rules setting allows you to specify the language that will be used for symbol search, symbolate, word prediction, inflection, auto-morphing, and speaking voice (if a language-specific voice has been set for that language) for that button.

Buttons inherit a default language rules setting from the Page Set level settings or Page level settings. You can manually set the language rules for a button by following the steps below:



1. Select the **Edit** button.
2. Select a button.
3. Select the **Preferences** category.
4. Select **Language Rules**.
5. Select a language from the list:
 - **Fully Supported Languages** — affects symbol search, symbolate, word prediction, inflection, auto-morphing, and speaking voice (if a language-specific voice has been set for that language).

The **Neutral** language is primarily for use with proper nouns (for example, Harriet Tubman or Amsterdam). When words tagged as Neutral are sent to the Message Window, they will be spoken according to the language rules of the other words currently in the message window. If the message window is otherwise empty, the Neutral words will be spoken according to the language rules setting of the current or most recent non-neutral page.
 - **Other Languages** — the languages in this category have varying levels of support within the TD Snap® app.

9.12 Suffixes and Prefixes

Use buttons containing a prefix or suffix immediately before or after another word to create a new word in the Message Window.



Suffixes and prefixes currently only work in English languages.

The User setting “Automatically form contractions” must be enabled. See section *14.12.2 Message Window Settings, page 105*.

- Create a separate button for each suffix or prefix.

- Add a hyphen where the suffix or prefix joins with the other word to create a new word without a hyphen. For example, "sad" + "-ness" = "sadness"
- Add two hyphens where the suffix or prefix joins with the other word to create a new word with a hyphen. For example, "anti" + "smoking" = "anti-smoking"
- Spelling rules are not applied, so misspelled words and non-existent words are possible. For example, "happy" + "-ness" = "happyness" and "place" + "-ment" + "-ship" + "-tion" = "placementshiption"
- Both the prefix or suffix and the other word must be entered into the Message Window using standard buttons, not keyboard buttons.

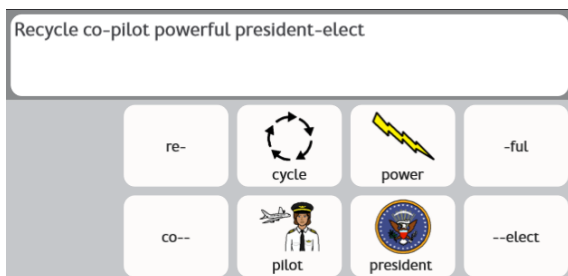


Illustration 34: Prefix and suffix button examples

9.13 Edit Supports

Topics contain pre-made supports to help with self-regulation and social communication. You can edit supports to customize them to your needs. To learn more about the types of supports, see section 7.4.2 *Supports*, page 24.

1. Go to the page that contains the support that you wish to edit.



2. Select the **Edit** button.
3. Select the button for the support to be edited.
4. Select the **action** (Mini-Schedule, Visual Timer, First Then, or Script).
5. Select the pencil icon in any row to make changes.
6. Select the **Preview** button at the bottom of the support editing panel to preview your changes to the Support.
7. When finished editing, select **Done**.

9.14 Remotes

Some Tobii Dynavox devices, such as the Indi and I-110, are equipped with an IR transmitter that can be controlled through the TD Snap® software, enabling these devices to be used as remote controls for equipment such as televisions and stereos. The Core First Page Set comes with pre-made remotes pages in the Dashboard. These remotes pages contain buttons that are ready for you to program with your remote commands.



TD Snap® remotes do not work on the Tobii Dynavox I-12(+) or I-15(+) devices.

9.14.1 Program a Remote Button



The remote programming process only needs to be done once per button.

Have your remote control on hand. You will need it to teach the IR command to your device.



1. Select the **Edit** button.
2. Select the on-screen button that you would like to program to send the IR command.
3. Select the **Button** tab.
4. Select the **Action** category.
5. Select **Add Action**.
6. Select **Send IR Signal**.

7. Select **Record**, then point the remote control at the IR panel on your Tobii Dynavox device and press the button on the remote.
8. If you see the message "Recording succeeded!" select **Done**.
If you see the message "No signal was detected. Please try again." return to step 7.

9.14.2 Using Remotes



Remotes are only available for compatible Tobii Dynavox devices.

You must set up your remote in advance by programming each remote button with the correct IR command. See [9.14.1 Program a Remote Button](#), page 64.



Illustration 35: Dashboard — Remotes button

1. Navigate to the remote page that corresponds to the equipment (television, stereo, etc.) that you would like to control.
2. Point the IR window of your Tobii Dynavox device toward the equipment you would like to control.
3. Select the button for the desired command.

9.15 Edit Page

Changes made in the Page tab will affect *only the current page*. You can use the settings on the Page tab to override some Page Set settings. For example, if you want the Message Bar visible for most pages, but not your Dashboard page, you would do the following: 1. Enable Message Bar in Page Set settings. 2. Go to the Dashboard page. 3. Select the Page tab. 4. Select Preferences 5. In Page Message Bar Visibility, disable Match Page Set setting: On. 6. Set Message Bar Visibility to Off.

9.15.1 Page Name



Illustration 36: Page Name



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Type in the **Label** field to edit the Page Name.



9.15.2 Page Symbol

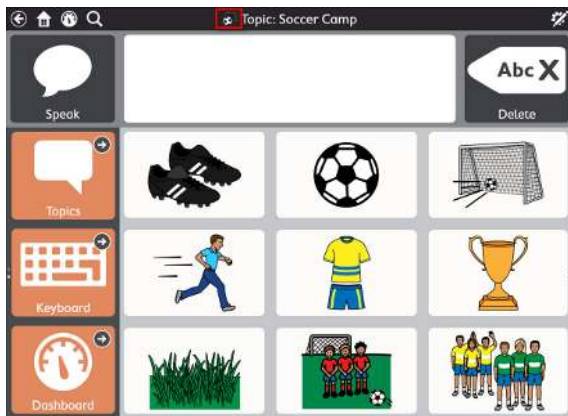



Illustration 37: Page Symbol



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Add or change the Page Symbol:


To search for a symbol in your symbol sets:

- Select the  **Symbol Search** button.
- The Symbol Search dialog will open.
- Type in the text field to refine your search terms.




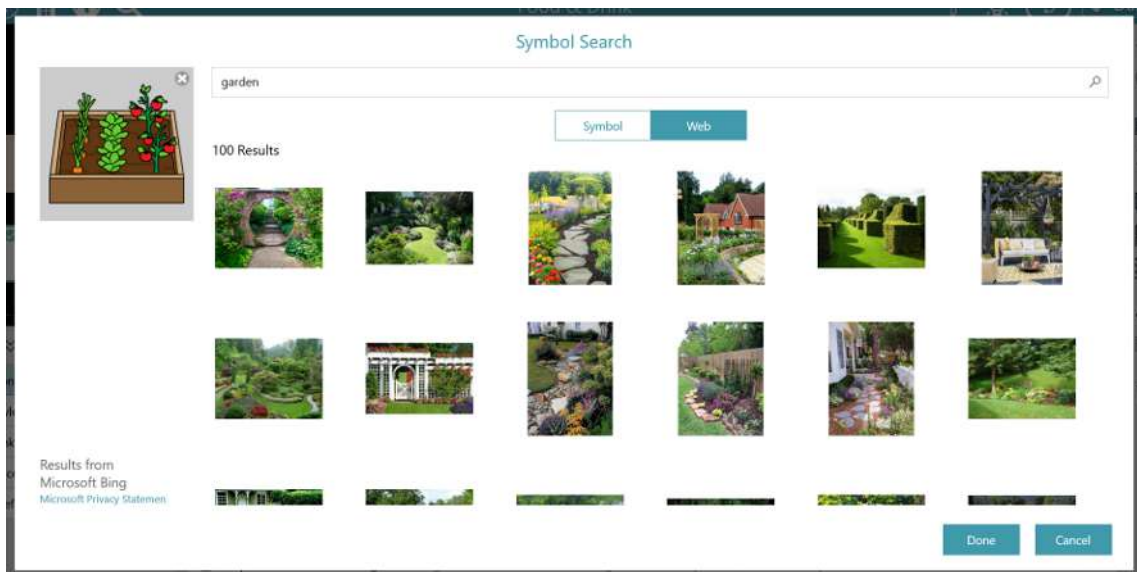
Optional: To filter your search results, select the **Symbol Filter** button, then select the features you would like to see in your symbol search results (Adult, Child, Female, Male).

- Choose the desired symbol.
- Select **Done**.

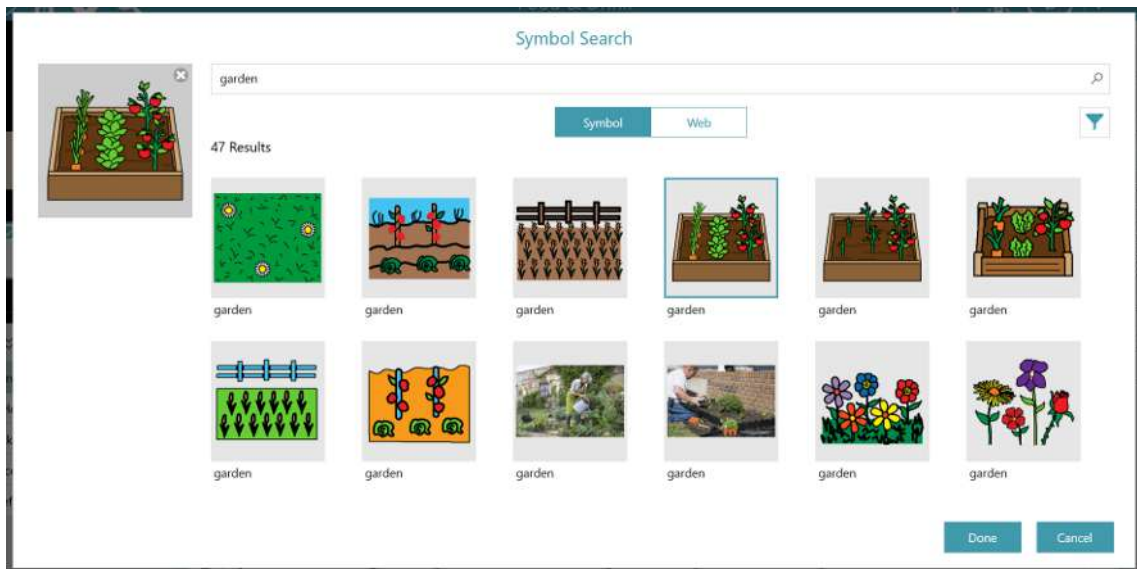


To search the web for an image (internet connection required):

- Select the  **Symbol Search** button.
- The Symbol Search dialog will open.
- Select the **Web** tab, then enter a search term in the text field.
- Choose the desired image.
- Select **Done**.



To use the camera to take a photo for the page image:

- Select the  **Camera** button.
- Choose **From Camera**.
- Use the camera on your device to capture a photo.

To use an image stored on your local device:

- Select the  **Camera** button.
- Choose **From Photo Library**.

- Use the file browser to navigate to the desired image file.



If you do not want to use a page symbol, select the **X** on the Page Symbol.

9.15.3 Page Language Rules

The Page Language Rules setting sets the default language rules for buttons on the page. The language rules setting controls the language that will be used for symbol search, symbolate, word prediction, inflection, auto-morphing, and speaking voice (if a language-specific voice has been set for that language).

Buttons inherit a default language rules setting from the Page Set level settings or Page level settings. When you set the Page Language Rules, all existing buttons on the page will take on that setting and new buttons created on the page will also default to that setting. To change the language rules for specific buttons, see section 9.11 *Button Language Rules*, page 63.



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Select **Language Rules**.
4. Select a language from the list:

- **Fully Supported Languages** — affects symbol search, symbolate, word prediction, inflection, auto-morphing, and speaking voice (if a language-specific voice has been set for that language).

The **Neutral** language is primarily for use with proper nouns (for example Albert Einstein or Coca-Cola). When words tagged as Neutral are sent to the Message Window, they will be spoken according to the language rules of the other words currently in the message window. If the message window is otherwise empty, the Neutral words will be spoken according to the language rules setting of the Page Set.

- **Other Languages** — the languages in this category have varying levels of support within the TD Snap® app.

9.15.4 Page Grid Size



This setting's default is set on the Page Set tab. If you would like to override the Page Set default in this instance, set Match Page Set setting to **Off**. To align this setting with the rest of the Page Set, set Match Page Set setting to **On**.

9.15.4.1 Change Page Grid Size



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Select the **Grid Size** category.
4. Set **Match Page Set Setting** to **Off**.
5. Select **Grid Size**.
6. Select a grid size from the Optimized Grid Sizes or set the number of rows and columns to create a custom grid size.



Unless you are creating a completely custom page, it is strongly recommended to use the Page Set Optimized Grid Sizes. The optimized grid sizes will display the pre-populated page content as designed by our clinical team, while other grid sizes may not.



If you would like to display the Message Bar and/or Toolbar, you must choose a grid size of 3x3 or larger.

To change the size of the spaces between buttons, see section 10.3.7 *Page Set Grid Margin*, page 81.

Table 9: Sample grid sizes (not comprehensive)



2x3




3x4



6x6

9.15.5 Page Background Color

 This setting's default is set on the Page Set tab. If you would like to override the Page Set default in this instance, set Match Page Set setting to **Off**. To align this setting with the rest of the Page Set, set Match Page Set setting to **On**.

1. Navigate to the page that you would like to have a different background color.




2. Select the **Edit** button.
3. Select the **Page** tab.
4. Select the **Style** section.
5. Set the Page Background Color Match Page Set Setting to **Off**.
6. Select **Color**. The Page Background Color list will open.
7. Select a color.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

9.15.6 Show/Hide Message Bar

 This setting's default is set on the Page Set tab. If you would like to override the Page Set default in this instance, set Match Page Set setting to **Off**. To align this setting with the rest of the Page Set, set Match Page Set setting to **On**.

9.15.6.1 Change Message Bar Visibility



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Select the **Preferences** category.
4. Set **Match Page Set Setting** to **On** to match the indicated setting or **Off** to make the Message Bar visibility different on this page from the rest of the Page Set.

9.15.7 Delete Page



Deletion is a permanent operation. Only delete a page if you are sure you will not want to use it again in the future.

1. Navigate to the page you would like to delete.



2. Select the **Edit** button.
3. Select the **Page** tab.
4. Select  **Delete**. The Delete Page dialog will open.

5. Select the **Delete** button to permanently delete the page, or select **Cancel** to return to Page settings without deleting the page.

9.15.8 Import/Export Pages

See section *13.3 Page Bundles, page 94*.

9.16 Scan Groups

A scan group is an area containing buttons that scan as a single unit. When the scan group is selected, the buttons within that area are then scanned. Using scan groups can make using the scanning access method much quicker.

To use scan groups, the Scanning access method must be active with the Group Scan setting enabled. For more information see section *14.13.8 Scanning Options, page 112*.

Create and Edit Scan Groups




1. Select the **Edit** button.
2. Select the **Page** tab.



3. Select the **Scan Groups** tool.
The first scan group is created for you automatically.



4. To add areas to your scan group, select the **Draw** tool, then click on (or click and drag across) areas of the page to add them to the scan group. The areas can be anywhere on the page, they do not need to touch each other.

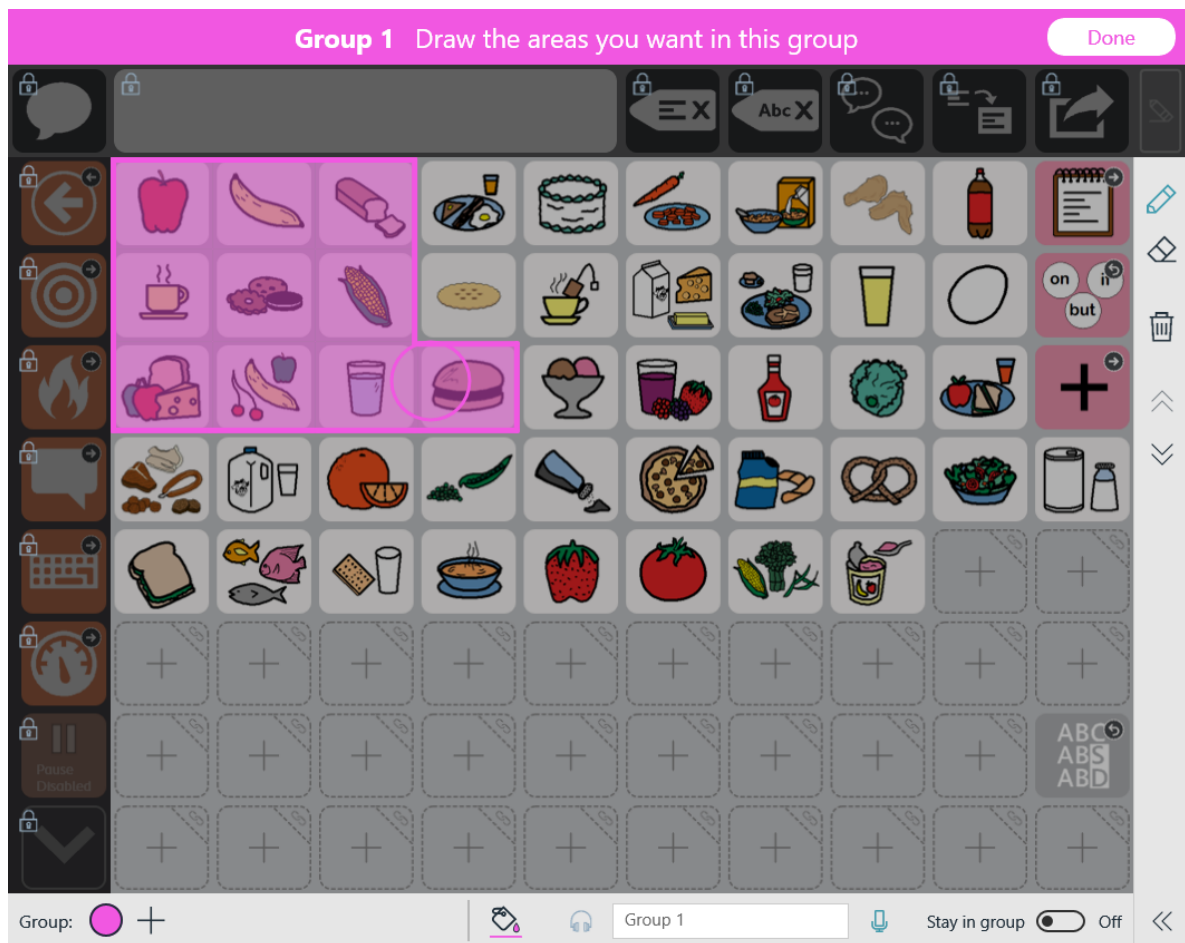

5. To remove areas from the scan group, select the



Erase tool, then click on each area you would like to remove from the group.

You cannot add the Message Bar or Toolbar to a scan group. This is because the Message Bar and Toolbar are always their own scan groups.

Scan groups are defined as areas of the page, not specific buttons. If you move a button, it may be in a different scan group in the new position.

The scan sequence follows left to right, top to bottom progression. The scan group numbers are not related to scan sequence.

Buttons on the page that are not in a scan group will scan individually.

 
Scan groups are specific to the grid size.

6. To create a new scan group, select the



button in the lower left corner.

7. To navigate between scan groups, select the colored circle that matches the color of the scan group that you would like to edit.



8. To delete a scan group, first select the scan group as described in the previous step, then select



Delete

Scan Group.



Use the **Scroll Up** and **Scroll Down** arrows to scroll the page.



9.16.1 Scan Group Options

 
Scan Group Color



- Select the color tool to choose a color for the current scan group. The scan group colors only appear in Edit mode, not in Use mode.

Scan Group Audio Cue

- Text entered into the Audio Cue field will be read when the group is scanned (if the Speak Audio Cue setting is enabled).



- If you would like to record a custom Audio Cue track, see section 9.6.3.2 *Make a Recording*, page 42.

Stay in Group

- When enabled, the scan will re-start within the scan group after a selection is made. This allows users to easily make multiple selections within the same group. When Stay in Group is disabled, the scan sequence re-starts at the top of the page after a selection is made.

9.17 Edit the Message Bar

Changes to the Message Bar apply to the entire Page Set.

9.17.1 Move and Resize Objects in the Message Bar



1. Select the **Edit** button.
2. Select the object (button or Message Window) in the Message Bar that you want to resize.
3. To resize the object, select and hold on one of the blue dots in the corners of the object, then drag to the desired size.
To move the object, select and hold in the center of the object, then drag it left or right in the Message Bar.



The Message Window can only be resized larger into empty cells.

9.17.2 Add Buttons in the Message Bar



1. Select the **Edit** button.
2. Select an empty cell in the Message Bar.
If there are no empty cells in the Message Bar, you have three options:
 - Make the Message Window smaller. See section 9.17.1 *Move and Resize Objects in the Message Bar*, page 72.

- Delete one or more buttons in the Message Bar. See section 9.17.3 *Remove Buttons in the Message Bar*, page 73.
 - Increase the Grid Size. See section 10.2 *Grid Size*, page 77.
3. Choose a button from the menu to add it to the Message Bar. To learn about the Message Bar buttons, see section 6 *The Message Bar*, page 19.

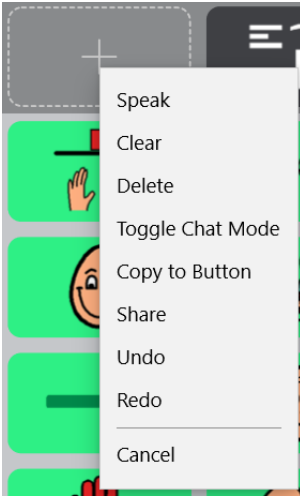



Illustration 38: Message Bar button menu

9.17.3 Remove Buttons in the Message Bar



1. Select the **Edit** button.
2. Select a button in the Message Bar.
3. Select  **Delete**.



The Message Window cannot be deleted.

9.18 Edit the Toolbar



Illustration 39: Core First toolbar, seen in Edit Mode, containing buttons, hidden buttons, and an empty cell.



1. Select the **Edit** button.
2. Select any button in the toolbar to edit it.
You may need to scroll to see the entire contents of the toolbar or to access the empty cells in the toolbar.
3. Click and hold, then drag buttons to reorder the buttons within the toolbar.



You cannot drag buttons between the page and the toolbar.


9.19 Custom Colors

You can create, edit, and save custom colors from any color menu in TD Snap®.

1. In Edit mode, select the object on which you would like to change the color.
2. Select **Style**.
3. Select the element color you would like to edit (border, background, text, etc).



4. Select the **Edit color** button.
5. Select **Save** to save your new color creation. Select **Cancel** to go back without saving.
6. Saved custom colors are available in the top section of the color menu each time you open the color menu.

To delete a saved custom color, select the color, then select  **Delete**.



To apply color changes to objects throughout the Page Set, select the **Page Set** tab.

10 Page Set Settings

10.1 Page Set

10.1.1 Choose Page Set



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the row under **Username's Page Set**.
4. Select a Page Set from the list.

10.1.2 Create New Page Set

Create Page Set from Pre-Installed, Copy of Existing User Page Set, or a Local File



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the row under **Username's Page Set**.
4. Select **Create Page Set**.
The Select Page Set dialog will open.
5. Choose a Page Set:
 - Pre-installed Page Sets tab
 - These are pre-made Page Sets already installed in TD Snap® on your device.
 - User Page Sets
 - Select one of your existing Page Sets to use as a template (create a copy).
 - Local Files
 - Import a Page Set file (.sps) stored on your local device or a connected drive.
6. Select **Next** to create the new Page Set.
7. Enter a name for the new Page Set.
8. Select **Create** to create the Page Set. Select **Cancel** to return to Page Set settings without creating the new Page Set.

Download Page Set From myTobiiDynavox



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the current Page Set.
4. Select **Download Page Set**.
You may be prompted to log in to myTobiiDynavox.
5. Select a Page Set from the list, then select **Download**.
6. When the download is complete, enter a name for the Page Set, then select **Save**.

10.1.3 Rename Page Set and Edit Description




1. Select the **Edit** button.
2. Select the **Page Set** tab.



3. In the list of User's Page Sets, select the **Edit** button beside the name of the Page Set you would like to rename. The Edit Page Set Info dialog will open.
4. Edit the text in the **Name** field and/or the **Description** field.
5. Select **Save** to save your changes. Select **Cancel** to return to the list of Page Sets without saving.

10.1.4 Delete Page Set



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. In the list of User's Page Sets, select the  **Delete** button beside the name of the Page Set you would like to delete.
4. Select the red **Delete** button.
5. Select **Delete** to permanently remove the Page Set. Select **Cancel** to return to the list of Page Sets without deleting.



You cannot delete the currently active Page Set.

10.1.5 Set Home Page



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select **Home page**.
4. Select a page from the list.



Type in the Search field to find a specific page, or select Recently Opened to find a page you've visited recently. The recommended Home Page for grid sizes 1x1 through 2x3 is Supported Navigation. For grid sizes 3x3 and larger, Core Words is the suggested Home Page.

10.1.6 Set Keyboard Page



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select **Keyboard page**.
4. Select a page from the list.



Type in the Search field to find a specific page, or select Recently Opened to find a page you've visited recently. Use the search term "keyboard" to help narrow your search results to Keyboard pages.

10.2 Grid Size



Some Page Sets, such as Motor Plan and P.O.D.D., tie specific grid sizes to specific versions of the Page Set. To use a different grid size with those Page Sets, you must choose a different version of the Page Set.

The Grid Size selected in Page Set Settings is the default grid size for the user. All pages will default to the grid size chosen in Page Set Settings unless otherwise specified in Page settings.



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Grid Size** category.
4. Select a grid size from the list of Optimized Grid Sizes or select the number of rows and columns to create a custom grid size.



Unless you are creating a completely custom page, it is strongly recommended to use the Page Set Optimized Grid Sizes. The optimized grid sizes will display the pre-populated page content as designed by our clinical team, while other grid sizes may not.



If you would like to display the Message Bar and/or Toolbar, you must choose a grid size of 3x3 or larger.

To change the size of the spaces between buttons, see section 10.3.7 *Page Set Grid Margin*, page 81.

Table 10: Sample grid sizes (not comprehensive)



2x3



3x4



6x6

10.3 Page Set Style

The settings made in Page Set Style define the look of the Page Set. All pages in the Page Set, including new pages, will use these style settings unless they are manually overridden at the page or button level.

10.3.1 Symbol Skin Tone and Hair Color

Set the skin tones and hair colors used in symbols that depict people. The Diverse setting, which uses a variety of skin tones and hair colors, is the default. If a specific skin tone or hair color is chosen, those selections are used for all symbols.



Symbol skin tone and hair color settings **do not** apply to the following:

- Symbols depicting specific individuals (celebrities, historical figures, etc.)
- Symbols that are displayed within Boardmaker activities played in TD Snap
- The Snap Aphasia Photos symbol set

If METACOM symbols are used in the current Page Set, the hair color setting is not available.



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Skin Tone** or **Hair Color** under Style.
5. Select one of the following options:
 - **Not Set** — Show the symbols as they were originally designed by the symbol artists.
 - **Diverse** — Use a variety of colors in your symbols.
 - **New** — Design a custom color to apply to all symbols.
 - **Color** — Choose a color from the Colors section to apply to all symbols.

 


Illustration 40: Skin Tone and Hair Color not set



Illustration 41: Skin Tone and Hair Color set to Diverse

 


Illustration 42: Skin Tone and Hair Color set to specific colors



You can edit the colors in individual symbols using the Symbol Editor. See section 9.6.6 *Edit Symbol*, page 45.

10.3.2 Page Set Button Labels Font



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Font** under Style.
5. Select a font.

10.3.3 Page Set Button Labels Font Size



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Font** under Style.
5. Select a font size.

10.3.4 Page Set Button Labels Bold




1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Bold** under Style.
5. Set bold to On or Off.

10.3.5 Page Set Button Layout




1. Select the **Edit** button.
2. Select the **Page Set** tab.


3. Select the **Style** category.
4. Select **Button layout** under Style.
5. Select a layout from the list.

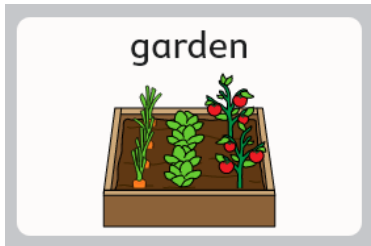

Label Top, Image Bottom

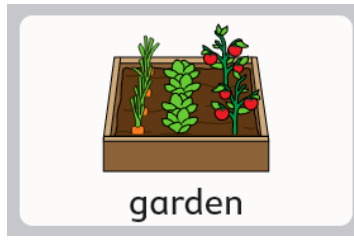

Label Bottom, Image Top

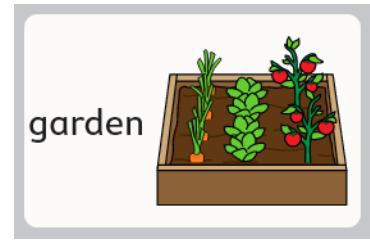

Label Left, Image Right



Label Right, Image Left



Label Only

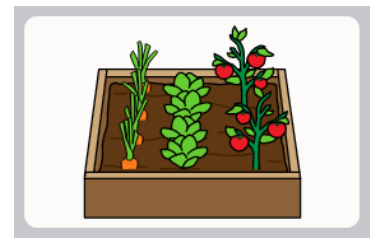






Image Only

10.3.6 Page Set Link Visualization

Set the appearance of buttons that go to other pages.

Table 11: Link visualization styles

None	Do not show a link visualization.	
Navigation icon	A small icon appears in the corner of the button indicating what it does (link to another page, visit page, or go back).	

Folder for link	Link button is shaped like a folder. Style applies to Link buttons only, not Go Back or Visit buttons.	
Corner tab for link	Link button has a gray triangle in one corner. Style applies to Link buttons only, not Go Back or Visit buttons.	

10.3.7 Page Set Grid Margin

Set the size of the gaps between buttons.



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Grid Margin Factor** under Grid Margin.
5. Choose a Grid Margin Factor size.

10.3.8 Page Set Default Background Colors



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select any of the following rows to change the specified background color:
 - **Page Background** — Default color for the page background.
 - **Toolbar Background** — Default color for the Toolbar background.
 - **Message Bar Background** — Default color for the Message Bar (not the Message Window) background.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

10.3.9 Page Set Message Window Font



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Font** under Message Window.
5. Choose a font.

10.3.10 Page Set Message Window Font Size



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Font Size** under Message Window.
5. Choose a font size.

10.3.11 Page Set Message Window Text Color



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Text Color** under Message Window.
5. Choose a text color.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

10.3.12 Page Set Message Window Background Color



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Background** under Message Window.
5. Choose a color.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

10.3.13 Page Set Message Window Speech Highlight Color



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Speech highlight color** under Message Window.
5. Choose a color.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

10.3.14 Page Set Message Bar Background Color



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Message Bar background** under Message Window.

5. Choose a color.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

10.3.15 Navigation Button Style



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the **Style** category.
4. Select **Navigation Button Style** under Navigation Buttons.
5. When Automatic is enabled, the colors are configured automatically for contrast and visibility in relation to the page background color. When Automatic is disabled, you set the navigation button background color, border color, arrow color, and border thickness to use throughout the page set.



You can create your own custom colors! See section 9.19 *Custom Colors*, page 74.

10.4 Page Set Preferences



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select **Preferences**.
4. Select any of the following to change the specified setting:
 - Interface**
 - **Message Bar On:** When enabled, the Message Bar is displayed on each page by default.
 - **Toolbar Location:** Choose to display the Toolbar on the left or the right side of each page or to turn off the Toolbar.
 - Toolbar Rows**
 - **Match Page Set Setting:** When enabled, the number of rows available on the toolbar will match the number of rows in the selected page set. To change the number of rows in the toolbar separately from the page set grid size, disable this setting and set the desired number of rows.
 - Message Window**
 - **Automatically Inflect Grammar buttons:** When enabled, grammar buttons will dynamically update to match the grammatical context of the contents of the Message Window.
 - **Automatically form contractions:** When enabled, consecutive words will combine to form common contractions or compound words.
 - Page Set Scan Groups**
 - **1. xxx, 2. yyy, 3. zzz:** Set the orders for how the Page Set Scan groups; Page, Toolbar and Message bar, should be scanned. Set the scan order, audio cues, and Stay in Group settings for the Page Set Scan groups; Page, Toolbar and Message bar.

10.5 Adaptive Buttons



This section applies to Tobii Dynavox I-13 and I-16 devices only.

The adaptive buttons found on the front of the Tobii Dynavox I-13 and I-16 devices are selectable through Touch or Gaze



and





buttons, can be programmed with TD Snap® actions that will execute if selected using Gaze Interaction while using TD Snap®.

Set Adaptive Button Gaze Interaction Actions



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select **Adaptive Buttons**.



4. Select  or  from the list.
5. Select **Add Action**.
6. Select an action.



To add additional actions, repeat steps 5 and 6.

Set Adaptive Button Touch Actions



Adaptive Button Touch behavior is set in the Tobii Dynavox Hardware Settings app. You can launch this app directly using the shortcut found on your desktop or through TD Snap® as described below.



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select **Adaptive Buttons**.
4. Select **Set actions for touch**. The Tobii Dynavox Hardware Settings app will launch.
5. Use the drop down menus in the Hardware Settings app to choose the actions for the adaptive buttons when they are selected using Touch.



Adaptive Button Touch behavior is set in the Tobii Dynavox Hardware Settings app. You can launch this app directly using the shortcut found on your desktop or through TD Snap® as described below.

10.6 Page Set About

This section displays the version number of the Page Set and Content Developer Settings.

10.6.1 Page Set Content Developer Settings

Special settings for advanced Page Set creators.

10.6.1.1 Set Optimized Grid Sizes

Set which grid sizes appear in the Optimized Grid Sizes list for this Page Set.



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select **About**.
4. Select **Content developer settings**.
5. Select **Grid Sizes**.
6. To add a grid size to the list, scroll to the right and select **Add New Size**. The Add Optimized Grid Size dialog will open.
7. Choose the number of **Rows** and **Columns** for your new Optimized Grid Size (up to 15 x 15), then select **Save**.
8. To remove an Optimized Grid Size, select the **Delete** icon on the grid size in the list. The Delete Grid Size Warning will appear. If you are sure you want to delete the grid size, select **Delete**. Otherwise, select **Cancel** to close the warning without deleting.

10.6.1.2 Page Set Language Rules

The Page Set Language Rules setting sets the default language rules for buttons and pages in the Page Set. The language rules setting controls the language that will be used for symbol search, symbolate, word prediction, inflection, auto-morphing, and speaking voice (if a language-specific voice has been set for that language).

Buttons inherit a default language rules setting from the Page Set level settings or Page level settings. When you set the Page Set Language Rules, all existing buttons in the Page Set will take on that setting and new buttons created in the Page Set will also default to that setting. To change the language rules for specific pages in the Page Set, see section 9.15.3 *Page Language Rules*, page 68. To change the language rules for specific buttons, see section 9.11 *Button Language Rules*, page 63.



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select **About**.
4. Select **Content developer settings**.
5. Select **Language Rules**.
6. Select a language from the list:
 - **Fully Supported Languages** — affects symbol search, symbolate, word prediction, inflection, auto-morphing, and speaking voice (if a language-specific voice has been set for that language).
 - **Other Languages** — the languages in this category have varying levels of support within the TD Snap® app.

11 Print

Print one or more pages to paper or PDF.



Edit button.

1. Select the
2. Select the **Page** tab.



3. Select **Print** in the editing toolbar on the right side of the screen. The Select Pages to Print dialog opens. You can also print from the **Print Pages** section on the Page tab.
4. The current page is added to the print queue by default. Select additional pages from the list to add them to the print queue.
 - Type in the Search field to search by Page Name.
 - To add all pages in the current search results to the print queue, check **Select All**.
 - If you check Select All, then uncheck Select All, your print queue is reset.
 - To remove pages from the print queue, select the **X** beside the page name.
5. When the desired pages have been added to the print queue, select **Next**.



6. Choose your print options. The page preview updates to reflect the current settings.



- **Message Bar:** Disable this setting to hide the Message Bar on the printed page(s).
 - **Toolbar:** Disable this setting to hide the Toolbar on the printed page(s).
 - **Link visualization:** Disable this setting to hide the link indicator icons on link buttons on the printed page(s).
 - **Button usage counts:** Enable this setting to show the current button usage counts on the printed page(s).
Note: Data tracking must be enabled to see button usage counts.
7. When you have finished choosing your print options, select **Print**.
 8. Choose your printer (or print to PDF), color setting, and page orientation. Paper size options are available under **More settings**.

Note: This dialogue will vary depending on your platform and default printer setting.

When you have finished configuring your printer settings, select **Print**.



12 Google Assistant

Discover the benefits of having a smart assistant thanks to the Google Assistant integration in TD Snap®. Instantly access information, entertainment, environmental control, and more directly through the software.



Contraindication: TD Snap®, Google Assistant, and any associated smart appliances should never be, for the user, the only means of communicating important information.



TD Snap®, Google Assistant, and any associated smart appliances or speakers are not to be used as life supporting devices or for other critical purposes, and shall not be relied upon in case of loss of function due to power loss or other causes.



Tobii Dynavox assumes no responsibility for any user's conduct, and disclaims all liability for loss and/or harm (including, but not limited to, property damage, personal injury and death) associated with the use of TD Snap®, Google Assistant, smart appliances, speakers, or any combination thereof.



If using any other equipment besides an external Google Speaker, you must have an open communication device. For help opening the device, contact Tobii Dynavox Technical Support.

12.1 Connect your Google account

To use Google Assistant, smart speakers, and smart appliances, you must first sign in to your Google account in TD Snap®. See section *14.11 Google Account, page 104*.

12.2 Set up your Google devices

Follow the instructions that came with your devices to complete set up before using them with TD Snap®.

12.3 Google Assistant language support

It is important that you set up your Google Assistant with the same languages spoken using TD Snap®.



Before you change your Google Assistant's language, make sure your mobile device or tablet is connected to the same Wi-Fi network or linked to the same account as your Google Nest, Google Home speaker, or other Google Assistant enabled device.

To change your Google Assistant language:

1. On your mobile device, open the **Google Home** or **Google Assistant** app.
2. At the top right, select your account > **Assistant settings**.
3. Select **Assistant** > **Languages**.
4. Select your current language.
5. Choose a new language.

To add a second language to your Assistant:

1. On your mobile device, open the **Google Home** or **Google Assistant** app.
2. At the top right, select your account > **Assistant settings**.
3. Select **Assistant** > **Languages** > **Add a language**.
4. Choose another language.



You can talk to the Google Assistant in either language, but not a mix of both languages within the same utterance.

12.4 Talk to Google Assistant



We encourage you to start out with our Google Assistant pages*. These pages are found in the Dashboard of most page sets or you can download and import the pages from mytobiidynavox.com/PagesetCentral. The Google Assistant pages contain buttons to use Google Assistant for finding information, playing music, making phone calls, home controls, and more.

**Google Assistant and the Google Assistant pages are not available in all locales and languages.*

To create your own Google Assistant buttons, see below.



To use Google Assistant, you must have an internet connection and be logged in with your Google account in TD Snap® and any Google Assistant connected devices that you plan to use.


Depending on your equipment, you'll send Google Assistant commands in slightly different ways. Be sure to follow the instructions for the equipment you are using. Look for the icons below to find the steps that apply to you.	
	Google Assistant account only, no additional equipment.
	Google Nest Mini or other Google speaker.



Create a button that sends a pre-programmed Google Assistant command to a Google speaker

This option is best for Google Assistant commands that will be used more than once.



1. Select the **Edit** button.
2. Select a button.
3. In the  Message field, type the command that you want to send to your Google Assistant. The message must begin with "Ok Google," followed by the question or command.
4. In the Actions section, select the action **Speak or Insert Message**.
5. Select **Always Speak**.




To send unique Google Assistant commands on the fly, follow the steps above to create a button that contains only the message "Ok Google," In Use Mode, compose your Google Assistant command in the Message Window, select the Ok Google button, then speak the Message Window to send the command.



Create a button that sends the button message text to Google Assistant on your device

This option is best for Google Assistant commands that will be used more than once.



1. Select the **Edit** button.
2. Select a button.
3. In the  Message field, type the question or command that you want to send to your Google Assistant. Do not type "Ok Google," before the question or command.
4. Select **Add Action**.
5. Scroll down to the Environmental Control section and select **Send Google Assistant Command**.
6. Select **Send button message text to Google Assistant**.



Create a button that sends the Message Window text to Google Assistant on your device

This type of button will allow the user to compose unique Google Assistant commands in the Message Window and then send them to Google Assistant.



Edit button.

1. Select the
2. Select a button.
3. Select **Add Action**.
4. Scroll down to the Environmental Control section and select **Send Google Assistant Command**.
5. Select **Send Message Window text to Google Assistant**.



If you don't get the result you expected, try different wording. For example, "Ok Google, turn on the light" did not turn on the smart bulb. Instead, "Ok Google, turn on the family room light" turned on the smart bulb because it had been set up in family room in the Google Home app.

13 Sharing and Saving

TD Snap® offers several convenient ways to share and save your users, Page Sets, and pages. Whether you want to keep your Page Set consistent across all of your devices or send some new pages to a friend, we've got you covered!

- **Export/Import Locally** (User, Page Set, Page Bundle) — Use when storing the file on your local machine, sharing on a USB drive, or with people who do not have a myTobiiDynavox account.
- **Export/Import through myTobiiDynavox*** (Page Set, Page Bundle) — Share Page Sets and Page Bundles with other myTobiiDynavox users. Store and access files privately on your own myTobiiDynavox account.
- **Sync*** (Page Set) — Share ongoing changes to a Page Set across your devices and with specified myTobiiDynavox users. A Page Set shared through sync keeps an up-to-date version of the Page Set in the cloud, so that changes made to the Page Set on any approved device/account are shared across all synced devices/accounts for that Page Set.

*These sharing methods require an active internet connection.

Table 12: File Types for Sharing and Saving — What They Contain

File Type	Pages	Page Preferences	Page Set Preferences	User Preferences	System Preferences
User	Yes	Yes	Yes	Yes	No
Page Set	Yes	Yes	Yes	No	No
Page Bundle	Yes (Specified Pages)	Yes	No	No	No

13.1 Users

User backup files contain the Page Sets and settings associated with that user. User backup files do not contain voices. However, voice settings are preserved and the selected voice will download automatically if it is not available on the device (internet connection required).

Backup a User

See section 14.3 *Backup a User*, page 97.

Restore a User

See section 14.4 *Restore a User*, page 98.

13.2 Page Sets

A Page Set file contains all of the pages associated with that Page Set. It does not contain any user information or user-level settings.

13.2.1 Import a Page Set

From myTobiiDynavox



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the current Page Set.
4. Select **Download Page Set**.
You may be prompted to log in to myTobiiDynavox.
5. Select a Page Set from the list, then select **Download**.
6. When the download is complete, enter a name for the Page Set, then select **Save**.

From a Local File




1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the current Page Set.
4. Select **Create Page Set**.
5. Select the **Local Files** tab.
6. Select **Browse**.
7. Navigate to the desired .sps file, select it, then select **Open**.
8. Select **Next**.
9. Enter a unique name for the Page Set, then select **Create**.

13.2.2 Save a Copy of a Page Set

13.2.2.1 Save Page Set to myTobiiDynavox

Page Set files saved to myTobiiDynavox can be found on myTobiiDynavox.com in My Stuff > Snap > Pagesets




1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the current Page Set.
4. Select the  **Save** icon beside the Page Set that you would like to save.
5. Select **Save a copy to myTobiiDynavox**.
6. Enter a unique name for the Page Set and (optionally) a description, then select **Save**.
7. A status bar shows the saving progress. When complete, select **Done**.



You may be prompted to log in to myTobiiDynavox.


13.2.2.2 Save Page Set Locally



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the current Page Set.
4. Select the  **Save** icon beside the Page Set that you would like to save.
5. Select **Save a copy to a local file**.
6. Enter a unique name for the Page Set and (optionally) a description, then select **Next**.
7. Select **Browse**. Navigate to the directory where you would like to save your Page Set file, then select **Save**.
8. Select **Save**.
9. A status bar shows the saving progress. When complete, select **Done**.

13.2.3 Share a Copy of a Page Set (Through myTobiiDynavox)



1. Select the **Edit** button.
2. Select the **Page Set** tab.
3. Select the  **Share Page Set** icon beside the Page Set that you would like to share.
4. Select **Share a copy**.

5. Enter a unique name for the Page Set and (optionally) a description, then select **Next**.
6. Enter the myTobiiDynavox username or email account of the person to whom you are sending the Page Set, then select the **+** to add them to the list of recipients. Repeat this process to add additional recipients. When you have added all recipients, select **Share**.
7. A status bar shows the sharing progress. When complete, select **Done**.



If you would like to save a copy of a Page Set locally (to share through USB drive, email, etc.), see section 13.2.2.2 *Save Page Set Locally, page 91*.

13.2.4 Sync Page Set

Sync is an easy way to maintain the same version of a Page Set across multiple devices. Sync stores an up-to-date version of your Page Set in the cloud. When you press the Sync button, you send the changes you made to the Page Set on your local device and also receive any changes that were made on other (Synced) devices*. When all devices have Synced, they all have the same version of the Page Set.

The Sync button in the top bar lets you know when there is an updated version of the Page Set available or when you have local changes to push to the cloud.

*Sync does not support merging changes from multiple devices to the same page in the same Sync. If changes are made to the same page at the same time from multiple devices, the last device to Sync will overwrite with its version of the page. The people involved in editing a Synced Page Set should communicate about which pages they are editing and Sync frequently to avoid Syncing changes to the same page at the same time.



When Syncing across multiple devices or users, the navigation type setting must match for all Syncing devices/users. See section 14.13 *Access Method, page 106*.



Sync works with page sets up to 1 GB. Page sets that are over 1 GB will not Sync.

13.2.4.1 Sync Page Set to myTobiiDynavox

When you Sync a Page Set to myTobiiDynavox, you will have a copy of your Page Set stored on the myTobiiDynavox server. You can use this as a quick and easy Page Set backup system and, if you have other devices running TD Snap®, you can sync the Page Set on those devices as well.

Setting up the Page Set to Sync



1. Select the **Sync** button in the Top Bar. You may be prompted to enter your myTobiiDynavox username and password.
2. Select **Sync**.
3. That's it! Your Page Set is now Synced to your myTobiiDynavox account.



Each time you edit your Page Set, you must select the Sync button in the Top Bar to send those changes to the cloud.

Sync the Page Set on Additional Devices

If a Page Set is already set up to Sync on one of your devices, you can Sync additional devices by following the steps below on each device.



1. Select the **Sync** button in the Top Bar. You may be prompted to enter your myTobiiDynavox username and password.



2. Select the **Download Page Set** icon.
3. Select the Page Set you would like to download and Sync, then select **Download**.
4. When the download is complete, select **Done**.

The downloaded Synced Page Set is automatically set to be the active Page Set.



Each time you edit your Page Set, you must select the Sync button in the Top Bar to send those changes to the cloud and make the updated Page Set available for the other devices to Sync. It is best practice to Sync before you make changes to the Page Set, then Sync again as soon as you are done editing.

13.2.4.2 Invite Someone to Sync with your Page Set

When other myTobiiDynavox users Sync with your Page Set, they are able to make changes to the Page Set on their device(s) and Sync those changes to the cloud. The next time you Sync on your device, you will receive their changes. Likewise, when you make changes to the Page Set and then Sync, those changes will be available to the other users you have allowed to Sync with your Page Set.

Sync cannot merge changes from multiple users who have edited the same page at the same time. In this circumstance, the last user to Sync will overwrite the page with their version. You should Sync immediately before and after making changes to the Page Set and communicate with other users who Sync with your Page Set to avoid editing the same page at the same time.

You should only Sync with people you trust to make appropriate changes to your Page Set.



Each time you edit your Page Set, you must select the Sync button in the Top Bar to send those changes to the cloud and make the updated Page Set available for the other devices or users to Sync.



It is best practice to Sync before you make changes to the Page Set, then Sync again as soon as you are finished editing.



1. Select the **Sync** button in the Top Bar. You may be prompted to enter your myTobiiDynavox username and password.



2. Select the **Share Page Set** icon.
3. Enter the myTobiiDynavox username or email address of the person to whom you are sharing the Page Set, then select the **+** to add them to the list of recipients. Repeat this process to add additional recipients. When you have added all recipients, select **Share**.
4. When the share process is complete, select **Done**. The recipient(s) will receive share alerts via email and in the TD Snap® app.



Sync alerts may take up to an hour to appear after the invitation has been sent. You can check for alerts at any time by selecting the Sync icon.

13.2.4.2.1 Revoke Sync Permissions

You can remove users from Synced Page Sets (that you own) at any time.



1. Select the **Sync** button in the Top Bar.



2. Select the **Share Page Set** icon.
3. Users with Sync permission for the current Page Set are listed in the blue box. To remove a user, select the **X** beside their name/email address, then select **Update**.
4. Select **Done**.

13.2.4.3 Sync with Page Sets Owned by Others

When someone shares a Page Set for syncing with you, the Sync icon in the Top Bar will show an alert icon



. Follow the steps below to accept or decline the invitation.

Sync alerts may take up to an hour to appear after the invitation has been sent.

Accept the Sync Invitation



1. Select the **Sync** button in the Top Bar.




2. Select the **Download Page Set** icon.
3. Select **Browse Page Sets available on your myTobiiDynavox account**.
4. Select the Page Set you would like to download and Sync, then select **Download**.
5. When the download is complete, select **Done**.

Decline the Sync Invitation



1. Select the **Sync** button in the Top Bar.



2. Select the **Download Page Set** icon.
3. Select **Browse Page Sets available on your myTobiiDynavox account**.
4. Select the Page Set you would like to decline, then select the  **Delete** icon.
5. Select **Decline**.

13.2.4.4 Revert Synced Page Set to a Previously Saved Version

You can go back to a previous version of a Synced Page Set. This feature is useful if you have made changes to the Page Set that you want to discard or undo.



1. Select the **Sync** button in the Top Bar.
2. Select **Saved Versions**.
3. Find the Sync date in the list that you would like to restore, then select **Restore**.

13.2.4.5 Overwrite Synced Page Set

Use Overwrite to guarantee that your current version of the Page Set is the version of the Page Set that is also stored in the cloud (regardless of changes that may have been Synced by other users).



1. Select the **Sync** button in the Top Bar.
2. Select **Advanced**.
3. Select **Overwrite**.

13.2.4.6 Pull-only Sync

When you Sync in Pull-only Mode, you will receive Page Set changes (made on other devices) but will not send any Page Set changes made on the current device. To use Pull-only Mode, access to Edit Mode must be restricted with a Passcode. To set up a Passcode and Pull-only Mode, see section 15.1.1 *Passcode, page 119*.

13.3 Page Bundles

You can share a subset of your Page Set (one or more pages of your choosing) as a Page Bundle. Page Bundles contain only the specified pages. If the pages contain buttons with links to pages that do not exist on the recipient device, the links will do nothing.

13.3.1 Export Page Bundle

Export Page Bundle to myTobiiDynavox



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Select **Import/Export Pages**.
4. Select **Export Page Bundle**.
5. Select **To myTobiiDynavox**.
6. Select the pages you would like to include in the Page Bundle. Selected pages display a check mark in the list and appear in the blue box.
The current page is included in the Page Bundle automatically. To remove it or any other page from the Page Bundle, select the X beside the page name in the blue box.
7. When you have added the desired pages to the Page Bundle, select **Next**. The Name the Page Bundle dialog will open.
8. Enter a name for the Page Bundle in the Name field and (optionally) describe the pages in the Description field.
9. Select **Export** to save the Page Bundle to myTobiiDynavox.
10. When the export is complete, select **Done**.

Export Page Bundle to a Local File



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Select **Import/Export Pages**.
4. Select **Export Page Bundle**.
5. Select **To a Local File**.
6. Select the pages you would like to include in the Page Bundle. Selected pages display a check mark in the list and appear in the blue box.
The current page is included in the Page Bundle automatically. To remove it or any other page from the Page Bundle, select the X beside the page name in the blue box.
7. When you have added the desired pages to the Page Bundle, select **Next**. The Name the Page Bundle dialog will open.
8. Enter a name for the Page Bundle in the Name field and (optionally) describe the pages in the Description field.
9. (Windows only) Select **Next**.
10. (Windows only) Select **Browse**. Navigate to the directory where you would like to save your Page Set file, then select **Save**.
11. Select **Export**.
12. When the export is complete, select **Done**.

Export Page Bundle for Sharing (through myTobiiDynavox)



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Select **Import/Export Pages**.
4. Select **Export Page Bundle**.
5. Select **For Sharing**.
6. Select the pages you would like to include in the Page Bundle. Selected pages display a check mark in the list and appear in the blue box.
The current page is included in the Page Bundle automatically. To remove it or any other page from the Page Bundle, select the X beside the page name in the blue box.
7. When you have added the desired pages to the Page Bundle, select **Next**. The Name the Page Bundle dialog will open.
8. Enter a name for the Page Bundle in the Name field and (optionally) describe the pages in the Description field.

9. Select **Next**. The Share Page Bundle dialog will open.
10. Enter the myTobiiDynavox username or email account of the person to whom you are sending the Page Set, then select the **+** to add them to the list of recipients. Repeat this process to add additional recipients. When you have added all recipients, select **Share**.
11. When the export is complete, select **Done**.

13.3.2 Import Page Bundle

Import Page Bundle from myTobiiDynavox

Use this option to import a Page Bundle that you have saved to your own myTobiiDynavox account or a Page Bundle that another myTobiiDynavox user has shared with you.



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Select **Import/Export Pages**.
4. Select **Import Page Bundle**.
5. Select **from myTobiiDynavox**. The Select Page Bundle from myTobiiDynavox dialog will open.
6. Select a Page Bundle from the list.
7. To download the selected Page Bundle, select **Next**.
8. Review the list of pages contained within the Page Bundle. To proceed with the Page Bundle import, select **Import**. To abort Page Bundle import, select **Cancel**.



Page conflicts occur when the page bundle contains one or more pages that already exist on your device, but are



not identical. Select each page conflict icon, then choose whether to keep the existing page or overwrite with the imported page from the page bundle. You must resolve all page conflicts in this manner before you can proceed with the Page Bundle import.

Import Page Bundle from a Local File



1. Select the **Edit** button.
2. Select the **Page** tab.
3. Select **Import/Export Pages**.
4. Select **Import Page Bundle**.
5. Select **from a local file**.
6. Select **Browse**. Navigate to the Page Bundle file (.spb) you would like to import and select it, then select **Open**.
7. Select **Next**. The Review Page Bundle dialog will open.
8. Review the list of pages contained within the Page Bundle. To proceed with the Page Bundle import, select **Import**. To abort Page Bundle import, select **Cancel**.



Page conflicts occur when the page bundle contains one or more pages that already exist on your device, but are



not identical. Select each page conflict icon, then choose whether to keep the existing page or overwrite with the imported page from the page bundle. You must resolve all page conflicts in this manner before you can proceed with the Page Bundle import.

Import Page Bundle and Link

You can import a Page Bundle and create a link all at once using Import and Link!

See section 9.9.6 *Import and Link to Page*, page 61.

14 User Settings

User Settings help customize the user experience in the TD Snap® software. Each user can have his or her own custom settings that are applied when you load the user in the software.

14.1 Change User



Edit button.

1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the current user.
4. Select a user from the Choose a User list.



The user with the check mark is the currently active user.

14.2 Create a New User



Edit button.

1. Select the **Edit** button.
2. Select the **User** tab.
3. Select **New User**.
4. Follow the steps in the User Setup Wizard to create a new user. Select the **X** to cancel new user creation.

14.3 Backup a User

Backup to myTobiiDynavox



Edit button.

1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the arrow to the right of the current user.




4. Select the **Backup** button beside the name of the user you would like to back up.
5. Select **Backup to myTobiiDynavox**.

If you are not currently logged in to your myTobiiDynavox account you will prompted to do so now.

6. Enter a name for your user backup file, then select **Next**.
It may be helpful to include the backup date in the file name.
7. Select **Done**.



Local user backup files can also be moved to myTobiiDynavox manually. Use your web browser to go to myTobiiDynavox.com and log in, then go to *Snap > Backups* and select **Upload Backup**.

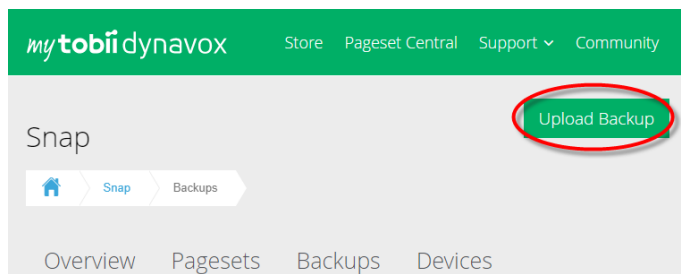

Backup to a Local File



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the arrow to the right of the current user.



4. Select the **Backup** button beside the name of the user you would like to back up.
5. Select **Back up to a local file**.
6. (Windows) **Browse** to the directory where you will save the backup file, then choose **Save**.
(iOS) Enter a name for the backup file.
7. Select **Backup**.

14.4 Restore a User

Restore a user from myTobiiDynavox




1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the arrow to the right of the current user.
4. Select **New User**.
5. Select **Restore Existing User**.
6. If you are not currently logged in to myTobiiDynavox, enter your email and password then select **Next**.
7. Choose a user backup file from the list, then select **Next**.

Restore a user from a local file



On iPadOS, local user backup files that were created on a different device must first be moved into the TD Snap® app through iTunes:

- Open iTunes on your Mac or PC.
- Connect your iPad to your computer using the USB cable that came with your device.
- Select your device in iTunes.

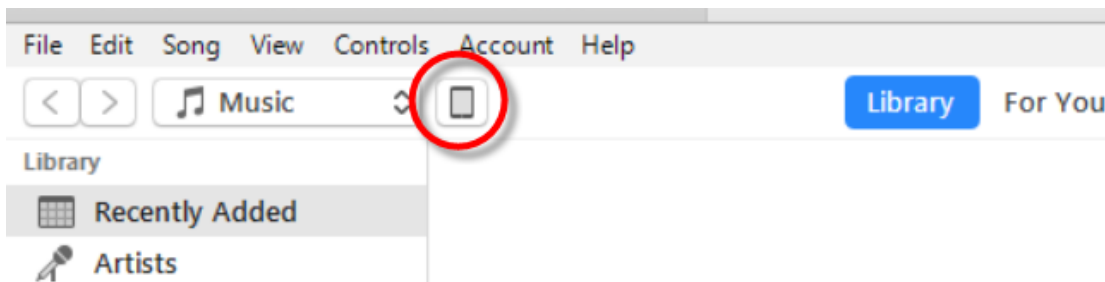


- In the left sidebar, select **Apps**. Then, scroll to the File Sharing section at the bottom of the page.
- Select **TD Snap®**.

File Sharing

The apps listed below can transfer documents between your iPad and this computer.

Apps

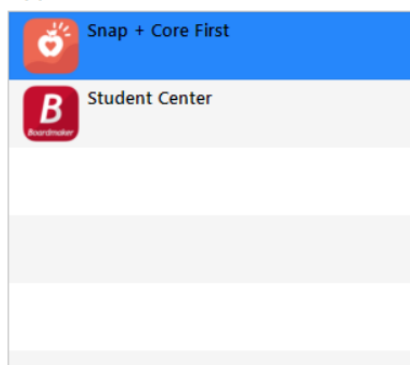

Snap + Core First Documents

DateTimePrefs.data	4 KB	Yesterday 4:12 PM
GlobalSettings.ssf	12 KB	Today 9:40 AM
QA_2017-04-20-17-39-12.sub	264.7 MB	4/20/2017 1:40 PM
Symbols	zero KB	5/31/2017 9:54 AM
UserBackups	545.5 MB	Yesterday 12:54 PM
Users	664.9 MB	Today 9:40 AM
VoiceBundle_v1_0.json	4 KB	5/31/2017 9:27 AM
Voices	244.7 MB	5/31/2017 9:53 AM

- Drag the user backup file(s) into the TD Snap® Documents area.
- Follow the steps below to restore the user on your iPad.



Edit button.

1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the arrow to the right of the current user.
4. Select **New User**.
5. Select **Restore Existing User**.
6. Select **Restore from a local file**.
7. (Windows) Browse to the user backup file and select it, then select **Open**.
(iPadOS) Select a user backup file from the list, then select **Restore User**.

14.5 Edit/Rename a User



Edit button.

1. Select the **Edit** button.
2. Select the **User** tab.




3. Select the **Edit** button beside the name of the user you want to edit.
4. Type in the **Name** field.
5. Select **Save** to save the changes or **Cancel** to discard the changes.

14.6 Delete a User



Deleting a user from the device is a permanent operation. If you think you may need the user later, create a user backup *14.3 Backup a User, page 97* before performing the delete operation.



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the  **Delete** button beside the name of the user you want to delete.
4. Select the red **Delete** button.
5. Select **Delete** to permanently delete the user. Select **Cancel** to return to the settings menu without deleting the user.



You cannot delete the currently active user.

14.7 myTobiiDynavox Account Log In



myTobiiDynavox account log in requires an active internet connection.

Some services in TD Snap®, such as Sync, require you to log in with your myTobiiDynavox account. Select **Log in** to enter your myTobiiDynavox credentials or to create a new myTobiiDynavox account. If you are currently logged in, your myTobiiDynavox user name or email will display in the myTobiiDynavox Account section.

14.8 Voice

14.8.1 Speaking Voice

The Speaking Voice is the voice that reads the contents of the message window and button messages.

The Speaking Voice is the default voice; it is not tied to a specific language. If language-specific voices have been assigned, the language-specific voices will be used instead for those languages. To assign language-specific voices, see *14.10 Language-specific Voices, page 104*.



Illustration 43: User Tab — Speaking Voice



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select **Speaking Voice**.

14.8.1.1 Installed Voices

These are the voices currently available for immediate use on the device. They include both pre-installed voices and voices downloaded to the device.



You may delete voices in the Installed list, but you cannot delete the currently active voice.

14.8.1.2 Additional Voices

See the speech engines and custom voice services that are supported in TD Snap®.

- Custom voices — TD Snap® (full) supports some custom synthetic voice services. Select Log in to start using your custom synthetic voice service with TD Snap®.
- Speech engines — TD Snap® (full) includes one voice engine and access to all of the voices for that voice engine. Additional voice engines are available for purchase in the Store section on the System tab.

14.8.1.3 Personal Voices

TD Snap® supports iOS Personal Voice. The iPadOS setting Allow Apps to Request to Use must be enabled and permission granted to TD Snap®.

To create a Personal Voice, follow the instructions provided by Apple: <https://support.apple.com/en-us/104993>. Note that if you create the personal voice using another Apple device, you must enable the setting Share Across Devices to use the voice on other devices signed in with the same Apple ID. *iOS Settings > Accessibility > Personal Voice > Share Across Devices*

Enable Allow Apps to Request to Use Personal Voice

1. Quit TD Snap®.
2. Go to *iOS Settings > Accessibility > Personal Voice*.
3. Enable **Allow Apps to Request to Use**.
4. Close the iOS Settings app.

Allow TD Snap to use Personal Voice

1. Launch TD Snap®.
2. When prompted to Allow TD Snap® to use Personal Voice, select **OK**.



3. Select the **Edit** button.
4. Select the **User** tab.
5. Select **Speaking Voice**.
6. In the Personal Voices section of the voice list, select your Personal Voice.

14.8.1.4 Downloadable Voices

Download new voices.



You must have an active internet connection to download voices.



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select **Speaking Voice**.
4. In the list of Downloadable voices, select **Download** next to the desired voice.



On iPadOS, voice download pauses when the TD Snap® app is minimized.

14.8.1.5 Voices for Purchase

TD Snap® (full) includes one voice engine and access to all of the voices for that voice engine. Additional voice engines are available for purchase. When you purchase a voice engine, you gain access to all of the 100+ associated voices.

Preview and Purchase Voices



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select **Speaking Voice**.
4. Scroll down to the *Purchasable* section.



5. Select to preview a voice.
Select **Purchase Additional Voices** to buy.

14.8.1.6 Platform Voices

These are the voices provided by your operating system and SAPI5 voices.



Some voices may appear twice if they have both a native platform version and a SAPI5 version.
SAPI5 is Windows only

14.8.2 Voice Rate

The Voice rate is the speed at which words are spoken.



1. Select the **Edit** button.
2. Select the **User** tab.
3. Move the **Voice rate slider** to the left to speak more slowly, or to the right to speak more rapidly.

14.8.3 Voice Pitch

Pitch refers to how high or low the voice sounds.



1. Select the **Edit** button.
2. Select the **User** tab.
3. Move the **Voice pitch slider** to the left to set the pitch lower, or to the right to set the pitch higher.

14.8.4 Pronunciation Exceptions

Pronunciation Exceptions are words or acronyms that you teach the voice to pronounce in a specific way. Pronunciation Exceptions are attached to the voice that is active when the Pronunciation Exceptions are created. If you switch to a different voice and want to use the same pronunciation exceptions, you must import the Pronunciation Exceptions from the previous voice.

Pronunciation Exceptions are also available for language-specific voices. See section *14.10 Language-specific Voices*, page 104.



Pronunciation Exceptions cannot be imported across platforms (Windows ↔ iPadOS).

Create a New Pronunciation Exception



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select **Pronunciation exceptions**.
4. Select **Add Pronunciation Exception**.
The Add Pronunciation Exception dialog will open.

5. In the **Word** field, type the word as it is written.
6. In the **Pronunciation** field, type the word phonetically as you would like it to be pronounced.
To test the pronunciation, select the **Preview** button.
7. Select **Done** to save the Pronunciation Exception. Select **Cancel** to discard your changes and return to User settings.



Acapela voices also accept pronunciation exceptions using the SAMPA phonetic alphabet. In the Pronunciation field, enter `\prn=phonetic codes go here\` but replace “phonetic codes go here” with the SAMPA codes for your word. You must include the quote (") at the end.

To see the phonetic codes and other details about using SAMPA for pronunciation exceptions, select the language of your Acapela voice: [Arabic](#), [Czech](#), [Danish](#), [German](#), [Australian English](#), [Scottish English](#), [British English](#), [American English](#), [Catalan](#), [Latin American Spanish](#), [North American Spanish](#), [Finnish](#), [Canadian French](#), [French](#), [Italian](#), [Japanese](#), [Norwegian](#), [Belgian Dutch](#), [Dutch](#), [Brazilian Portuguese](#), [Portuguese](#), [Swedish](#), [Finland Swedish](#), [North Sami](#), [Turkish](#), [Simplified Chinese](#).

Import a Pronunciation Exception



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select **Pronunciation exceptions**.
4. Select **Import from another voice**.

5. Select the voice that has Pronunciation Exceptions that you would like to import.
Only voices that have Pronunciation Exceptions associated with them will appear in the list.
6. Select **Import** to import all Pronunciation Exceptions associated with the selected voice. Select **Cancel** to return to User settings without importing.



When you have imported Pronunciation Exceptions from another voice, it is recommended that you test them with

the current voice. Select the current voice.



Preview button on a Pronunciation Exception to hear it spoken with the

14.9 Speech Output Device



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select **Speech Output Device**.
4. Set Use default device to **on** to use the Windows default output device. Set Use default device to **off** to see the list of available output devices.
 - Select an output device from the list to use that device for speech output. To preview a device, select the play button for the device.

14.10 Language-specific Voices

You can assign a voice to a language, so that content that is in that language is spoken with correct pronunciation.



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select **Language-specific voices**.
4. Select **Add a voice for another language**.
5. Select **Language**, then select a language from the Voice Language list. Select **New Voice** after you have chosen your language.
6. Select **Voice**, then choose a voice from the Installed section of the Voice list. Select **New Voice** after you have chosen your voice.
7. (Optional) Adjust the Voice rate for the selected language/voice.
8. (Optional) Add Pronunciation exceptions for the voice. See section *14.8.4 Pronunciation Exceptions, page 102*.



Some voices are available as a free download (internet connection required). Select **Download** beside the desired voice. When the download is complete, find and select the voice in the Installed section of the Voice list.

14.11 Google Account

Connect your Google account to use Google Assistant, smart speakers, and smart appliances with TD Snap®.



1. Select the **Edit** button.
2. Select the **User** tab.
3. Scroll down and select **Connect to Google**. Your default web browser will open.
4. Sign in to your Google account.
5. When prompted, select **Allow** to grant permission to TD Snap® to communicate with Google Assistant on your behalf.
6. Return to TD Snap®.



To log out of your Google account in TD Snap®, select **Disconnect**.

14.12 User Preferences

14.12.1 Speech Settings



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the **Preferences** category.
4. Set Always interrupt speech for new speech to **On** (ongoing speech will stop to speak a new command) or **Off** (speech commands will queue so that the current speech will finish, then speak the newer speech command).

14.12.2 Message Window Settings



Illustration 44: Use Symbols in Message Window enabled



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the **Preferences** category.
4. Set the following preferences to either **On** (enabled) or **Off** (disabled):
 - **Use Symbols in Message Window** — When enabled, words and phrases in the Message Window will symbolate.
 - **Always show cursor in the Message Window** — When enabled, the cursor is always visible in the Message Window. When disabled, the cursor is only visible when moved from the default position at the end of the Message Window text.
 - **Speak when inserting into Message Window** — When enabled, each word or phrase will speak as it is entered into the Message Window.
 - **Speak characters** — When enabled, each character will speak as it is entered into the Message Window. To enable “Speak characters,” the setting “Speak when inserting into Message Window” must be enabled.
 - **Clear after speech** — After the Message Window text has been spoken, the text is cleared on the next text insert.
 - **Automatically capitalize** — When enabled, the first letter of the first word of each sentence is capitalized automatically. When disabled, capitalization must be entered manually by the user.

14.12.3 Prediction Settings



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the **Preferences** category.
4. Set Show symbols on Predictor buttons to **On** (Predictor buttons show a symbol for the currently predicted word) or **Off** (Predictor buttons show only text).

14.12.4 Reset Word Prediction

Word prediction in TD Snap® learns from the messages spoken to make personalized word predictions. Resetting word prediction restores the default word prediction in all languages for the current user.



1. Select the **Edit** button.

2. Select the **User** tab.
3. Select the **Preferences** category.
4. Select **Reset Word Prediction**.
5. Select **Reset**.
6. Select **Reset** in the confirmation window.

14.12.5 Sync Settings



Edit button.

1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the **Preferences** category.
4. Set Enable Sync in Use Mode to **On** (Sync button is visible in the Top Bar in both Use Mode and Edit Mode) or **Off** (Sync button is hidden in the Top Bar in Use Mode, but visible in Edit Mode).

14.13 Access Method

Touch

Objects are activated by touching the object on the screen with a finger or, when using a mouse, by clicking on the object with the mouse cursor. This access method is suitable for users who are able to touch the screen quickly and accurately or control and left click with a traditional computer mouse. Objects are activated as soon as they are touched or clicked.

Touch Enter

Objects are activated by physically touching and holding on the object on the screen for a minimum amount of time or, when using a mouse, by clicking and holding on the object for a minimum amount of time. The hold time is set by the user. This access method is useful for users who may touch or click unintended objects accidentally.

Touch Exit

This method is similar to Touch Enter, but a selected object is activated when the selection is released. This method allows the user to maintain contact with the touch screen without accidentally making a selection. This means that the user may slide a finger or a pointer across the touch screen, or hold down on a mouse button while moving the cursor. A selection will not be made until the finger or pointer lifts off the touch screen, or when the mouse button is released. This makes the Touch Exit selection method ideal for a person who may find it easier to drag a finger or a pointer across the touch screen while moving from selection to selection.

Auditory Touch

The user touches the screen to activate button audio cues that help them identify each button so that they can confidently make selections. The access method settings can be configured to either use touch and drag to hear audio cues, then lift the finger from the screen to select or touch once to hear the audio cue then touch again to select. This access method is useful for users who have low vision or those who benefit from hearing audio cues.

Mouse Dwell

The Mouse Dwell access method requires that a computer mouse, track ball, or head mouse control the cursor on the screen. An object is selected when the cursor pauses on an object for a specified amount of time or when the user activates a switch. This access method is a good option for a person who has the physical ability to maneuver a mouse, but who lacks the ability to press down on the mouse button to make selections.

Eye Gaze

This method allows the user to control TD Snap® using only their eyes. Selections are made either by fixating the gaze on an object for a specified amount of time (dwell) or activating a switch. Gaze Interaction requires an eye gaze device from Tobii Dynavox.

Scanning

When Scanning is the active selection method, objects on the screen highlight in a specific pattern. Scanning requires a switch or keyboard key to make a selection when the desired item is highlighted. This access method is intended for individuals whose motor skills may prevent them from effectively using direct selection methods.



To learn more about access methods, watch the Access Methods video found in *System — Help & Tutorials*.

Hold Time

The Hold Time is the minimum amount of time needed to select and hold on an object in order to activate it.

Connect Multiple Taps

This setting senses multiple taps that occur within a specified time frame and connects them so that they register as one long tap and hold. This setting is useful if the user has difficulty holding a selection consistently.

When Connect Multiple Taps is enabled, you may choose the time frame in which taps are connected. For example, when set to Medium, all taps that occur within a 0.3 second interval (starting with the first tap) will register as a single long tap and hold.

 
Delay Between Selections

This setting allows you to set a period of time where TD Snap® ignores selection attempts after a selection has been made. Enabling Delay Between Selections can help prevent unintended repeat selections in the software.

When Delay Between Selections is enabled, you may choose the time frame in which selection attempts are ignored after a selection has been made. For example, when set to Medium, TD Snap® will ignore all selection attempts that occur within 2 seconds after a selection.

Highlighting

Choose your preferred highlight type and color. Highlight is a visual cue that shows when an object is selected. The highlight stops when the object has been activated.



1. No highlight
2. Outline
Options: Color, Highlight Thickness
3. Overlay
Option: Color
4. Invert

Selection feedback sound

Play a sound when a non-speaking button is selected.

Accessible top bar navigation buttons

When enabled, the Back, Home, and Dashboard buttons in the Top Bar are accessible using the touch enter or touch access methods. When disabled, these buttons are only accessible using the touch access method.

14.13.4 Touch Exit Options

When using Touch Exit, a selected object is activated when the selection is released. This method allows the user to maintain contact with the touch screen without accidentally making a selection. This means that the user may slide a finger or a pointer across the touch screen, or hold down on a mouse button while moving the cursor. As the cursor moves across the buttons, the currently selected button will highlight. A button is not activated until the finger or pointer lifts off the touch screen, or when the mouse button is released. This makes the Touch Exit selection method ideal for a person who may find it easier to drag a finger or a pointer across the touch screen while moving from selection to selection. It is also useful for people who benefit from visual feedback to make accurate selections.

Hold Time

The Hold Time is the minimum amount of time needed to select and hold on an object in order to activate it on release.

Connect Multiple Taps

This setting senses multiple taps that occur within a specified time frame and connects them so that they register as one long tap and hold. This setting is useful if the user has difficulty holding a selection consistently.

When Connect Multiple Taps is enabled, you may choose the time frame in which taps are connected. For example, when set to Medium, any and all taps that occur within a 0.3 second interval (starting with the first tap) will register as a single long tap and hold.

 
Delay Between Selections

This setting allows you to set a period of time where TD Snap® ignores selection attempts after a selection has been made. Enabling Delay Between Selections can help prevent unintended repeat selections in the software.

When Delay Between Selections is enabled, you may choose the time frame in which selection attempts are ignored after a selection has been made. For example, when set to Medium, TD Snap® will ignore all selection attempts that occur within 2 seconds after a selection.

Highlighting

Choose your preferred highlight type and color. Highlight is a visual cue that shows when an object is selected. The highlight stops when the object has been activated.



1. No highlight
2. Outline
Options: Color, Highlight Thickness
3. Overlay
Option: Color
4. Invert

Audio Feedback

When Audio Feedback is enabled, the user will hear an object's audio cue when it is highlighted. An audio cue is a word or short message that helps identify an object. You can select a different voice for Audio Feedback, as well as a custom voice rate, and pronunciation exceptions.

Selection Feedback Sound

Play a sound when a non-speaking button is selected.

Accessible Top Bar Navigation Buttons

When enabled, the Back, Home, and Dashboard buttons in the Top Bar are accessible using the touch exit or touch access methods. When disabled, these buttons are only accessible using the touch access method.

14.13.5 Auditory Touch Options

With Auditory touch, the user touches the screen to activate button audio cues that help them identify each button so that they can confidently make selections. The access method settings can be configured to either use touch and drag to hear audio cues, then lift the finger from the screen to select or touch once to hear the audio cue then touch again to select. This access method is useful for users who have low vision or those who benefit from hearing audio cues.

Hold Time

The Hold Time is the minimum amount of time needed to select and hold on an object in order to activate it.

Connect Multiple Taps

This setting senses multiple taps that occur within a specified time frame and connects them so that they register as one long tap and hold. This setting is useful if the user has difficulty holding a selection consistently.

When Connect Multiple Taps is enabled, you may choose the time frame in which taps are connected. For example, when set to Medium, all taps that occur within a 0.3 second interval (starting with the first tap) will register as a single long tap and hold.

 
Delay Between Selections

This setting allows you to set a period of time where TD Snap® ignores selection attempts after a selection has been made. Enabling Delay Between Selections can help prevent unintended repeat selections in the software.

When Delay Between Selections is enabled, you may choose the time frame in which selection attempts are ignored after a selection has been made. For example, when set to Medium, TD Snap® will ignore all selection attempts that occur within 2 seconds after a selection.

Highlighting

Choose your preferred highlight type and color. Highlight is a visual cue that shows when an object is selected. The highlight stops when the object has been activated.



1. No highlight
2. Outline
Options: Color, Highlight Thickness
3. Overlay
Option: Color
4. Invert

Audio Feedback

Configure the voice used to speak audio cues. An audio cue is a word or short message that helps identify an object. You can select the voice for Audio Feedback, language-specific feedback voices, as well as custom voice rate, pitch, and pronunciation exceptions.

Selection Feedback Sound

Play a sound when a non-speaking button is selected.

Play audio cue on first selection

When enabled, the first selection highlights the button and plays the audio cue; the second selection activates the button. When disabled, tap and hold (or tap and drag) plays the audio cue; releasing the tap (lifting the finger from the screen) activates the button.

Accessible Top Bar Navigation Buttons

When enabled, the Back, Home, and Dashboard buttons in the Top Bar are accessible using the auditory touch our touch access methods. When disabled, these buttons are only accessible using the touch access method.

14.13.6 Mouse Dwell Options

The Mouse Dwell access method requires that a computer mouse, track ball, or head mouse control the cursor on the screen. An object is selected when the cursor pauses on an object for a specified amount of time or when a switch is activated.

Selection Type

Dwell


- Selections are made by holding the cursor on an object for a specified length of time (dwell time).
 - Dwell time — set the amount of time that the cursor must remain on an object in order to select it.

 
Switch

- Selections are made by activating a switch while the cursor is on the desired object.
 - Switch input — set the keyboard key that acts as the switch input.

Highlighting

Choose your preferred highlight type and color. Highlight is a visual cue that shows when an object is selected. The highlight stops when the object has been activated.

 For this access method, “No highlight” is not an option.



1. No highlight
2. Outline
Options: Color, Highlight Thickness
3. Overlay
Option: Color
4. Invert

Audio Feedback

When Audio Feedback is enabled, the user will hear an object's audio cue when it is highlighted. An audio cue is a word or short message that helps identify an object. You can select a different voice for Audio Feedback, language-specific feedback voices, as well as a custom voice rate, and pronunciation exceptions.

Show Pause Access Method Button in Use Mode

When enabled, a Pause/Resume Access Method button appears in the Top Bar in Use Mode. When disabled, the button is hidden.

Selection Feedback Sound

Play a sound when a non-speaking button is selected.

Accessible Top Bar Navigation Buttons

When enabled, the Back, Home, and Dashboard buttons in the Top Bar are accessible using the mouse dwell or touch access methods. When disabled, these buttons are only accessible using the touch access method.

14.13.7 Eye Gaze Options

This access method allows the user to control TD Snap® using only their eyes. Selections are made either by fixating the gaze on an object for a specified amount of time (dwell) or by activating a switch. The eye gaze access method requires an eye gaze device from Tobii Dynavox.

Selection Type

Dwell

- Allows the user to select by fixating the gaze on an object for a set amount of time (dwell time).
 - Dwell time — set the amount of time that the gaze must remain on an object in order to select it.

- Look away before reselecting — when enabled, the user is unable to make multiple selections on the same target unless they look away from the last selected region between selections. This setting is helpful for users who accidentally select targets repeatedly.

Switch

- The user directs the highlight on the screen using their gaze, then make selections using a switch.
 - Switch input — set the keyboard key that acts as the switch input.
Switch selection with a keyboard key or Bluetooth switch may not work outside the TD Snap® software.
 - Switch press duration — the amount of time that the switch must be activated to select the currently highlighted object.
 - Switch repeat duration — the amount of time the user must wait between switch activations. Before this time is met, any additional switch activations are ignored.

Gaze Feedback

Gaze Feedback is a visual cue that shows the user where their gaze is registering on the screen, how consistently, and for how long.

Set the style, color, and size of your Gaze Feedback.

Delay After Page Change

After going to a new page, selection cannot occur for the set period of time. This setting helps prevent accidental selections when a page first opens.

Windows Control Type

Set the mode of desktop access for navigation outside of the TD Snap® software. Not available on all devices.

- Gaze Selection — this is a two-step selection method, which reduces the risk of unwanted clicks.
- Mouse Emulation — emulate and control a standard PC mouse pointer on the screen.

Audio Feedback

When Audio Feedback is enabled, the user will hear an object's audio cue when it is highlighted. An audio cue is a word or short message that helps identify an object. You can select a different voice for Audio Feedback, as well as a custom voice rate, and pronunciation exceptions.

Show Pause Access Method Button in Use Mode

When enabled, a Pause/Resume Access Method button appears in the Top Bar in Use Mode. When disabled, the button is hidden.

Selection Feedback Sound

Play a sound when a non-speaking button is selected.

Accessible Top Bar Navigation Buttons

When enabled, the Back, Home, and Dashboard buttons in the Top Bar are accessible using the eye gaze or touch access methods. When disabled, these buttons are only accessible using the touch access method.

Offscreen Pause

When enabled, eye tracking users can look below the screen to open a menu containing a Pause/Resume Eye Gaze button.

14.13.8 Scanning Options

When Scanning is the active selection method, objects on the screen highlight in a specific pattern. The user will activate a switch or keyboard key to make a selection when the desired item is highlighted. This access method is intended for individuals whose motor skills may prevent them from effectively using direct selection methods.

Scan Type

The Scan Type setting determines how the scan highlight advances (automatically or through switch input) and how selections are made.

1 Switch Autoscan

- When using 1 Switch Autoscan, the software will scan the items on the page using the designated scan behavior. The user makes selections using a switch.
 - Switch input — choose either a screen tap or keyboard key.
 - Speed — set how quickly the autoscan progresses.
 - Transition time — set the length of time between making a selection and autoscan continuing.
 - Scan after — select when autoscan should restart: Selection, Page Change, Speaking.
 - Scan After Speaking Begins has three options: Wait for switch activation (resume scanning after speaking begins only when the switch has been activated), Immediately (continue scanning regardless of speech), Wait for speech to finish (resume scanning after speech has finished).
- If Audio Feedback is enabled, audio feedback is not heard if scanning occurs while other speech is playing.
- Speak full audio cue before advancing — when enabled, long audio cues delay the scanning highlight advancement until the full audio cue has been spoken.

2 Switch Step Scan

- When using 2 Switch Step Scan, the user will trigger one switch to progress the scan highlight and a second switch to make selections.
 - Switch 1 Input — choose either a screen tap or keyboard key to progress the scan highlight.
 - Switch 2 Input — choose either a screen tap or keyboard key to make selections.
- Switch 1 Input and Switch 2 Input must be different.

1 Switch Scan

- When the 1 Switch scanning option is active, the user will trigger the switch to advance the highlight (each selection advances the highlight by one interval). To select the highlighted object, the user will select the switch and maintain the selection for the specified Pause Time.
 - Switch 1 Input — choose either a screen tap or keyboard key to progress the scan highlight.
 - Pause Time — the minimum amount of time needed to select and hold on an object in order to activate it.

1 Switch Dwell Scan

- When the 1 Switch Dwell scanning option is active, the user will trigger the switch to advance the highlight (each selection advances the highlight by one interval). To select the highlighted object, the user will pause (do nothing) for the specified Pause Time.
 - Switch 1 Input — choose either a screen tap or keyboard key to progress the scan highlight.
 - Pause Time — the minimum amount of time needed to dwell on an object in order to activate it.

Inverse Scan

- An individual using Inverse scanning will hold down the switch to advance the scanning highlight (highlight continues to advance as long as the switch is held down). When the individual releases the switch, the highlighted object will be selected.
 - Switch 1 Input — choose either a screen tap or keyboard key to progress the scan highlight.
 - Speed — how fast the scanning highlight advances (while the switch is held).
 - Speak full audio cue before advancing — when enabled, long audio cues delay the scanning highlight advancement until the full audio cue has been spoken.

Scan Behaviors

The scan behavior is the sequence in which screen objects are highlighted for selection. This section also contains settings related to what kinds of objects are scanned.

Pattern

- Row/Column — Scan rows from the top down. When a row is selected, the items in the row are scanned from left to right.
- Column/Row — Scan columns from left to right. When a column is selected, the items in the column are scanned from top to bottom.
- Linear — Objects are scanned individually from left to right, top to bottom.

Number of Passes

- **Passes** — Set how many times the scan will scan a row or column without a selection being made.
- **After Final Pass** — Choose what happens when autoscan has completed the designated number of passes (not available for infinite passes).

Group Scan

- When enabled, the page buttons are scanned in groups.

Scan groups must be pre-defined. See section 9.16 *Scan Groups*, page 70.

Scan from Last Selection

- When enabled, scanning will resume on the page where the last selection was made. When disabled, after a selection is made, scan resumes at the top of the page.

Scan Top Bar

- When enabled, the scan-accessible items in the Top Bar (Back, Home, and Dashboard) are scanned. When disabled, the top bar items are not scanned.



The Search, Sync, Pause Access Method, and Edit buttons in the Top Bar are not scanned. They are accessible by touch at any time.

 
Scan Blank Buttons

- When enabled, buttons that do not have any content are scanned. When disabled, blank buttons do not scan.

Highlighting

Choose your preferred highlight type and color. Highlight is a visual cue that shows when an object is scanned. The highlight stops when the object has been activated.

For this access method, “No highlight” is not an option.



1. No highlight
2. Outline
Options: Color, Highlight Thickness
3. Overlay
Option: Color
4. Invert

Hold Time

The Hold Time is the minimum amount of time needed to select and hold on an object in order to activate it.

Delay Between Selections

Delay Between Selections helps prevent accidental repeat switch selections. When a switch selection is made, the next switch selection cannot occur until the time set in Delay Between Selections has passed. If the switch is triggered while the delay time is in effect, the countdown is reset.

Audio Feedback

When Audio Feedback is enabled, the user will hear an object's audio cue when it is highlighted. An audio cue is a word or short message that helps identify an object. You can select a different voice for Audio Feedback, language-specific feedback voices, as well as a custom voice rate, pitch, and pronunciation exceptions.

Zoom

When enabled, screen objects zoom as they are scanned. When scanning multiple objects (rows or columns), the object that is first in the pattern is zoomed and the other objects are highlighted as specified by the Highlight Style setting.

Show Pause Access Method Button in Use Mode

When enabled, a Pause/Resume Access Method button appears in the Top Bar in Use Mode. When disabled, the button is hidden.


Selection Feedback Sound

Play a sound when a non-speaking button is selected.

14.14 Data Tracking

14.14.1 Track Button Usage

When Track button usage is enabled, information about button use in TD Snap® is recorded. This information includes the time of the button use event, message, language, Page Set, page, grid position, Access Method (e.g. gaze interaction), modeling mode, and whether the button spoke or inserted into the Message Window.

 Button usage information is not recorded when in Edit Mode.



Enable Track button Usage



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the **Data Tracking** category.
4. Set **Track button usage** to On.
5. Read the data privacy warning and select **Yes** to enable Track button usage. If you do not want to enable Track button usage, select No.



You can view button use counts right in the TD Snap® software by enabling Show button usage counts and/or Show modeling counts. For more information see sections *14.14.3 Show Button Usage Counts, page 116* and *14.14.4 Show Modeling Counts, page 117*. Further data visualizations are available in the **Usage Reports** section of your myTobiiDynavox.com account.

Button usage tracking, when enabled, happens whenever the TD Snap® software is used. For accurate usage data, it is important to differentiate between button selections made by the user and modeling selections made by a caregiver or communication partner. If the user interacts with TD Snap® through a non-touch access method (Mouse Dwell, Gaze Interaction, or Scanning), any button selections made using touch are automatically recorded as modeling. If the user interacts with TD Snap® through a touch—based Access Method, then the caregiver must enable Modeling mode before making any modeling selections, then disable it again before the user makes their next selection.



If Track button usage is enabled and the user has a touch-based Access Method, make sure that Show top bar button is also enabled. See section *14.14.2 Show Top Bar Button, page 116*.



When you share a Page Set that has usage data, you will have the option to include or not include the usage information.

Enable Modeling Mode (only necessary if Access Method is set to Touch, Touch Enter, Touch Exit, or when using Screen as a switch)



If your current Access Method includes the Pause Access Method button in the top bar, pause the Access Method



prior to beginning the steps below. Unpause the Access Method Modeling mode.



when you exit



1. Select the **Data Tracking** button in the Top Bar.

To enable the Data Tracking button in the Top Bar, see section 14.14.2 Show Top Bar Button, page 116.

2. Enable **Modeling mode**.

When you are finished modeling, remember to disable Modeling mode.



You can also toggle Modeling mode on and off by doing a long tap (tap and hold) on the Data Tracking button in

the top bar. When Modeling mode is enabled, the Data Tracking button looks like this



. When

Modeling mode is disabled, the Data Tracking button looks like this




14.14.2 Show Top Bar Button



When enabled, the

Data Tracking button appears in the Top Bar. The Top Bar Data Tracking button gives quick access to the following settings: Modeling mode, Show button usage counts, Show modeling counts, and Manage data.

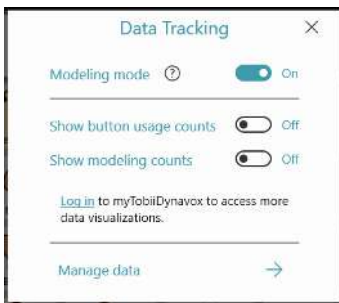

14.14.3 Show Button Usage Counts

When enabled, buttons show a white badge with the number of times the button was selected by the user (while Track button usage was enabled) in the specified time frame. The default time range is All.

Enable Show Button Usage Counts (via User Settings)



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the **Data Tracking** category.
4. Set **Show button usage counts** to On.



To change the usage count time range, select **Time Range**, then use the drop down menu or beginning and end date/time fields.

Enable Show Button Usage Counts (via Data Tracking Top Bar Button)



To enable the Data Tracking button in the Top Bar, see section *14.14.2 Show Top Bar Button, page 116*.



1. Select the **Data Tracking** button in the Top Bar.
2. Enable **Show button usage counts**.



To enable the Data Tracking button in the Top Bar, see section *14.14.2 Show Top Bar Button, page 116*.



To change the usage count time range, select **Time Range**, then use the drop down menu or beginning and end date/time fields.

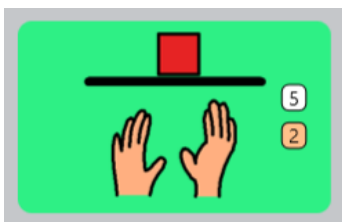


Illustration 45: Button showing usage count (white) and modeling count (orange).

14.14.4 Show Modeling Counts

When enabled, buttons show an orange badge with the number of times the button was selected in modeling mode (while Track button usage was enabled) in the specified time frame. The default time range is All.

Enable Show Modeling Counts (via User Settings)



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the **Data Tracking** category.
4. Set **Show modeling counts** to On.



To change the modeling count time range, select **Time Range**, then use the drop down menu or beginning and end date/time fields.

Enable Show Modeling Counts (via Data Tracking Top Bar button)



To enable the Data Tracking button in the Top Bar, see section *14.14.2 Show Top Bar Button, page 116*.



1. Select the **Data Tracking** button in the Top Bar.
2. Enable **Show modeling counts**.



To change the modeling count time range, select **Time Range**, then use the drop down menu or beginning and end date/time fields.

14.14.5 Manage Data

Reset button usage counts and modeling counts to zero for the current page, the Message Bar buttons, Toolbar buttons, or the entire Page Set.



Resetting button usage counts does not delete past usage data. If you would like to permanently delete all usage data that has been stored on your mytobiidynavox account, use a web browser to go to mytobiidynavox.com > *Snap > Usage Reports*.

Reset Usage Counts (via User Settings)



1. Select the **Edit** button.
2. Select the **User** tab.
3. Select the **Data Tracking** category.
4. Select **Manage data**.
5. Select the area in which you would like to reset button usage counts and modeling counts to zero.
6. Select **Reset** to reset usage and modeling counts for the chosen area. To cancel the reset operation, select Cancel.

Reset Usage Counts (via Data Tracking Top Bar button)



To enable the Data Tracking button in the Top Bar, see section *14.14.2 Show Top Bar Button, page 116*.



1. Select the **Data Tracking** button in the Top Bar.
2. Select **Manage data**.
3. Select the area in which you would like to reset button usage counts and modeling counts to zero.
4. Select **Reset** to reset usage and modeling counts for the chosen area. To cancel the reset operation, select Cancel.

15 System Settings

15.1 Preferences

15.1.1 Passcode

When enabled, a four-digit passcode is required to access in-app purchases and the specified features in the Top Bar. Enabling the passcode can help prevent unauthorized changes to the Page Set and settings.

Enable Passcode



Edit button.

1. Select the **Edit** button.
2. Select the **System** tab.
3. Select **Passcode**.
4. Set the Use Passcode toggle switch to **On**.
5. Enter a four-digit passcode that only you know and is not easy to guess.

6. Enter the passcode again to verify it.
7. When you enable Use Passcode, passcode is enabled for in-app purchases, Edit Mode, Sync, Data Tracking, Search Mode, Lightbulb, and the Top Bar navigation buttons (Back, Home, and Dashboard) by default. Toggle the setting to Off for any of these features if you would like them to be accessible without a passcode.
If Passcode is enabled and the Sync feature passcode is disabled, then Sync will operate in Pull-only mode. When you Sync in Pull-only Mode, you will receive Page Set changes (made on other devices) but will not send any Page Set changes made on the current device.
8. When you exit Edit mode, the passcode will be required to access in-app purchase and any of the features toggled on in the passcode preferences menu.



If you already have passcode enabled, you can reset the passcode by selecting the



Edit button.

If you forget your passcode, use the master passcode (0520) to access Edit Mode and immediately reset your passcode.

15.1.2 Screen Setting (Windows only)

When Full Screen Mode is enabled, the TD Snap® software will fill the entire screen on your device. When Full Screen Mode is disabled, the TD Snap® software will run inside a resizable window.

15.1.3 Edit Mode Language

Choose a language for the Edit Mode interface.

15.2 Device



The Device section features are present on Tobii Dynavox I-13, I-16, and TD Pilot devices only.

15.2.1 Partner Window Settings

The Partner Window is a screen on the back of the Tobii Dynavox I-13, I-16, and TD Pilot devices. The Partner Window informs the conversation partner that the user is preparing to speak and displays text for the partner to read.



1. Select the **Edit** button.
2. Select the **System** tab.
3. Select **Device**.
4. Make a selection in Partner Window Options:
 - **Show Message Window text** — display the Message Window text in the Partner Window in real time.
 - **Show text being spoken** — display text in the Partner Window only when it is spoken. While composing in the Message Window, the Partner Window will display a series of dots to indicate that the user is preparing their message. When the Message Window is spoken, the Partner Window scrolls the text as it is spoken.

The Partner Window displays only text. It does not display symbols.
5. Make a selection in Partner Window Indicator Style:
 - **Mirror** — display a miniature version of the Partner Window in the Top Bar.
 - **Icon** — display an icon when the Partner Window is powered on. Hide the icon when the Partner Window is powered off.
6. Set the Partner Window Power toggle to **On** or **Off**. When the Partner Window Power is set to Off, it does not display any text.



You can also use button Actions to control the Partner Window screen brightness and toggle the Partner Window on and off. See sections 9.6.2 *Active Content*, page 39 and 9.7 *Button Actions*, page 47.

15.3 Store

Purchase items and manage your Activation Key.

15.3.1 Make a Purchase




1. Select the **Edit** button.
2. Select the **System** tab.
3. Select **Store**.
4. Select **Buy** on the item you would like to purchase.
5. Complete your secure transaction.



An internet connection is required to make purchases in the store.

15.3.2 Restore Purchases (Windows only)

If your purchased items are not showing up in the Windows version of the TD Snap® app, restore your purchases with your Activation Key.

 An internet connection is required to restore purchases.



1. Select the **Edit** button.
2. Select the **System** tab.
3. Select **Store**.
4. Select **Restore Purchases**.
5. Enter your **Activation Key**.
6. Select **Done**.

15.3.3 Deactivate Key (Windows only)

Remove your Activation Key from the current Windows device so that it can be used on another device.



1. Select the **Edit** button.
2. Select the **System** tab.
3. Select **Store**.
4. Select **Deactivate Key**. A confirmation dialog will open.
5. Confirm that you would like to deactivate your key on this device.

15.4 Symbol Sets

15.4.1 Search Settings

When Safe Symbol Search is enabled, explicit symbols will not appear in symbol searches, the (symbolated) message window, or Search Mode. When Safe Symbol Search is disabled, symbol searches, message window symbols, and Search Mode will use all available symbols.


15.4.2 Installed and Downloadable Symbols


The Symbol Sets listed in the Installed Symbols section are the Symbol Sets currently installed and available on your device.

To delete an installed Symbol Set, select the  **Delete** button, then choose **Delete** to confirm.

 The Snap Core Symbols cannot be deleted.

The Symbol Sets listed in the Downloadable Symbols section are the free Symbol Sets that are not currently installed on your device. To download and install a free Symbol Set, select **Download** beside the desired Symbol Set.

 You must have an active internet connection to download Symbol Sets.

 Some third-party Symbol Sets are only available for purchase through the Store. See section *15.3 Store, page 120*.

15.4.3 Reorder Symbol Sets


The order of symbol search results is determined by the order of symbol sets in the Installed Symbols list. If, for example, you mostly use high contrast symbols in your Page Set, you could move the High Contrast symbol set to the top of the list of Installed Symbols list to prioritize high contrast symbols (when available) in symbol searches.



1. Select the **Edit** button.
2. Select the **System** tab.
3. Select the **Symbol Sets** category.



4. Select and hold on the handle of a symbol set in the Installed Symbols list.
5. Drag the symbol set to a new position in the list.

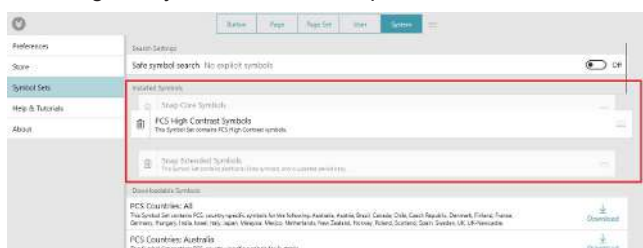

15.5 Help & Tutorials

15.5.1 Videos

Watch videos to learn more about using TD Snap®.

15.5.2 Pathways for Core First

	Pathways for Core First is the free app that teaches you the most powerful methods for using TD Snap® Core First for communication, literacy, behavior supports, and more! Follow the links in this section to learn more.
--	--

15.5.3 Quick Tour

Restart the quick tour to learn your way around the TD Snap® software.

15.5.4 External Help

Access the User's Manual, Training Cards, additional videos, the online Knowledge Base, and the End User License Agreement.

15.6 About

TD Snap® version information.

15.6.1 Send Feedback

Use the Send Feedback button to report a problem with TD Snap® or submit a feature request to the development team. This is not a live chat or technical support line.

15.6.2 Software Updates



Only valid for Windows

The TD Snap® app updates automatically at regular intervals.

To manually check for a new version and download the update:



1. Select the **Edit** button.
2. Select the **System** tab.
3. Select the **About** category.
4. If an update is available, it will appear below the EAN number. To get the updated version, select **Install Update**.

Copyright © Tobii Dynavox AB (Publ). Not all products and services offered in each local market. Specifications are subject to change without prior notice. All trademarks are the property of their respective owners.

Support for Your Tobii Dynavox Device

Get Help Online

See the product-specific Support page for your Tobii Dynavox device. It contains up-to-date information about issues and tips & tricks related to the product.
Find our Support pages online at: <https://www.tobiidynavox.com/pages/product-support>

Contact Your Solution Consultant or Reseller

For questions or problems with your product, contact your Tobii Dynavox solution consultant or authorized reseller for assistance. They are most familiar with your personal setup and can best help you with tips and product training. For contact details, visit <https://www.tobiidynavox.com/pages/contact-us>.